



## Instructions and Parts List

# 3M-Matic<sup>TM</sup>

## 800a3

Type 29400

## Adjustable

## Case Sealer

## with

# AccuGlide<sup>TM</sup> II

## Taping Heads

Serial No. \_\_\_\_\_  
For reference, record machine serial number here.



### Important Safety Information

Read "Safety Labels", pages 3-5 and also operating "Warnings", page 15 BEFORE INSTALLING OR OPERATING THIS EQUIPMENT.

### Spare Parts

It is recommended you immediately order the spare parts listed on page 35. These parts are expected to wear through normal use and should be kept on hand to minimize production delays.

3M Masking and Packaging Systems Division

3M Center Bldg. 220-8W-01  
St. Paul, MN 55144-1000

"3M-Matic" and "AccuGlide" are Trademarks of 3M, St. Paul, MN 55144-1000

Litho in U.S.A.

© 3M 1996 44-0009-1882-9(A46.0225)R1

## Replacement Parts and Service Information

---

### To Our Customers:

This is the 3M-Matic™/AccuGlide™/Scotch™ brand equipment you ordered. It has been set up and tested in the factory with "Scotch" brand tapes. If technical assistance or replacement parts are needed, call or Fax the appropriate number listed below.

Included with each machine is an Instructions and Parts List manual.

#### Technical Assistance:

3M-Matic™ Helpline – 1-800/328 1390. Please provide the customer support coordinator with the machine number, machine type/model and serial number. If you have a technical question that does not require an immediate response, you may Fax it to 715/381 0248.

#### Replacement Parts and Additional Manuals

Order parts by part number, part description and quantity required. Also, when ordering parts and/or additional manuals, include machine name, number and type. A parts order form is provided at the back of this manual.

##### **3M/Tape Dispenser Parts**

**241 Venture Drive  
Amery, WI 54001-1325**

**1-800/344 9883  
FAX# 715/268 8153**

**Minimum billing on parts orders will be \$25.00. Replacement part prices available on request.**

**\$10.00 restocking charge per invoice on returned parts.**

**Note : Outside the U.S., contact the local 3M subsidiary for parts ordering information.**



**3M Packaging Systems Division**

**3M Center, Building 220-8W-01  
St. Paul, MN 55144-1000**

"3M-Matic", "AccuGlide" and "Scotch" are trademarks  
of 3M, St. Paul, Minnesota 55144-1000

Printed in U.S.A.

© 3M 1999 44-0009-1851-4(E79.0)



# Instruction Manual

800a3, Type 29400  
Adjustable Case Sealer

This instruction manual is divided into two sections as follows:

- Section I** Includes all information related to installation, operation and parts for the case sealer.  
**Section II** Includes specific information regarding the AccuGlide™ II STD 3 Inch Taping Heads.

---

## Table of Contents

Page

---

### Section I – 800a3 Adjustable Case Sealer

Description .....	1
Equipment Warranty and Limited Remedy .....	2
800a3 Contents .....	2
Safety Labels .....	3 - 5
Specifications .....	7 - 9
Installation and Set-Up .....	11 - 13
Receiving and Handling .....	11
Machine Set-Up .....	11 - 13
Packaging and Separate Parts .....	11 - 12
Tape Drum Bracket .....	12
Conveyor Bed Height .....	12
Tape Width .....	12
Tape Leg Length .....	12
Box Size Capacity of Case Sealer .....	13
Drive Belt Height .....	13
Electrical Connection and Controls .....	13
Initial Start-Up of Case Sealer .....	13
Operation .....	14 - 18
Operation "Warnings" .....	15
Electrical On/Off Switch .....	15
Tape Loading/Threading .....	15
Box Size Set-Up .....	16 - 17
Adjust Drive Belts .....	16
Adjust Upper Taping Head .....	16
Position Compression Rollers .....	17
Run Boxes to Check Adjustment .....	17
Box Sealing .....	18

## Table of Contents (Continued)


## Page

Maintenance .....	19 - 21
Cleaning .....	19
Lubrication .....	19
Circuit Breaker .....	20
Blade Replacement, Taping Head .....	20
Drive Belts .....	20 - 21
Replacement/Tension Adjustment .....	20 - 21
Adjustments .....	23
Drive Belt Tension .....	23
Taping Head Adjustments .....	23
Special Set-Up Procedure .....	25 - 30
Changing Tape Leg Length .....	25
Case Sealer Frame .....	25
Taping Heads .....	25
Drive Belt Assembly Height .....	26
Disassemble .....	26
Reassemble .....	26
Box Height Range .....	27 - 30
Troubleshooting .....	31
Troubleshooting Guide .....	31
Electrical Diagram .....	33
Spare Parts/Tools .....	35
Options/Accessories .....	36
Replacement Parts Illustrations and Parts Lists .....	37 - 63

## Section II – AccuGlide™ II STD 3 Inch Taping Heads

## Description

The **3M-Matic™** 800a3 Adjustable Case Sealer with **AccuGlide™ II** Taping Heads is designed to apply a “C” clip of **Scotch™** brand pressure-sensitive film box sealing tape to the top and bottom center seam of regular slotted containers. The case sealer is manually adjustable to a wide range of box sizes (see Box Weight and Size Capacities, page 8).

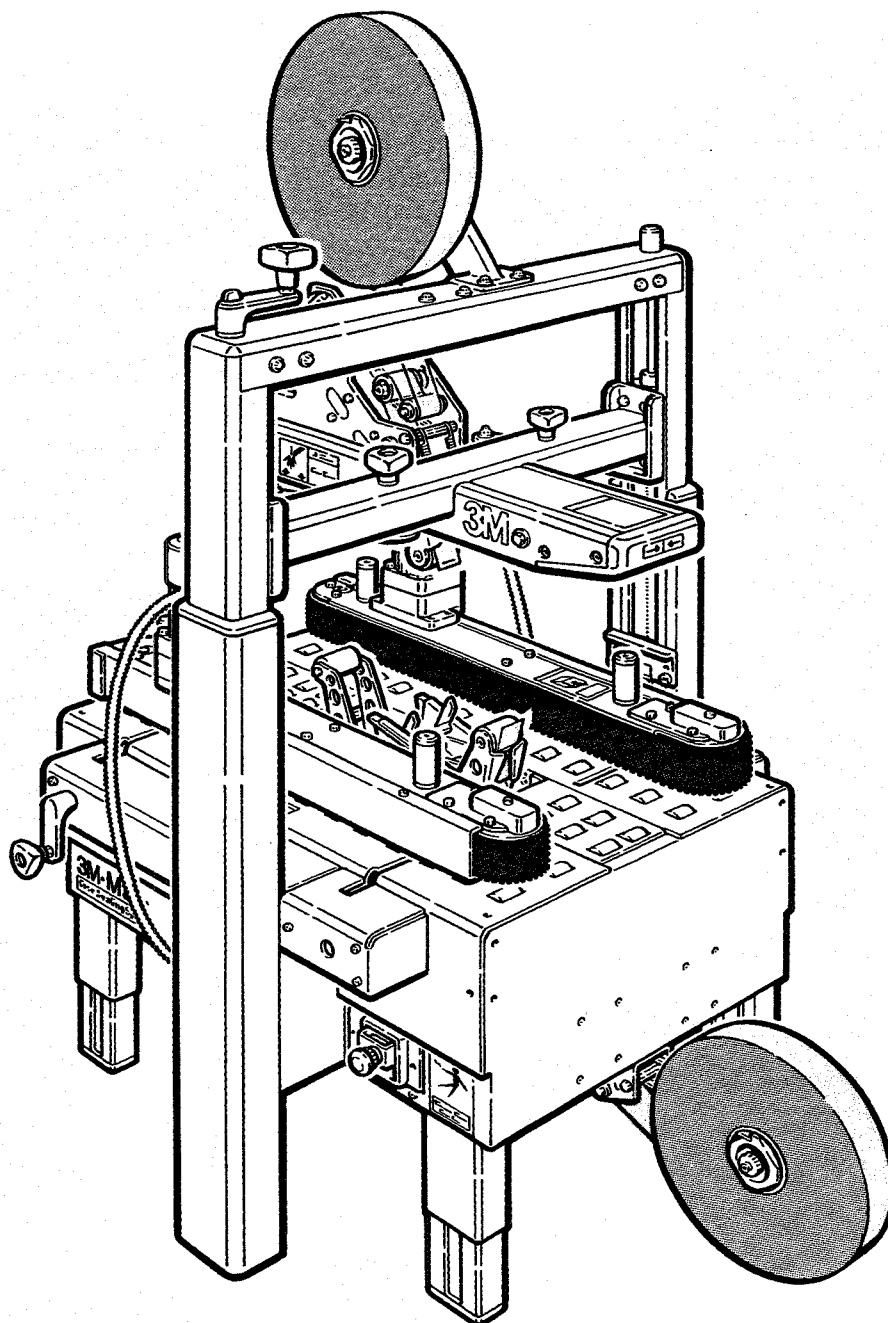

**3M-Matic™ 800a3 Adjustable Case Sealer, Type 29400**

**Equipment Warranty and Limited Remedy:** THE FOLLOWING WARRANTY IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND ANY IMPLIED WARRANTY ARISING OUT OF A COURSE OF DEALING, A CUSTOM OR USAGE OF TRADE:

3M sells its **3M-Matic™ 800a3 Adjustable Case Sealer, Type 29400** with the following warranties:

1. The Taping Head knife blades, springs and rollers will be free from all defects for ninety (90) days after delivery.
2. All other Taping Head parts will be free from all defects for three (3) years after delivery.
3. The gearmotor will be free from all defects for one (1) year after delivery.
4. All other parts will be free from all defects for ninety (90) days after delivery.

If any part is proved to be defective within its warranty period, then the exclusive remedy and 3M's and seller's sole obligation shall be, at 3M's option, to repair or replace the part, provided the defective part is returned immediately to 3M's factory or an authorized service station designated by 3M. A part will be presumed to have become defective after its warranty period unless the part is received or 3M is notified of the problem no later than five (5) calendar days after the warranty period. If 3M is unable to repair or replace the part within a reasonable time, then 3M, at its option, will replace the equipment or refund the purchase price. 3M shall have no obligation to provide or pay for the labor required to install the repaired or replacement part. 3M shall have no obligation to repair or replace (1) those parts failing due to operator misuse, carelessness, or due to any accidental cause other than equipment failure, or (2) parts failing due to non-lubrication, inadequate cleaning, improper operating environment, improper utilities or operator error.

**Limitation of Liability:** 3M and seller shall not be liable for direct, indirect, special, incidental or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability or any other legal theory.

The foregoing Equipment Warranty and Limited Remedy and Limitation of Liability may be changed only by a written agreement signed by authorized officers of 3M and seller.

---

## **800a3 Contents**


---

- (1) 800a3 Adjustable Case Sealer, Type 29400
- (1) Tool Kit
- (1) Instruction Manual

## Safety Labels


**Important** – In the event the following safety labels are damaged or destroyed, they must be replaced to ensure operator safety. For safety and information replacement labels, see Parts Illustrations/Lists, Section I, pages 62 and 63.

The "**Warning – Hazardous Voltage**" label, shown in **Figure 1-2**, is attached to the frame next to the on/off switch. The label warns service personnel to unplug the power supply before attempting any service work on the case sealer.

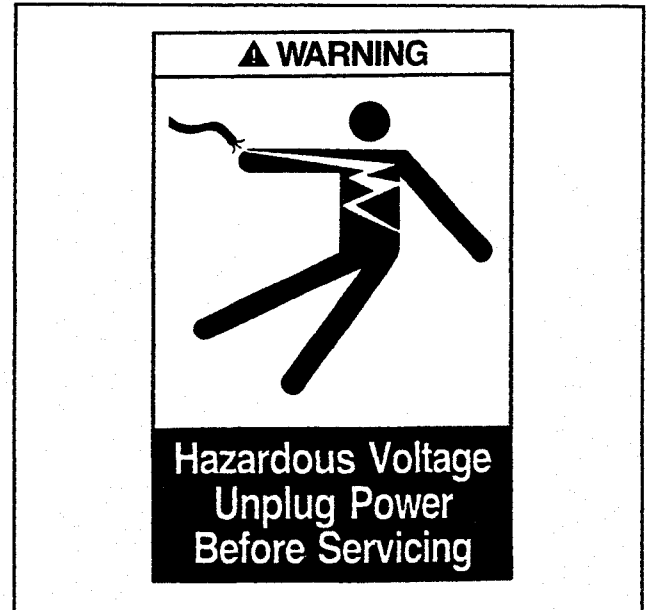


**Figure 1-2 – Electrical Warning Label**

The two "**Warning Sharp Knife**" labels, shown in **Figure 1-1**, are attached to the sides of the upper frame at the location of the cut-off blade on the upper taping head. The labels warn operators and service personnel of the very sharp knife used to cut the tape at the end of the tape application.

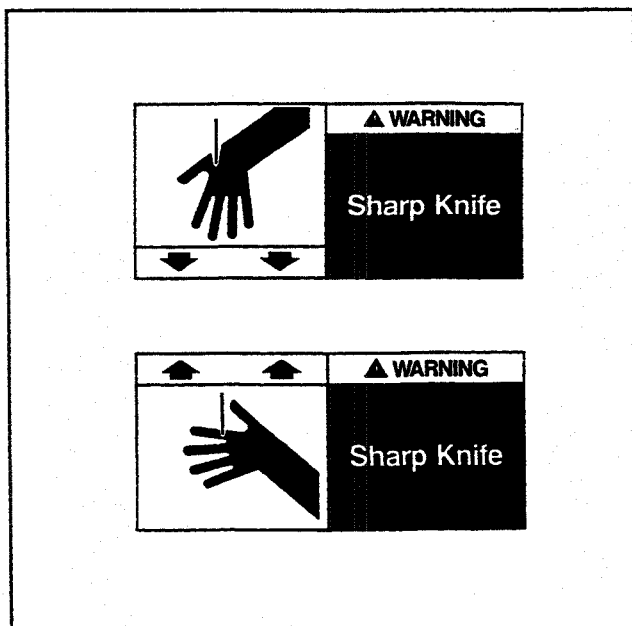

**Figure 1-1 – Knife Warning Label**

The two "**Warning – Keep Away From Moving Belts**" labels, shown in **Figure 1-3**, are located on the right and left side panel of the conveyor bed. The labels warn operators and service personnel to keep hands away from this area when the drive belts are running.

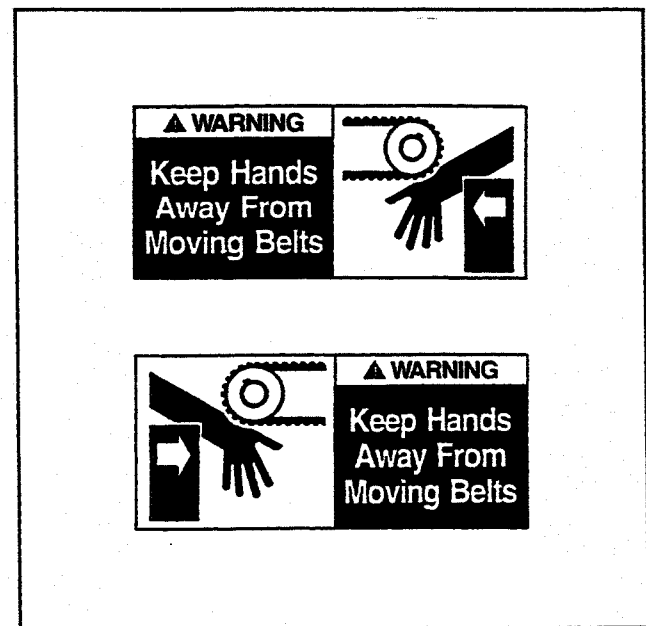

**Figure 1-3 – Hands Warning Label**




## Safety Labels (Continued)

The "**Caution - Keep Hands Out Of This Area**" label, shown in **Figure 1-4**, is attached to the rear of the upper frame. It warns the operator to keep hands out of this area when the upper taping head mechanism is in operation.




**Figure 1-4 – Hands Caution Label**

The "**Operating Notice**" label, shown in **Figure 1-6**, is located on top of both drive belt assemblies to remind operators of belt adjustment procedures.

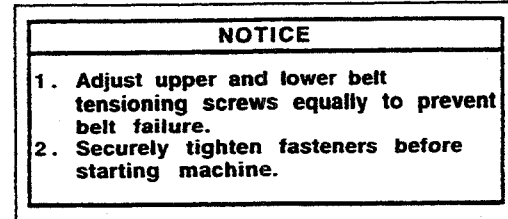

**Figure 1-6 – Operating Notice Label**

The "**Safety Instructions**" label, shown in **Figure 1-5**, is attached to the front of the upper frame. The label provides convenient safeguard instructions for the operator and service personnel.

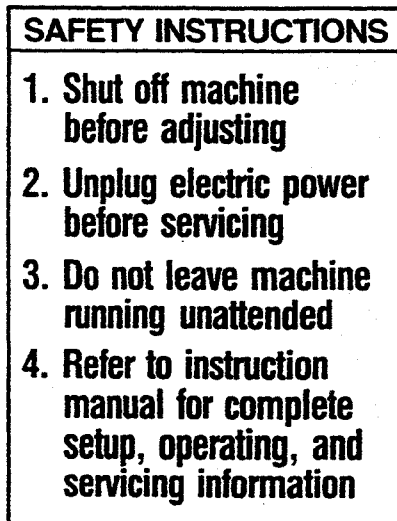

**Figure 1-5 – Safety Instructions Label**

## Safety Labels (Continued)

The following two labels are located on the upper and lower taping heads. Replacement part numbers for these two labels are listed below each label.

The **"Warning-Sharp Knife"** label warns operators and service personnel of the extremely sharp knife used to cut the tape at the end of the box sealing operation. The label, shown in **Figure 1-7**, is located on the orange blade guard between the applying roller assembly and the buffing roller assembly. **Never operate taping heads with blade guard removed.**

Before working with the taping heads or loading/threading tape, refer to Figures 3-1 and 3-2, in Section II, to identify the knife blade location. **Keep hands out of these areas except as necessary to service the taping heads or to load/thread tape.**

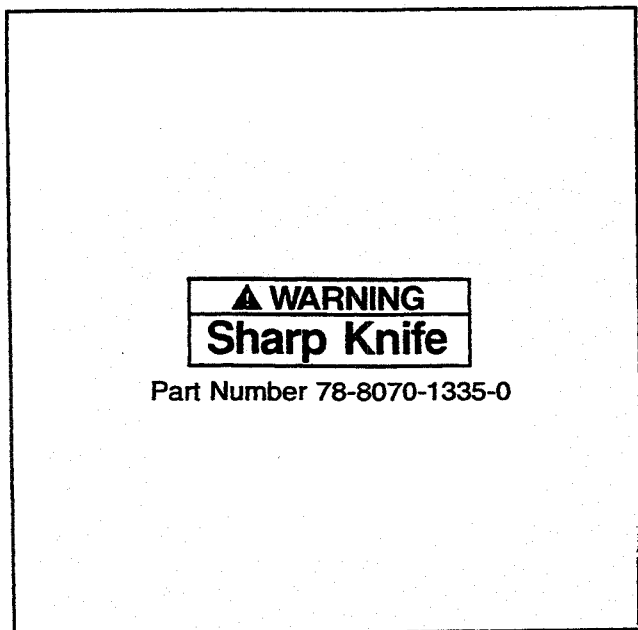


Figure 1-7 – Knife Warning Label

The **"Tape Threading Label"**, shown in **Figure 1-8**, is attached to the left side of both upper and lower taping heads. This label provides a convenient tape threading diagram. More detailed tape loading and threading information is provided in this manual in the set-up procedure section.


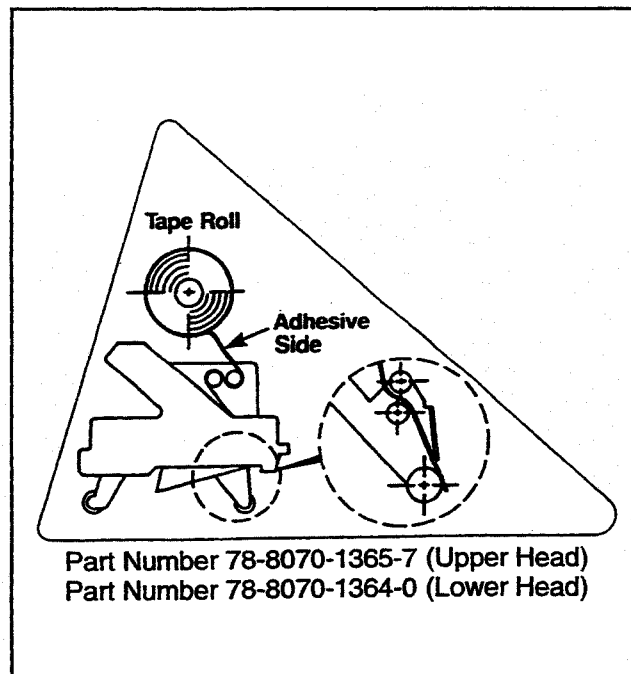


Figure 1-8 – Tape Threading Label

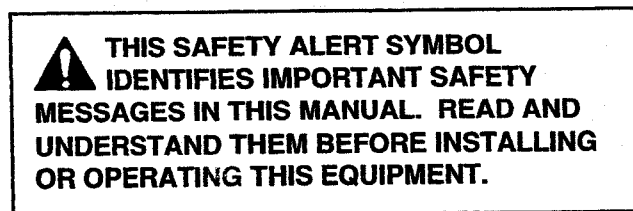

**THIS PAGE IS BLANK**

# Specifications

## 1. Power Requirements:

Electrical – 115 VAC, 60 Hz, 3.8 A

These machines are equipped with an 2.4 m [8 foot] standard neoprene covered power cord and a grounded plug.

Contact your 3M Representative for power requirements not listed above.

## 2. Operating Rate:

Belt speed is 0.40 m/s [78 ft/min]

## 5. Tape Width:


Minimum – 48 mm [2 inches]

Maximum – 72 mm [3 inches]

## 6. Tape Roll Diameter:

Up to 405 mm [16 inches] maximum on a 76.2 mm [3 inches] diameter core. (Accommodates all system roll lengths of **Scotch™** brand film tapes.)

### BOXES PER MINUTE VS. BOX LENGTH

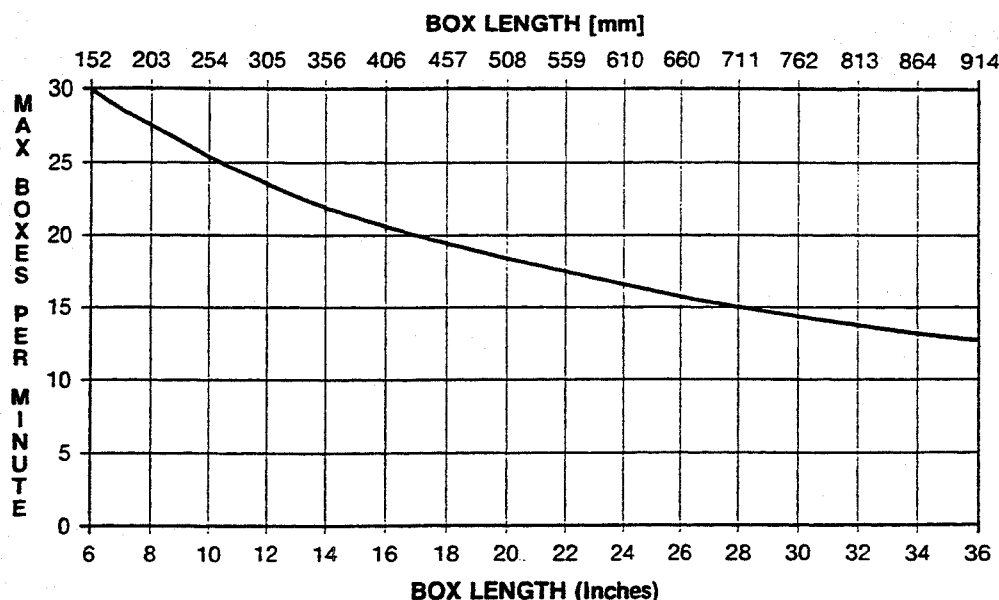

Actual production rate is dependent on operator's dexterity.

Boxes must be 18 inches [455mm] apart minimum.

## 3. Operating Conditions:

Use in dry, relatively clean environments at 5° to 40° C [40° to 105° F] with clean, dry boxes.

**Important** – Machine should not be washed down or subjected to conditions causing moisture condensation on components.

## 4. Tape:

**Scotch™** brand pressure-sensitive film box sealing tapes.

## 7. Tape Leg Length (Standard):

70 mm ± 6 mm [2-3/4 inches ± 1/4 inch]

### Tape Leg Length (Optional):

48 mm ± 6 mm [2 inches ± 1/4 inch]

(To change tape leg length to 48 mm [2 inches], see "Special Set-Up Procedures", page 25.)

## 8. Box Board:

Style – regular slotted containers – RSC  
Bursting test – 125 to 275 P.S.I. single wall or double wall B or C flute.

(Specifications continued on next page)

## Specifications (Continued)

### 9. Box Weight and Size Capacities:

#### Weight

Maximum – up to 38.6 kg [85 pounds]

Minimum – contents must support top flaps and weight must be sufficient to hold bottom flaps fully closed.

#### Box Size

##### MINIMUM

Length – 150 mm [6 inches]  
Width – 140 mm [5-1/2 inches]  
Height – 120 mm [4-3/4 inches] \*

##### MAXIMUM

Length – unlimited  
Width – 545 mm [21-1/2 inches]  
Height – 620 mm [24-1/2 inches]\*\*

**Note:** The case sealer is designed to accommodate most boxes complying with the 1976 FBA and PMMI\*\*\* voluntary standard "Tolerances for Top Opening" regular slotted corrugated containers (RSC). Two of the requirements of the standard are the following:

The box length is not more than twice the box width.

The box length is not more than four times the box depth.

DETERMINE THE BOX LIMITATIONS BY COMPLETING THIS FORMULA:

<b>Box Length In</b>	
<b><u>Direction Of Seal</u></b>	<b>Must Be Greater Than .6</b>
<b>Box Height</b>	

If any of the above criteria are not met boxes should be test run to assure proper machine performance.

\* Minimum box height can be reduced to 110 mm [4-1/4 inches] by removing machine compression rollers.

OR

Minimum box height can be reduced to 90 mm [3 1/2 inches] by adjusting taping heads to apply 48 mm [2 inch] tape legs. (See "Special Set-Up Procedure", page 25.)


\*\* Maximum box height can be increased to 725 mm [28-1/2 inches] by relocating machine outer columns to upper position. (See "Special Set-Up Procedure", page 27.)

**Note:** Raising columns to upper position also increases minimum box height to 210 mm [8-1/4 inches].

\*\*\* Fibre Box Association, Packaging Machinery Manufacturer's Association

(Specifications continued on next page.)

## Specifications (Continued)

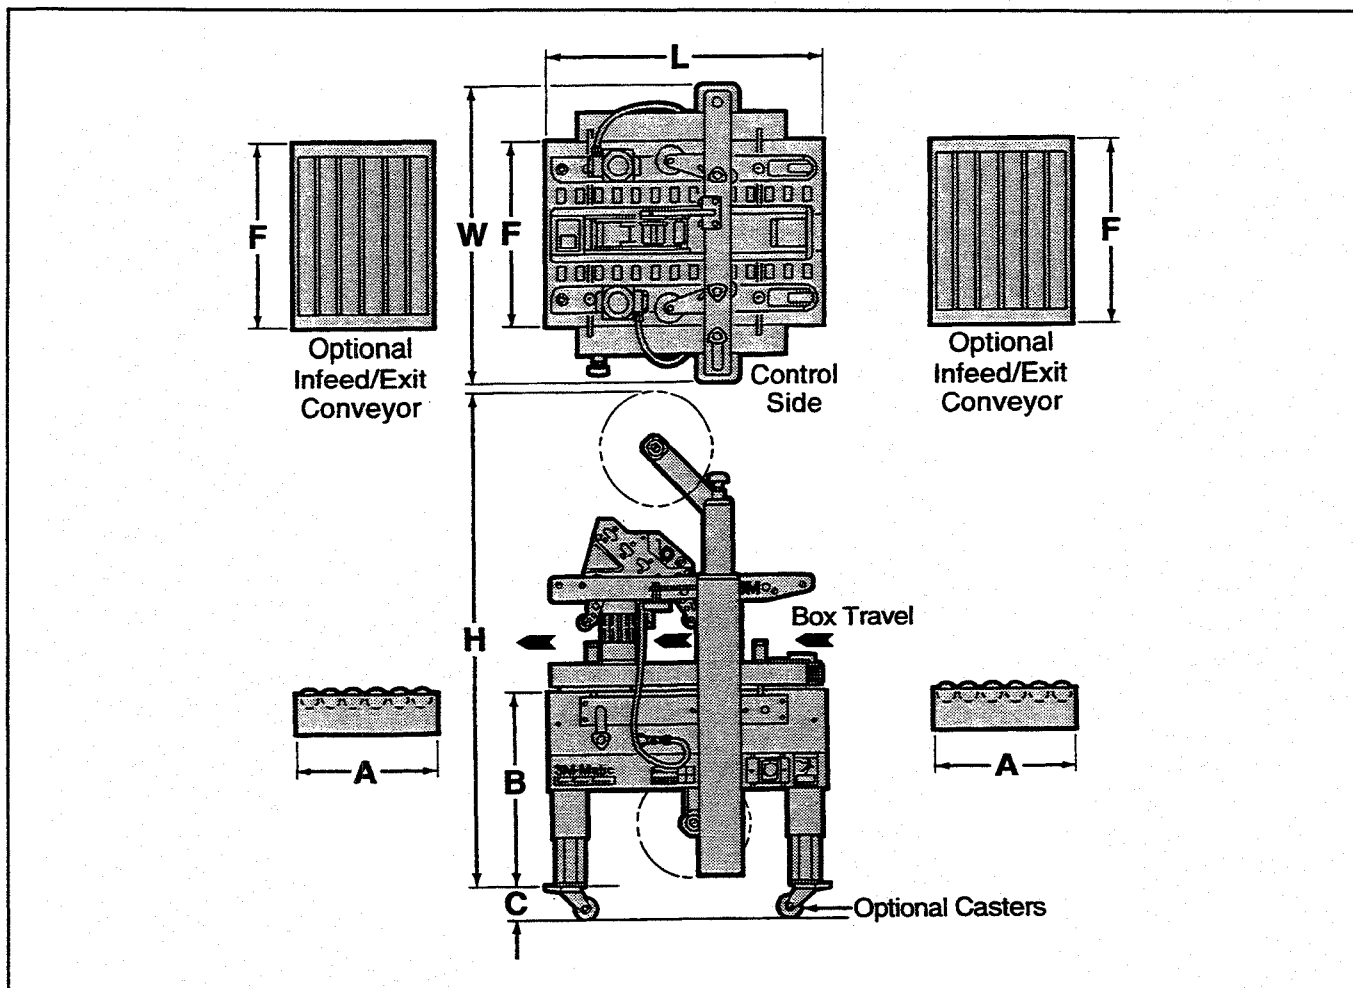

### Machine Dimensions

	W	L	H	A	B	C	F
<b>Minimum</b>							
mm [Inches]	980 [38-1/2]	920 [36-1/4]	1395 [55]	460 [18]	610 [24] *	105 [4-3/16]	620 [24-1/2]
<b>Maximum</b>							
mm [Inches]	--	--	2185 [86] *	--	890 [35] *	--	--

\* With outer columns relocated to upper position, "H" maximum dimension increases 100 mm [4 inches] and "B" minimum/maximum dimension decreases by 100 mm [4 inches]. (See "Special Set-Up Procedure", page 27.)

Weight — approximate 176.9 kg [390 pounds] crated  
 approximate 158.8 kg [350 pounds] uncrated

#### 11. Set-Up Recommendations:

- > Machine must be level.
- > Customer supplied infeed and exit conveyors (if used) should provide straight and level box entry and exit.
- > Exit conveyors (powered or gravity) must convey sealed boxes away from machine.

**THIS PAGE IS BLANK**

# Installation and Set-Up

## Receiving And Handling

After the machine has been uncrated, examine the case sealer for damage that might have occurred during transit. **If damage is evident, file a damage claim immediately** with the transportation company and also your 3M Representative.

## Machine Set-Up

The following instructions are presented in **the order recommended** for setting up and installing the case sealer. Following them step by step will result in an installation in your production line that best utilizes the many features built into the case sealer. Refer to Figure 3-1 to identify the various components of the machine.

**Note** – A tool kit consisting of metric open end and hex socket wrenches is provided with the machine. These tools should be adequate to set-up the machine, however, other tools supplied by the customer will be required for machine maintenance.

**Important** – Read "Warnings" on page 15 before attempting to set-up the case sealer for operation.

## PACKAGING AND SEPARATE PARTS

1. Lift fiberboard cover off pallet after removing staples at bottom.
2. Remove the two "U" shaped hold down clamps from lower cross bar. These are sheet metal brackets that prevent the upper head assembly from bouncing during shipping.

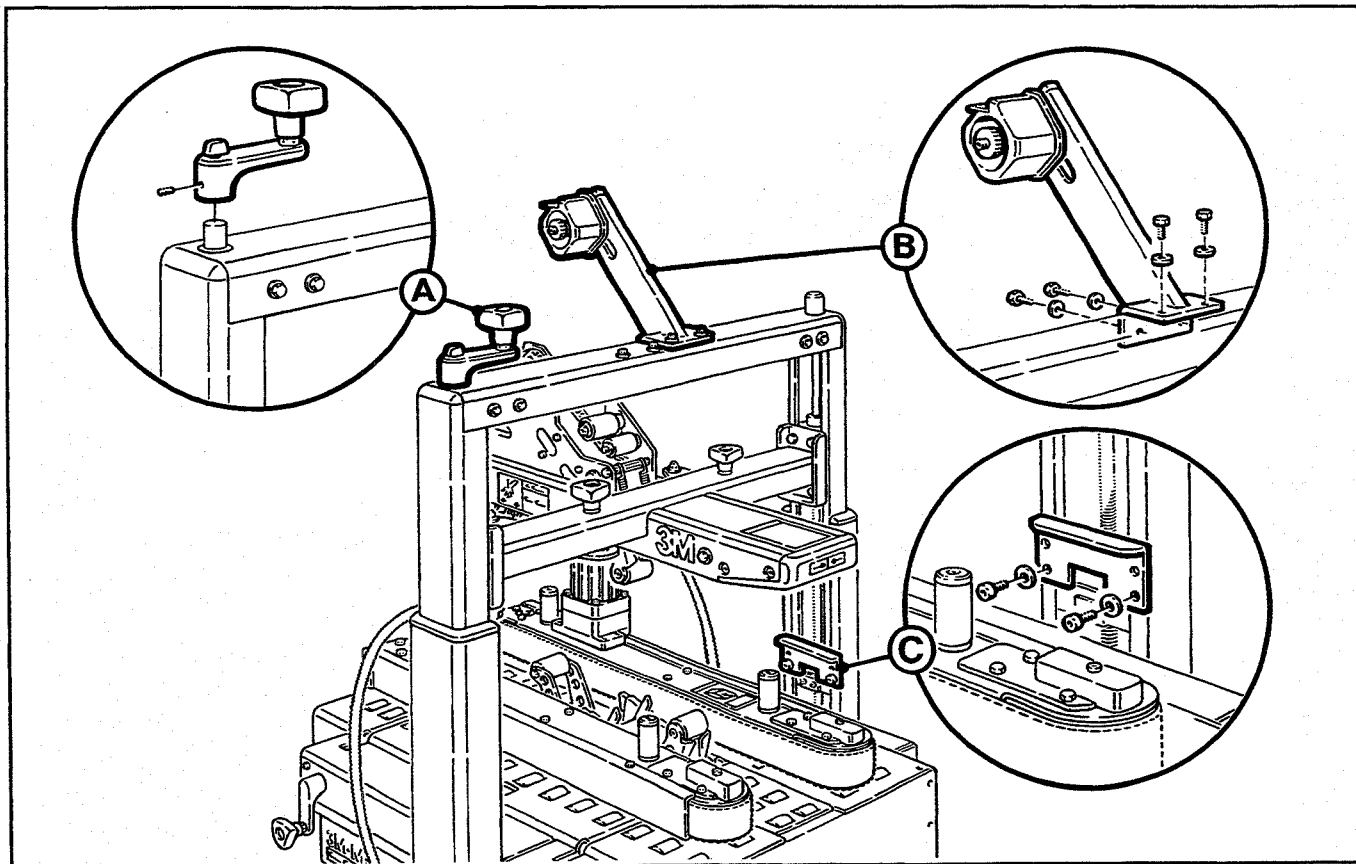


Figure 2-1 – Set-Up and Installation



## Installation and Set-Up (Continued)

3. Install the crank handle on the top of the left column, as shown in Figure 2-1A.
4. Install the upper tape drum bracket on the top cross bar, as shown in Figure 2-1B.
5. Raise upper head assembly (turn crank handle counterclockwise). Remove the two shipping stop angle brackets and discard. Install the machine stops (from parts bag). Mount these stops as shown in Figure 2-1C. Use the lowest hole position and bolt into the lowest threaded insert on the column. The upper hole position in the stops should only be used when the heads are adjusted to apply 48 mm [2 inch] tape legs.

### TAPE DRUM BRACKET (Lower Taping Head)

Ensure that the tape drum bracket assembly is mounted straight down, as shown in Figure 2-2A. The tape drum bracket assembly can be pivoted to provide clearance or for retrofit in certain cases.

Outboard tape roll mounting (Alternate Position) – Remove the tape drum bracket assembly, stud spacer and fasteners from the taping head. Install and secure on the infeed end of the lower frame, as shown in Figure 2-2B.

### CONVEYOR BED HEIGHT

Adjust conveyor bed height. The case sealer is equipped with four adjustable legs that are located at the corners of the machine frame. The legs can be adjusted to obtain different machine bed heights from 610 mm [24 inches] minimum to 890 mm [35 inches] maximum.

Refer to Figure 2-2C and set the machine bed height as follows:

1. Raise and block up the machine frame to allow adequate leg adjustment.
2. Loosen, but do not remove, two M8 x 16 socket head screws in one leg (use M6 hex wrench). Adjust the leg length for the desired machine bed height. Retighten the two screws to secure the leg. Adjust all four legs equally.

### TAPE WIDTH

The taping heads on the 800a3 have been pre-set to accommodate 72 mm [3 inch] wide tape rolls. To adjust heads for narrower tape, refer to Section II, "Adjustments – Tape Web Alignment", page 11.

### TAPE LEG LENGTH

Taping heads are pre-set to apply 70 mm [2-3/4 inch] long tape legs. To change tape legs to 48 mm [2 inch], see "Special Set-Up Procedure – Changing Tape Leg Length", page 25.

## Installation and Set-Up (Continued)

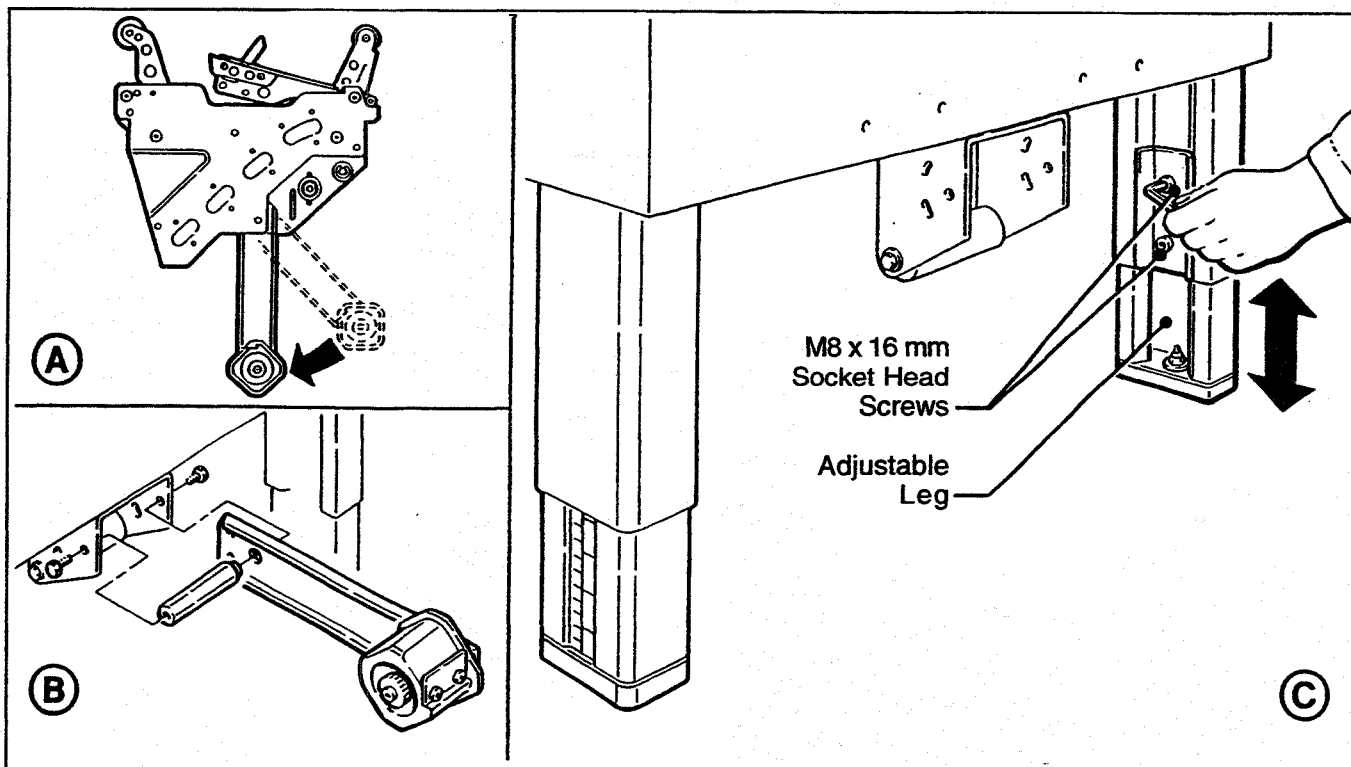


Figure 2-2 – Conveyor Bed Height Adjustment and Lower Tape Drum Bracket Position

### BOX SIZE CAPACITY OF CASE SEALER

At its factory setting, the case sealer handles box sizes up to 620 mm [24-1/2 inches] maximum height. If larger capacity is needed, the machine can be adjusted to accommodate boxes up to 725 mm [28-1/2 inches] high. Refer to page 27, "Special Set-Up Procedures – Box Height Range", for set-up procedure.

**Note – Adjusting machine to accommodate 724 mm [28-1/2 inches] high boxes also increases minimum box size to 210 mm [8-1/4 inches].**

### DRIVE BELT HEIGHT

The drive belt assemblies can be raised 50 mm [2 inches] to provide better conveying of tall boxes. Refer to page 26, "Special Set-Up Procedures – Drive Belt Assembly Height", for set-up procedure. **Note – Raising drive belts increases the minimum box height that can be taped to 190 mm [7-1/4 inches].**

### ELECTRICAL CONNECTION AND CONTROLS

The electrical control box, shown in Figure 3-1, contains the "On/Off" switch with pre-set circuit breaker and can be located on either side of the machine frame for customer operating convenience. A standard three conductor power cord with plug is provided at the back of the electrical control box for 115 Volt, 60 Hz, 6.4 Amp electrical service. The receptacle providing this service shall be properly grounded. Before the power cord is plugged into 115 Volt, 60 Hz outlet, make sure the red "Off" button is depressed and that all packaging materials and tools are removed from the machine. **Do not plug electrical cord into outlet until ready to run machine.**

**Note – Machines outside the U.S. may be equipped with 220/240 Volt, 50 Hz systems, or other electrical requirements compatible with local practice.**


### INITIAL START-UP OF CASE SEALER

After completing the "Installation and Set-Up" procedure, continue through "Operation" for tape loading and start-up to be sure case sealer is properly adjusted to run boxes.

## Operation

**IMPORTANT** – Before operating the case sealer read all the "Warning/Information Labels", pages 3-5 and "Warnings", on page 15 as well as all of the "Operation" instructions.

Refer to Figure 3-1 to acquaint yourself with the various components of the case sealer and also see Section II, page 6, for taping head components.

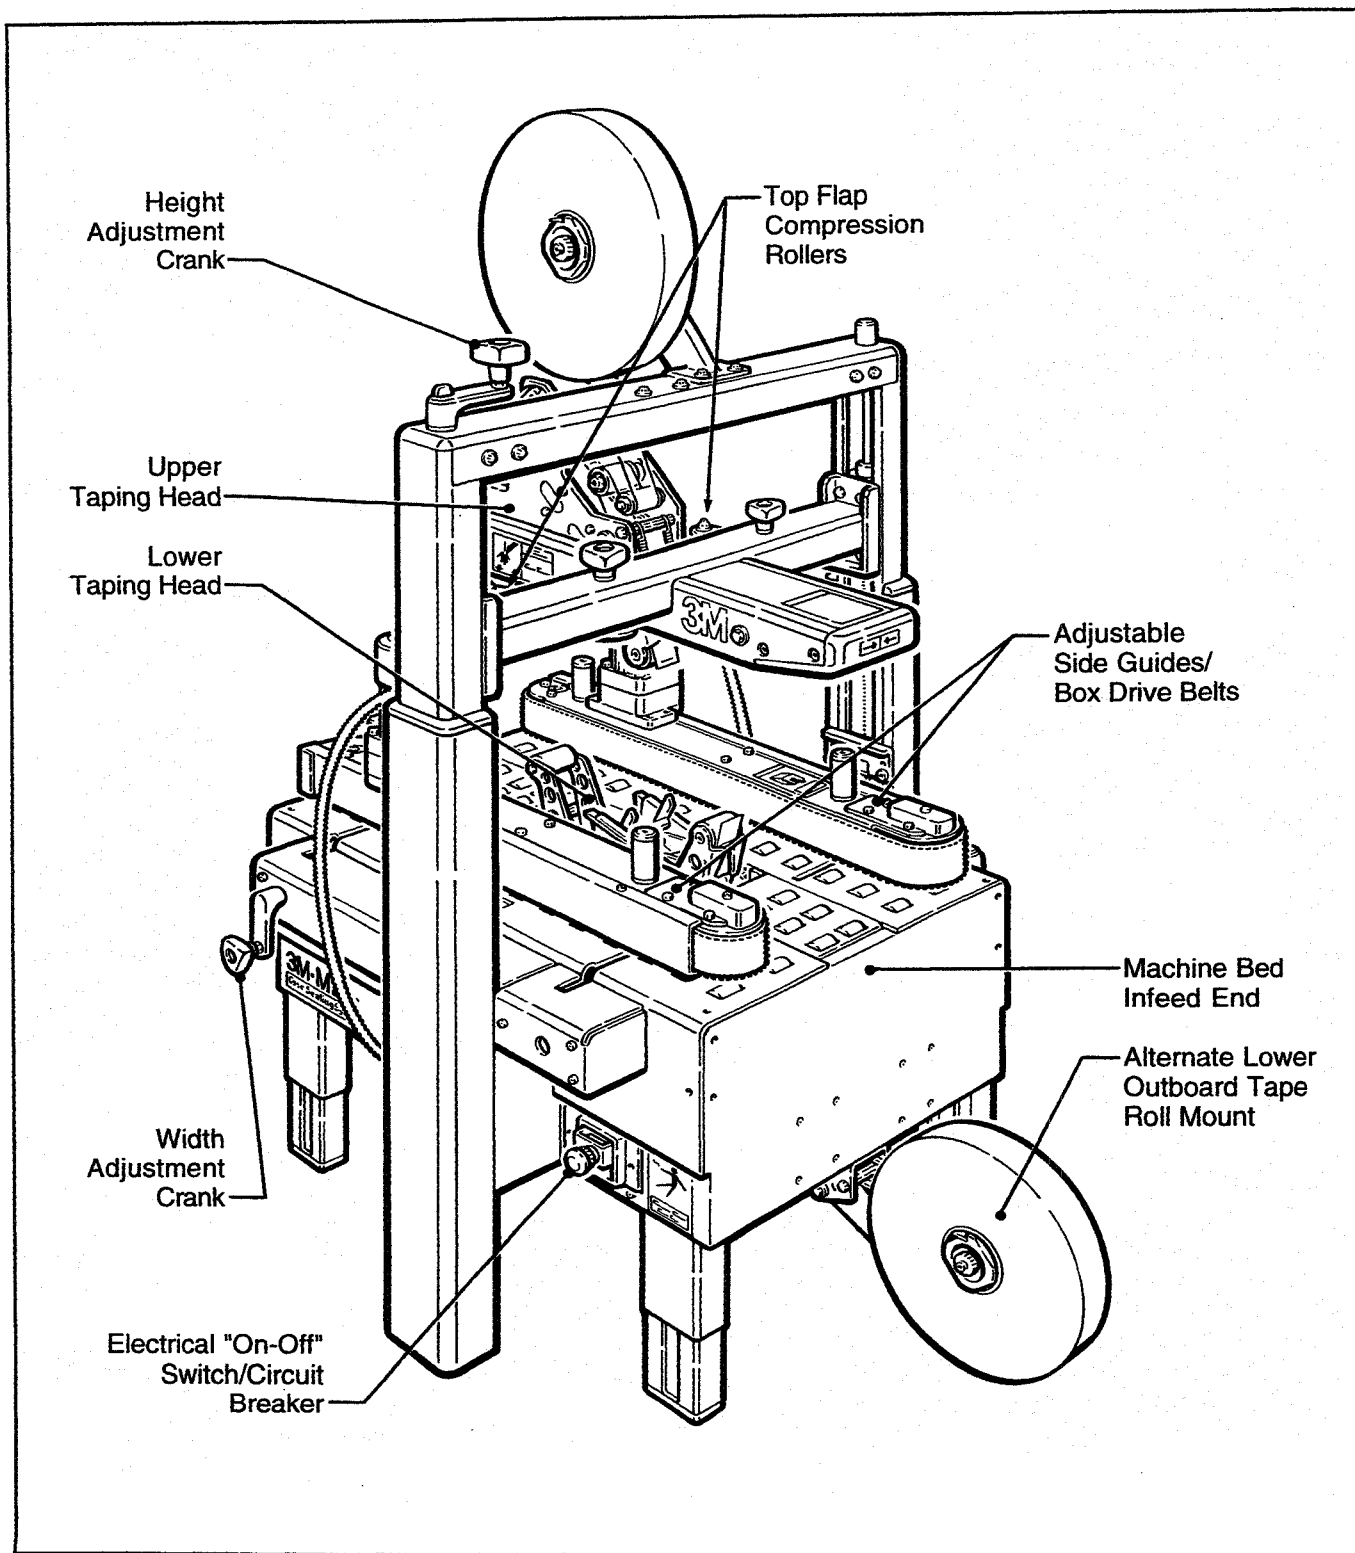

**Figure 3-1 – Case Sealer Components, Left Front View**

## Operation (Continued)



### WARNINGS

1. Turn electrical supply off and disconnect before servicing taping heads or performing any adjustments or maintenance on the machine.
2. Turn electrical supply off when machine is not in use.
3. Before turning drive belts on, be sure no tools or other objects are on the machine bed.
4. Keep hands and loose clothing away from moving belts.
5. Never attempt to work on any part of the machine, load tape or remove jammed boxes from the machine while machine is running.
6. When feeding boxes to the machine by hand, push box in from end only – DO NOT PUSH WITH HANDS ON ANY CORNER OF THE BOX.
7. Taping heads utilize extremely sharp knife blades. The blade is located under the orange blade guard that has the "WARNING – SHARP KNIFE" label. Before loading tape, refer to Section II, page 6, Figures 3-1 and 3-2 to identify the blade location. Keep hands out of these areas except as necessary to service the taping heads.
8. Turn drive belts "Off" when machine is not in use.
9. Failure to comply with these warnings could result in severe personal injury and/or equipment damage.

### Electrical "On/Off" Switch

The box drive belts are turned on and off ("Off" button is red) with the electrical switch on the side of the machine frame.

**Note** – The case sealer has a circuit breaker incorporated into the "On/Off" switch. If circuit becomes overloaded and circuit breaker trips, determine cause of overload (wait two minutes), then push "On" button to re-set breaker/start machine.

### Tape Loading/Threading

See Section II, pages 7 and 8

**Note** – If lower tape drum is mounted in lower outboard position, remove taping head from machine bed by pulling straight up, insert threading needle in taping head and replace taping head. Install tape roll on drum (adhesive on tape leg up), thread tape leg under knurled roller on outboard mount, then attach tape leg to threading needle and pull tape through taping head with threading needle.

## Operation (Continued)

### Box Size Set-Up

#### 1. ADJUST DRIVE BELTS (Figure 3-2)

Place a product filled box on infeed conveyor bed with top flaps folded as shown and manually move box forward to contact lower taping head applying roller.

Turn drive belt adjustment crank to position both side drive belts against sides of box.

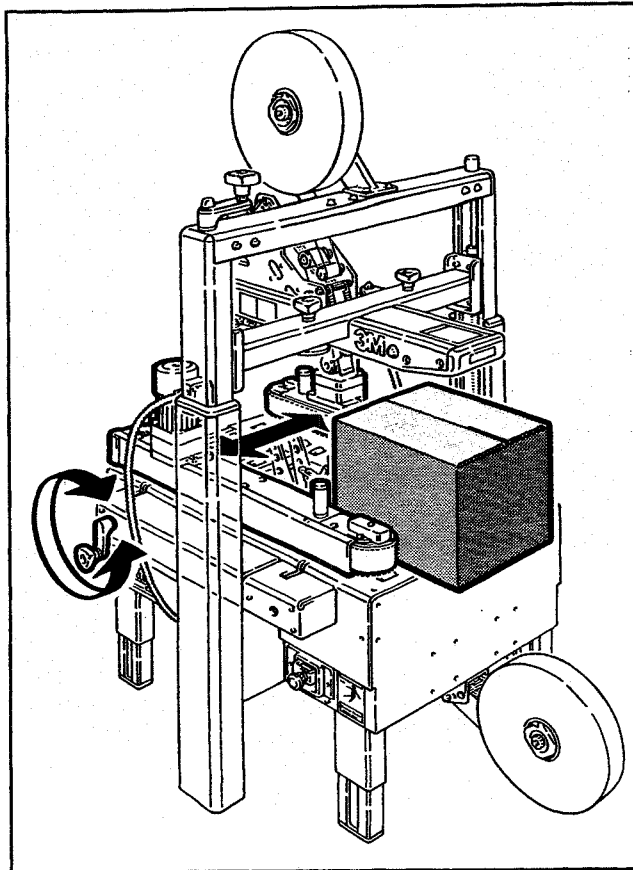


Figure 3-2 – Side Drive Belts

#### 2. ADJUST UPPER TAPING HEAD (Figure 3-3)

Turn height adjustment crank to position upper taping head onto box. Turn clockwise to lower head, counterclockwise to raise head. Upper taping head must contact and hold top box flaps closed.

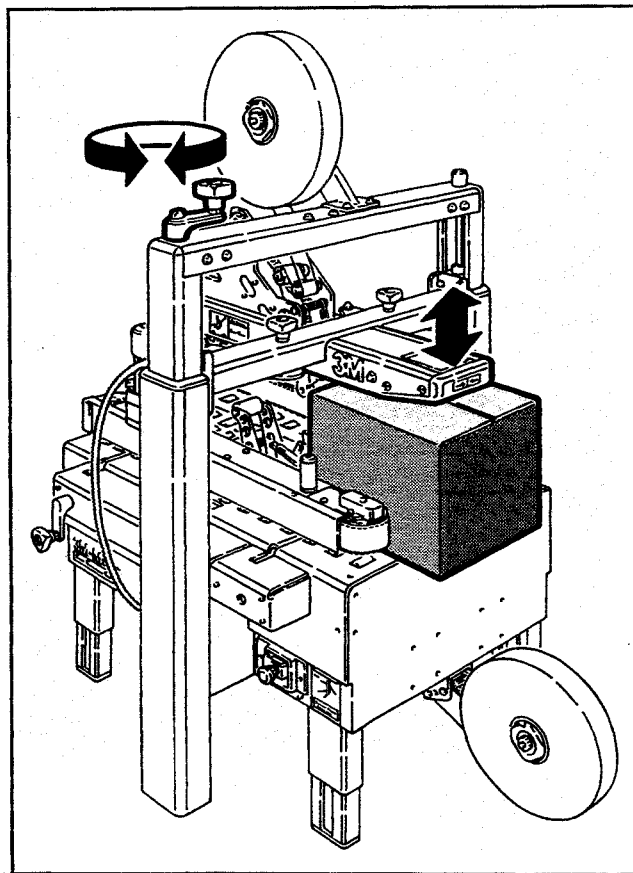


Figure 3-3 – Upper Taping Head

## Operation (Continued)

### 3. POSITION COMPRESSION ROLLERS (Figure 3-4)

The top flap compression rollers have an adjustable slide mounting to provide side compression through the full range of box widths.

Manually move box forward so front of box is aligned with top flap compression rollers.

Adjust the compression rollers against top edge of box and **tighten knobs to secure rollers** in operating position.

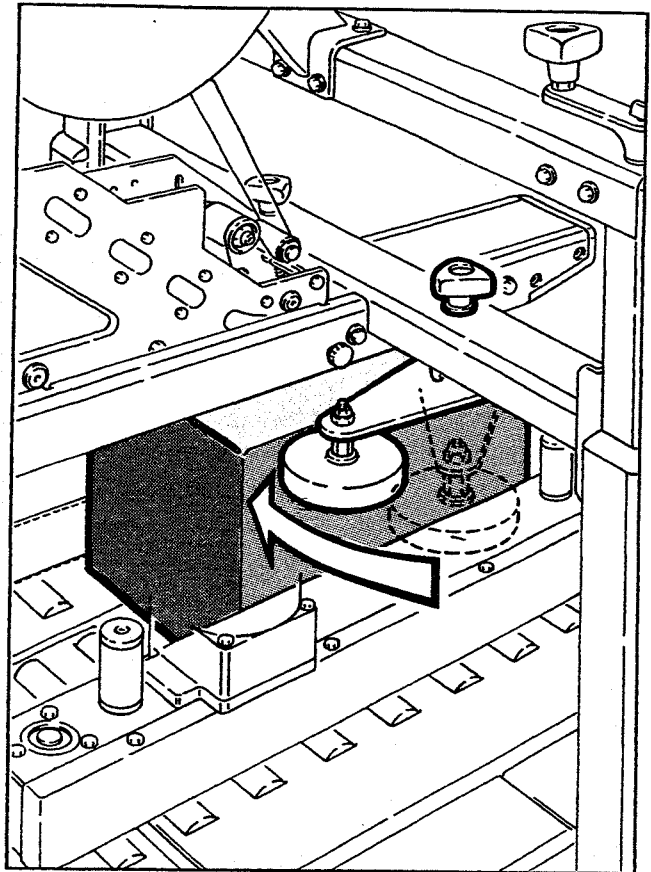


Figure 3-4 – Top Flap Compression Rollers

### 4. RUN BOXES TO CHECK ADJUSTMENT (Figure 3-5)

**WARNING** – Be sure all packaging materials and tools are removed from the machine before operating.

Push electrical switch **"On"** to start drive belts.

Move box forward under upper taping head until it is taken away by drive belts. If box is hard to move under head or is crushed, raise head slightly.

If the box movement is jerky or stops under the upper head, move the side drive belts in slightly to add more pressure between the box and drive belts.

**CAUTION** – If drive belts are allowed to slip on box, excessive belt wear will occur.

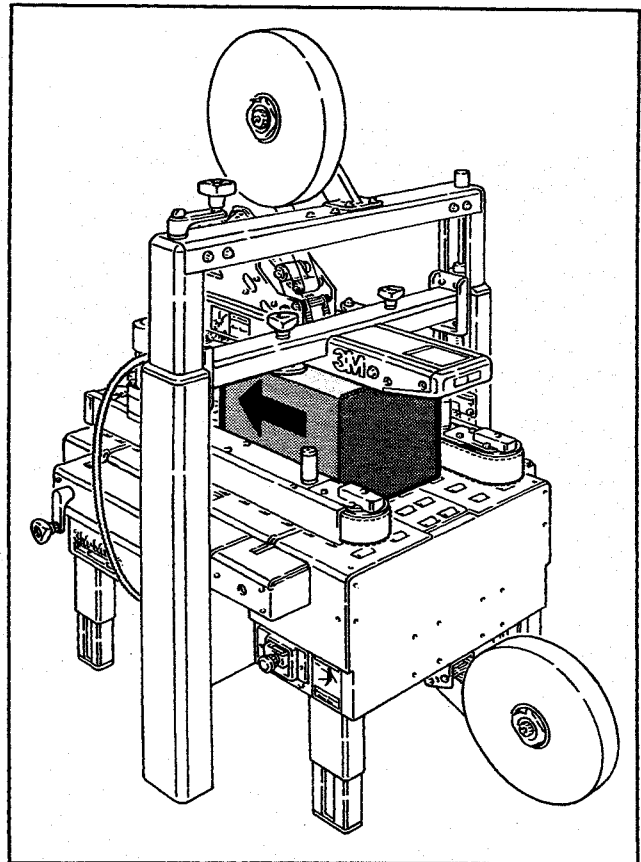


Figure 3-5 – Check Adjustment

## **Operation (Continued)**

### **Box Sealing**

1. Feed boxes to machine at minimum 455 mm [18 inch] intervals.
2. Turn electrical supply "Off" when machine is not in use.
3. Reload and thread tape as necessary.
4. Be sure machine is cleaned and lubricated according to recommendations in "Maintenance" section of this manual.

#### **Notes**

1. Machine or taping head adjustments are described in "Adjustments", Section I for machine or Section II for taping heads.
2. Box drive motors are designed to run at a moderate temperature of 40°C [104°F]. In some cases, they may feel hot to the touch.

## Maintenance

The case sealer has been designed for long, trouble-free service. The machine will perform best when it receives routine maintenance and cleaning. Machine components that fail or wear excessively should be promptly repaired or replaced to prevent damage to other portions of the machine or to the product.



**WARNING – Turn off electrical power supply and disconnect power cord from electrical supply before beginning maintenance. If electrical power is not disconnected, severe injury to personnel could result.**

### Cleaning

**Note –** Never attempt to remove dirt from taping heads by blowing it out with compressed air. This can cause the dirt to be blown inside the motor and onto sliding surfaces which may cause premature equipment wear. Never wash down or subject equipment to conditions causing moisture condensation on components. Serious equipment damage could result.

Regular slotted containers produce a great deal of dust and paper chips when processed or handled in equipment. If this dust is allowed to build-up on machine components, it can cause component wear and overheating of drive motor. The dust build-up can best be removed from the machine by a shop vacuum. Depending on the number and type of boxes sealed in the case sealer, this cleaning should be done approximately once per month. If the boxes sealed are dirty, or if the environment in which the machine operates is dusty, cleaning on a more frequent basis may be necessary. Excessive dirt build-up that cannot be removed by vacuuming should be wiped off with a damp cloth.

### Lubrication

Like most other equipment, the taping head must be properly lubricated to insure long, trouble free service. Most of the machine bearings are permanently lubricated and sealed and do not need to be greased. The drive motor is also permanently lubricated and does not require additional lubrication.

Figure 4-1 illustrates the frame points which should be lubricated every 250 hours of operation. Lubricate the rotating and pivoting points, noted by the arrows, (➡) with SAE #30 non-detergent oil. At the same time, a small amount of multipurpose grease should be applied to the end of each spring where the loop is secured at an eyelet, post, or hole noted by arrows (⇨).

**Note –** Wipe off excess oil and grease. It will attract dust which can cause premature equipment wear and jamming. Take care that oil and grease are not left on the surface of rollers around which tape is threaded, as it can contaminate the tape's adhesive.

Taping Head Lubrication – See Section II, "Maintenance – Lubrication", page 10.

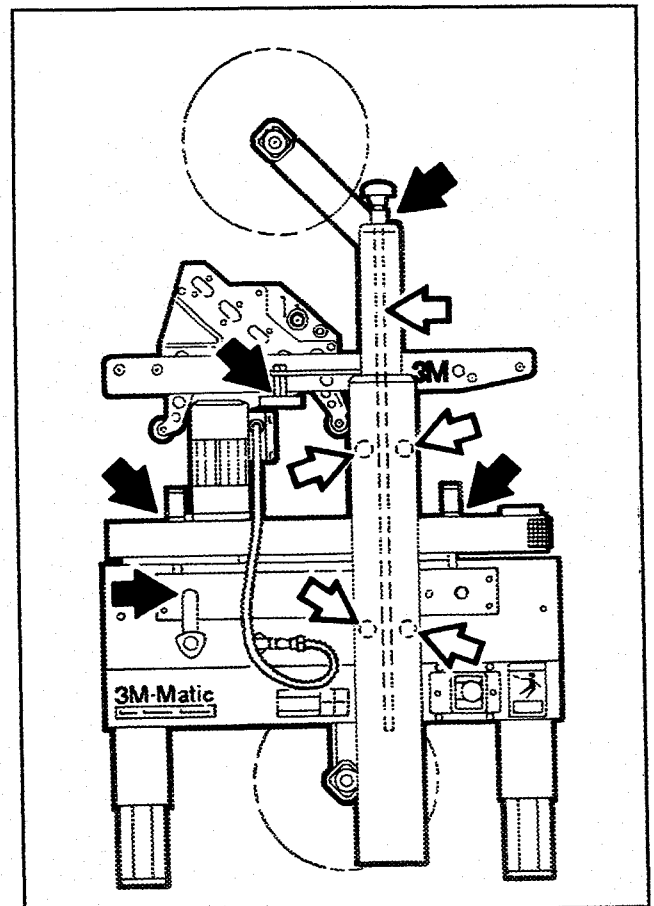


Figure 4-1 – Frame Lubrication Points



## Maintenance (Continued)



**WARNING – Turn off electrical power and disconnect power cord from electrical supply before beginning maintenance. If power cord is not disconnected, severe injury to personnel could result.**

### Circuit Breaker

The case sealer is equipped with a circuit breaker which trips the "On/Off" switch to tripped position. If circuit is overloaded and circuit breaker trips, determine cause and correct (wait two minutes), then turn "On". Located inside the electrical control box on the side of the machine frame, the circuit breaker has been pre-set at 2.3 Amps and requires no further maintenance.

### Blade Replacement, Taping Head

See Section II, "Maintenance - Blade Replacement", page 9.

### Drive Belts

**Note – 3M recommends the replacement of drive belts in pairs, especially if belts are unevenly worn.**

REPLACEMENT – SEE STEPS 1 THRU 8

TENSION ADJUSTMENT – SEE STEPS 3, 7 AND 8

1. Crank the upper taping head to its fully raised position.
2. Remove and retain the three screws (A), three washers (B) and side cover (C). See Figure 4-2.
3. Remove and retain the screw (D), washer (E) and belt tensioner cover (F).
4. Turn belt adjustment screws (G) counterclockwise on both the upper and lower tension assemblies until belt is loose. See Figure 4-3.
5. Locate the belt lacing (joint) by turning the belt manually. Remove the pin with pliers. Remove and discard old belt.


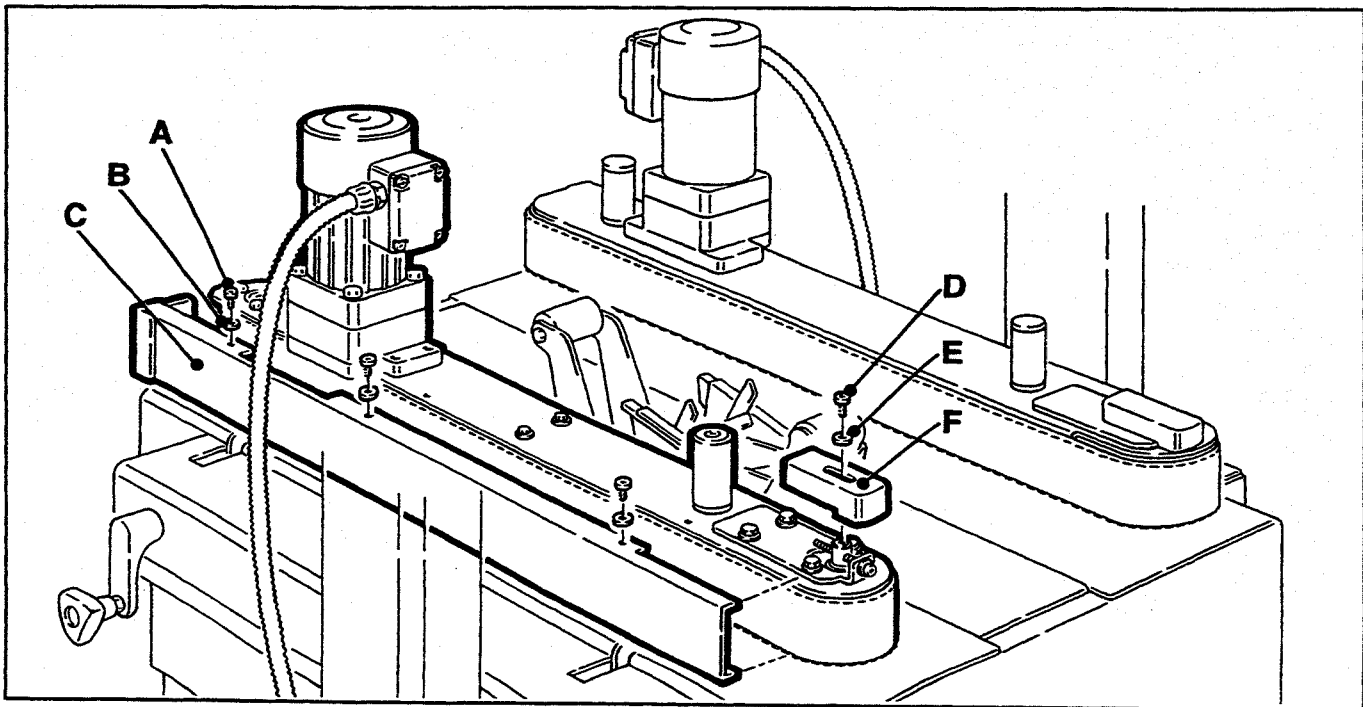


Figure 4-2 – Box Drive Belt (Left Side View – Infeed End)

## Maintenance (Continued)

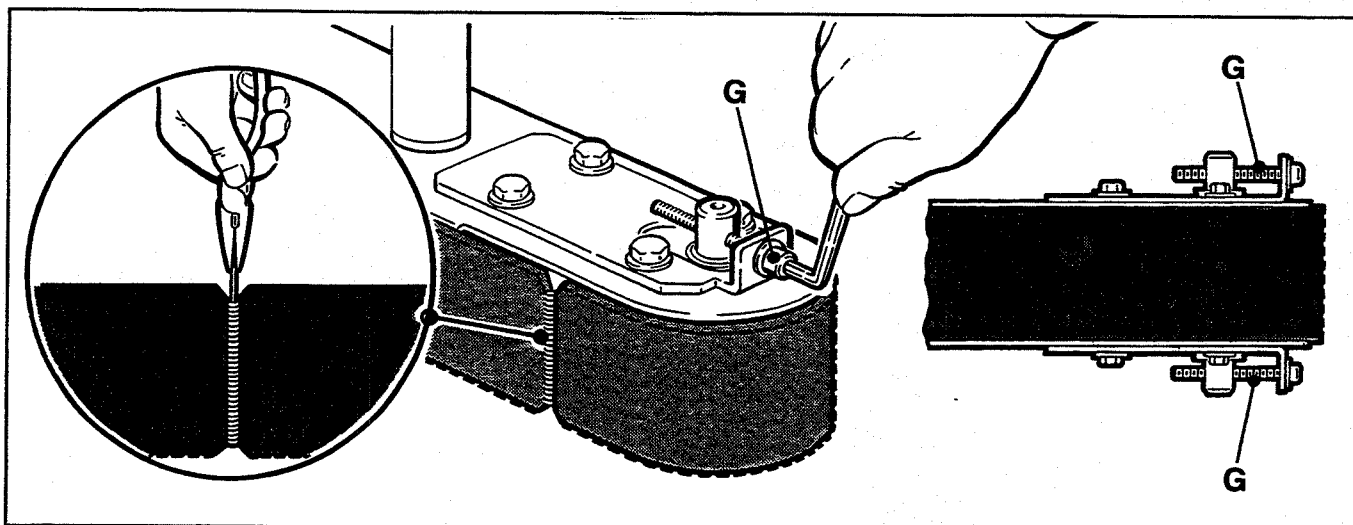

**Figure 4-3 – Box Drive Assembly, Infeed End**


6. Install the new belt around drive rollers and insert new pin. Pin must not extend beyond edge of belt.

**Important** – Before installing new drive belt, check the belt inside surface for drive direction arrows and install belt accordingly. If no arrows are shown, the belt may be installed either way.

7. To set drive belt tension, turn adjustment screws (G) equally on both the upper and lower tension assemblies. Turn the screws clockwise to increase tension or counterclockwise to decrease tension. See Figure 4-3.

Use a force gauge to pull the belt outward 25 mm [1 inch] at midspan, as shown with a moderate pulling force of 3.5 kg [7 lbs].

8. Reverse procedures in Steps 1-3 (Figure 4-2) to reassemble the drive belt assembly.

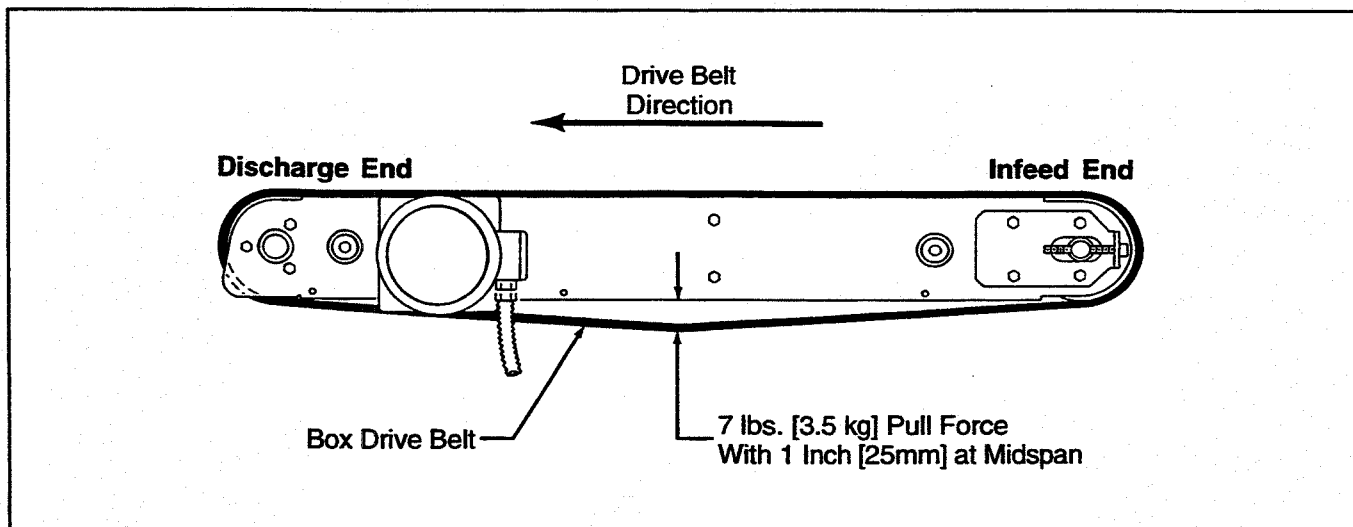

**Figure 4-4 – Box Drive Belt Tension Adjustment, Top View**

**THIS PAGE IS BLANK**

## Adjustments



**WARNING** – Turn off electrical power supply and disconnect power cord from electrical supply before beginning adjustments. If power cord is not disconnected, severe injury to personnel could result.

### Drive Belt Tension

Tension adjustment of the drive belts may be required during normal operation. Belt tension must be adequate to positively move the box through the machine and they should run fully on the surface of the pulleys at each end of the frame. The idler pulleys on the infeed end are adjusted in or out to provide proper belt tension. Each belt is adjusted separately.

Belt tension is obtained by tightening the adjustment screw so that a moderate pulling force of 3.5 kg [7 lbs] applied at the midspan, as shown in Figure 4-4, will deflect the belt 25 mm [1 inch]. This will assure positive contact between the belt and the drive pulley on the discharge end of the taping head.

To adjust belts, see "Maintenance – Drive Belts", page 20.

### Taping Head Adjustments



**WARNING** – Use care when working near tape cut-off blades on taping heads as blades are extremely sharp. If care is not taken, severe injury to personnel could result.

TAPE WEB ALIGNMENT – Section II, page 11

TAPE DRUM FRICTION BRAKE – Section II, page 11

APPLYING MECHANISM SPRING – Section II, page 11

ONE-WAY TENSION ROLLER – Section II, page 12

### TAPE LEG LENGTH

Leading Tape Leg Length Adjustment – Section II, page 13

Changing Tape Leg Length from 70 to 48 mm [2-3/4 to 2 Inches] – Section II, page 13.

**Note** – Changing tape leg to 48 mm [2 inches] requires machine adjustment also. See Section I, "Special Set-Up Procedure – Changing Tape Leg Length", page 25.

**THIS PAGE IS BLANK**

## Special Set-Up Procedure

**WARNING** – Turn off electrical power and disconnect power cord from electrical supply before beginning special set-up procedure. If power cord is not disconnected, severe injury to personnel could result.

### TAPING HEADS

**WARNING** – Use care when working near blades as blades are extremely sharp. If care is not taken, severe injury to personnel could result.

### Changing Tape Leg Length

(From 70 to 48 mm [2-3/4 to 2 Inches])

The following changes to the case sealer will allow taping boxes 90 mm [3-1/2 inches] minimum height.

#### CASE SEALER FRAME

(Refer to Figure 5-1A)

1. Raise the upper head assembly (by turning crank handle counterclockwise). Remove and retain the two screws and washers from the normal position holes "A-A".
2. Remount and secure the stop bracket in the lower position "A" using the top holes and original fasteners. Relocate both the right and left stop brackets.

(Refer to Figures 5-1B and 5-1C)

1. Loosen, but do not remove, the two retaining screws that secure the upper taping head shown in Figure 5-1B.
2. Slide the head forward and lift straight up to remove it from the case sealer.
3. Lift the lower taping head, shown in Figure 5-1C, straight up to remove it from the case sealer bed.
4. Refer to Section II, Adjustments – Changing Tape Leg Length", page 13 for taping head set-up.

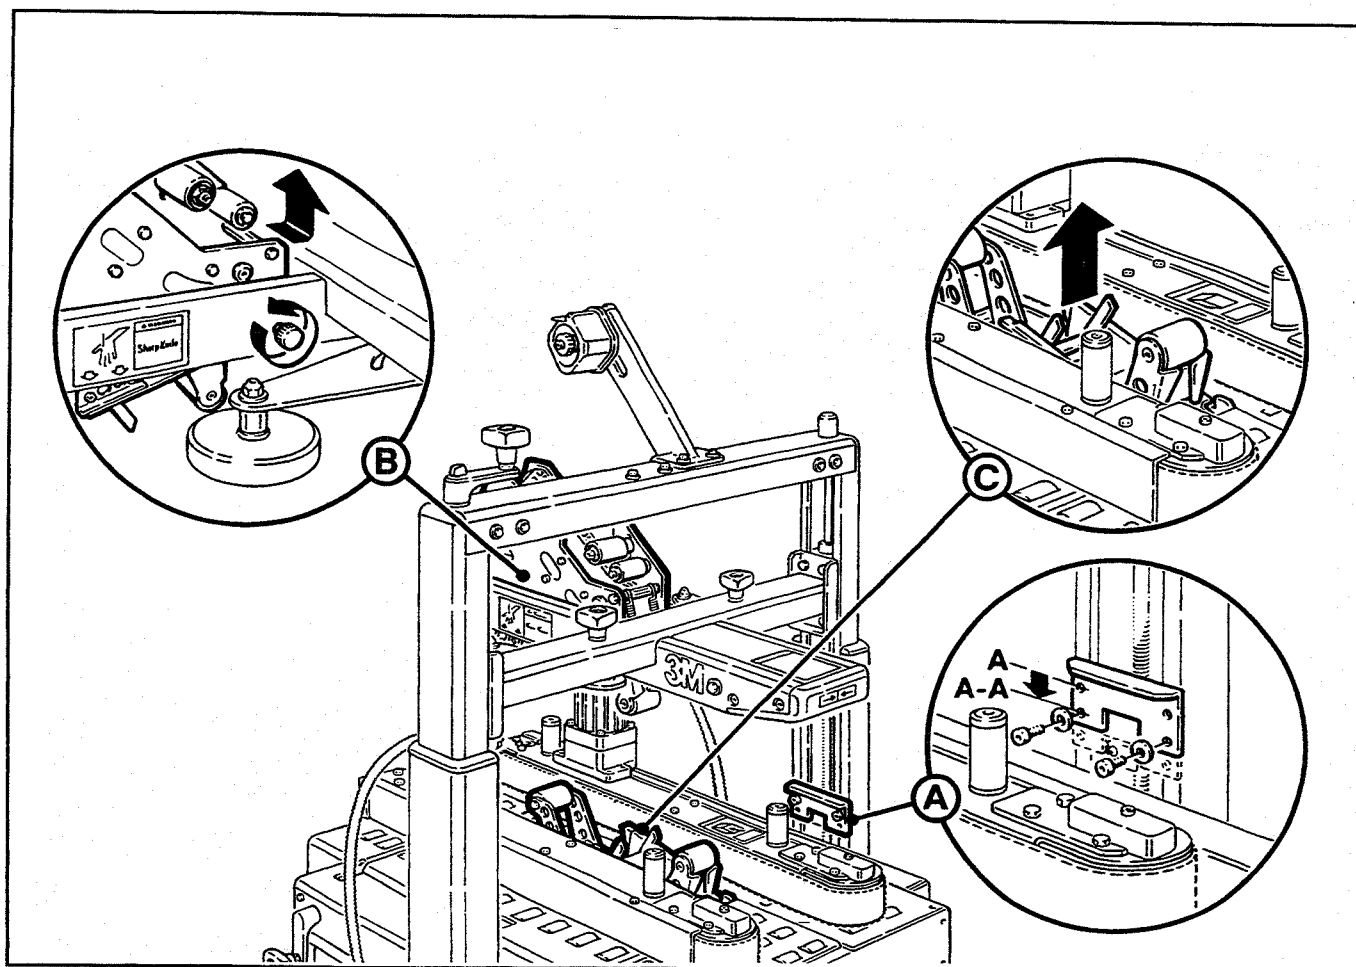


Figure 5-1 – Removing Taping Heads From Case Sealer

## Special Set-Up Procedure (Continued)

**⚠ WARNING** – Turn off electrical power and disconnect power cord from electrical supply before beginning special set-up procedure, if power cord is not disconnected, severe injury to personnel could result.

### Drive Belt Assembly Height

The drive belt assemblies can be raised 48 mm [2 inches] to provide better conveying of tall boxes. **This change increases the minimum box height that can be taped to 190 mm [7-1/4 inches].**

#### DISASSEMBLE – Figure 5-2

1. It is first necessary to raise the top taping head. Utilize the height adjustment crank and move the upper taping head to the fully raised position.
2. Remove and retain the screw (A), cap washer (B) and spacer (C) from the front and rear arm assembly pivots.
3. Lift belt drive assembly (D) up off the arm assembly pivots.

**Note** – Keep motor in vertical position to prevent gear oil from leaking out of motor.

#### REASSEMBLE – Figure 5-3

4. Reassemble the spacer (C) onto the front and rear arm assembly pivots first.
5. Install the belt drive assembly (D) onto the pivots and secure with the cap washers (B) and screws (A).

**Note** – Both drive belt assemblies must be installed at the same operating height.

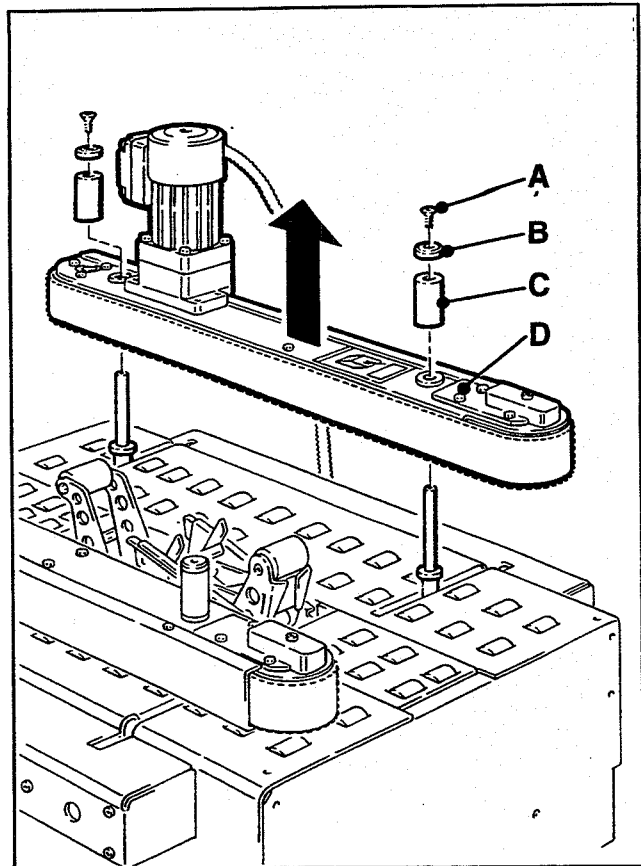


Figure 5-2 – Drive Belt Assembly, Disassembly

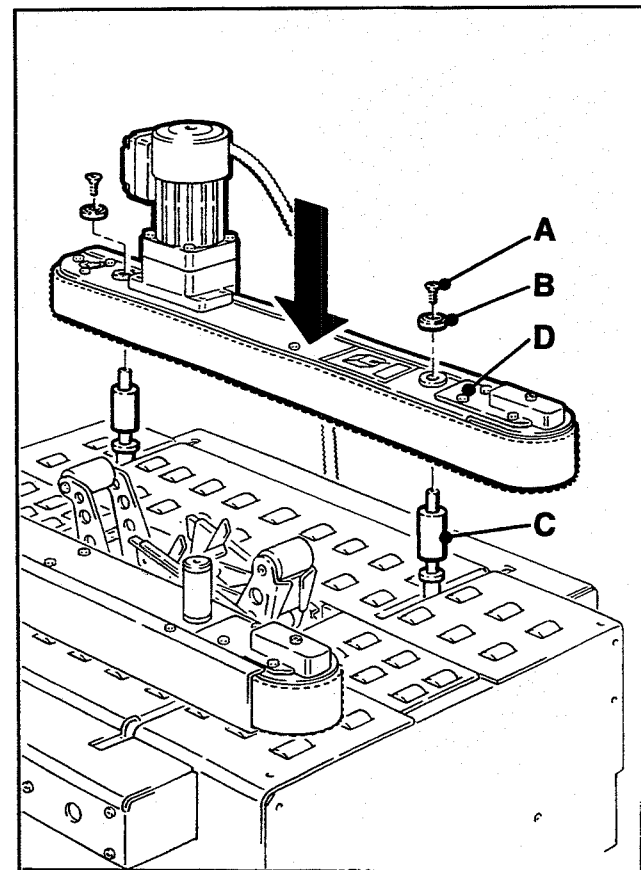


Figure 5-3 – Drive Belt Assembly, Reassembly

## Special Set-Up Procedure (Continued)



**WARNING – Turn off electrical power and disconnect power cord from electrical supply before beginning special set-up procedure, if power cord is not disconnected, severe injury to personnel could result.**

### Box Height Range

(Outer Column – Re-Positioning)



**WARNING – It is recommended that no less than two people assist on this set-up or severe injury or equipment damage could result.**

Moving the outer columns to the upper set of mounting holes increases the maximum box size (height) handled by the case sealer from 620 mm [24-1/2 inches] to 725 mm [28-1/2 inches]. **Note – this also increases the minimum box height from 120 mm [4-3/4 inches] to 210 mm [8-1/4 inches].**

To Re-position the outer columns:

1. Remove special nut from the bottom of each column lead screw. Figure 5-4A.
2. Remove plastic column cap from the top of each outer column as shown in Figure 5-4B.
3. Crank upper assembly up, out of plastic nuts. Lift upper assembly up and out of outer columns. Be careful not to damage lead screws. Figure 5-4C.



**WARNING – Upper assembly weight is approximately 35 kg [75 lbs]. Lift with hoist or be sure to have adequate help available to physically lift upper assembly up and out of outer columns.**



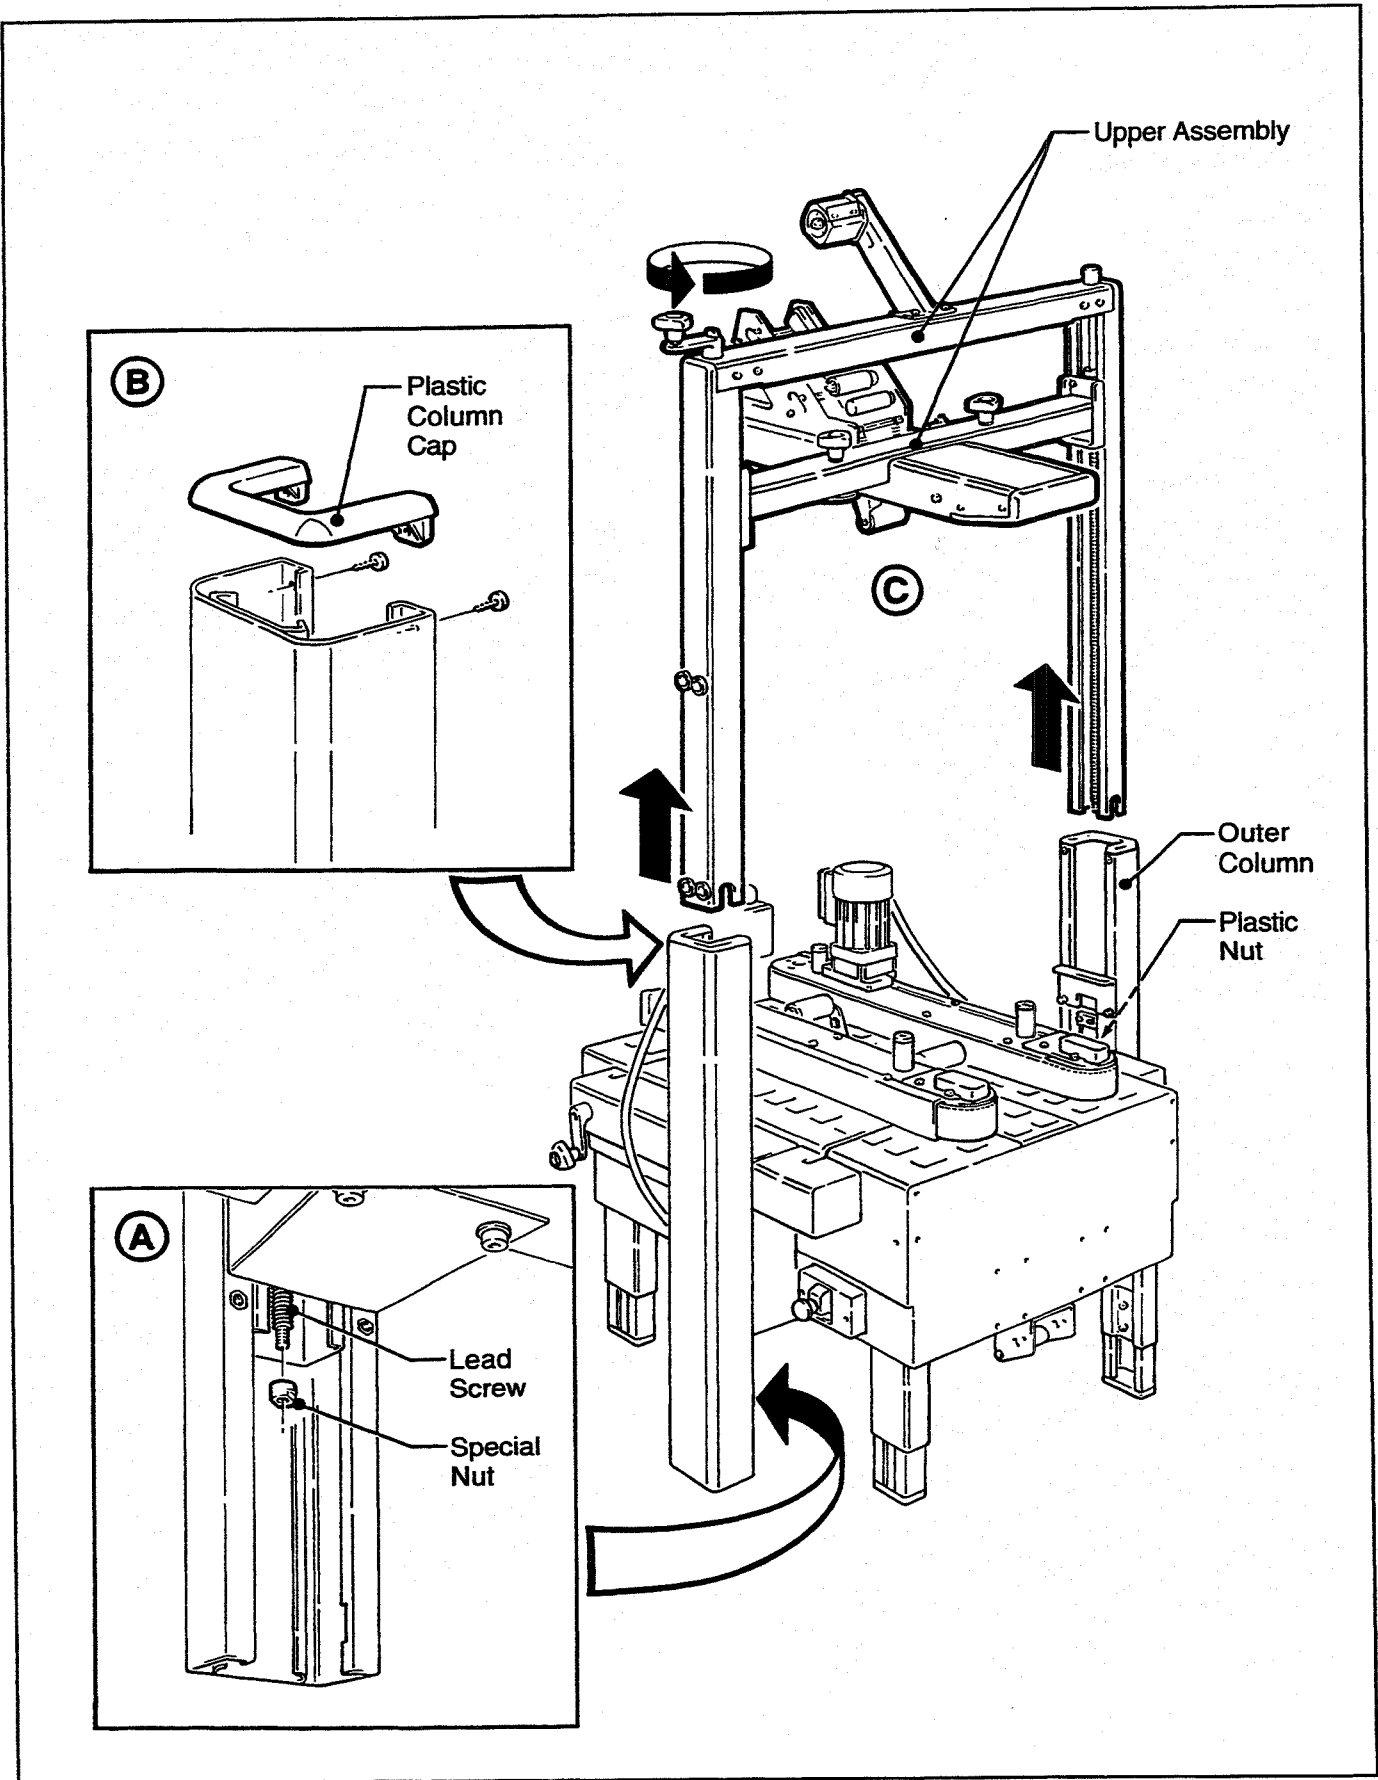


Figure 5-4 – Upper Frame Removal

## Special Set-Up Procedure (Continued)

**WARNING** – Turn off electrical power and disconnect power cord from electrical supply before beginning special set-up procedure, if power cord is not disconnected, severe injury to personnel could result.

4. Remove M6 x 16 hex hd screw, special washer and drive belt width adjustment crank. Figure 5-5.
5. Remove side covers (2) from each side of machine bed. Figure 5-5.

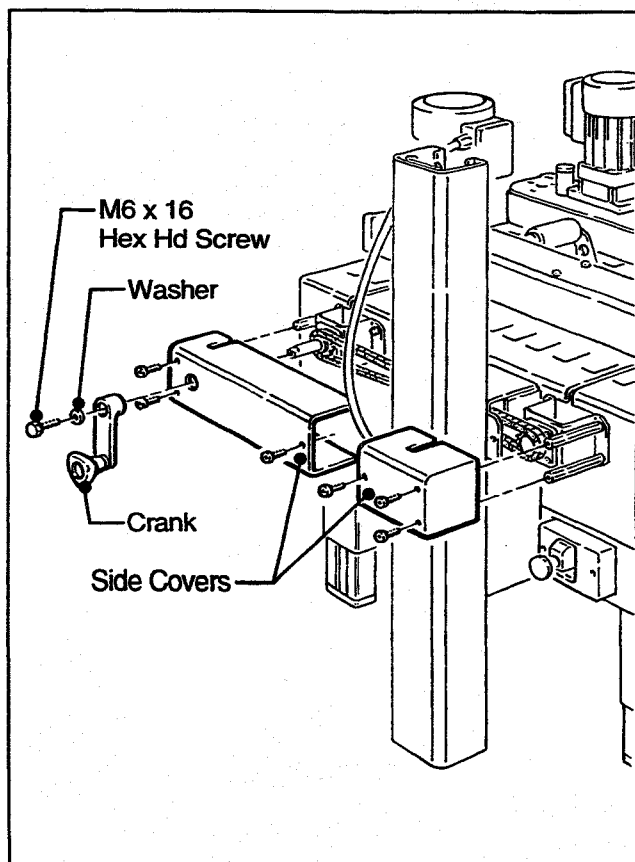


Figure 5-5 – Crank/Chain Guards

6. Remove chain. If necessary, slip width adjustment crank on shaft and rotate until chain master link is in convenient position for removal.

**Important** – Before removing chain, mark both front and rear sprockets/chain with chalk or paint to be sure sprockets/chain when re-assembled, will be in same position as before disassembly. Figure 5-6A and B. Do not rotate sprockets once chain is removed. (This would result in the right and left drive assemblies not being parallel.)

Remove chain master link and remove chain. Figure 5-6C.

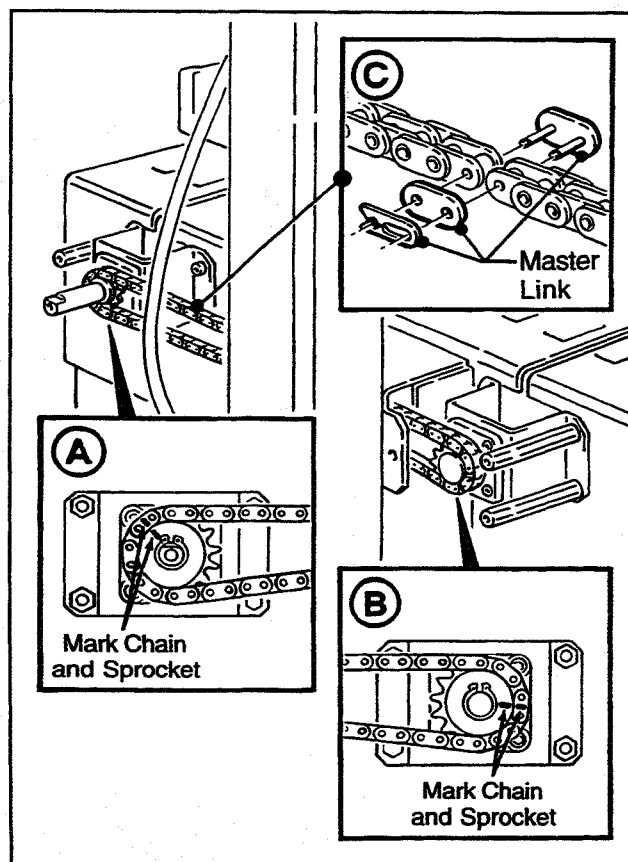


Figure 5-6 – Chain Removal

## Special Set-Up Procedure (Continued)



**WARNING** – Turn off electrical power and disconnect power cord from electrical supply before beginning special set-up procedure, if power cord is not disconnected, severe injury to personnel could result.

7. Remove fasteners (M8 x 16 socket head screws and M6 plain washers) that attach column spacers to machine bed and remove spacers/outer columns from machine bed. Figure 5-7A.
8. Remove fasteners (M8 x 20 socket head screws) that attach spacers to columns, move spacer down 100 mm [4 inches] to lower set of mounting holes and re-attach spacers to columns. Figure 5-7B.

9. Reverse procedure, Steps 7-1 to reassemble machine.

**Note** – When installing upper assembly back into machine (removed in Step 3), slide upper assembly down into outer columns until lead screws contact plastic nuts and support upper assembly. Then, slowly turn height adjustment crank counterclockwise until two "clicks" are heard, one at each plastic nut. Now the upper assembly can be cranked down (turn height adjustment crank clockwise) for installation of special nut on bottom of each lead screw.

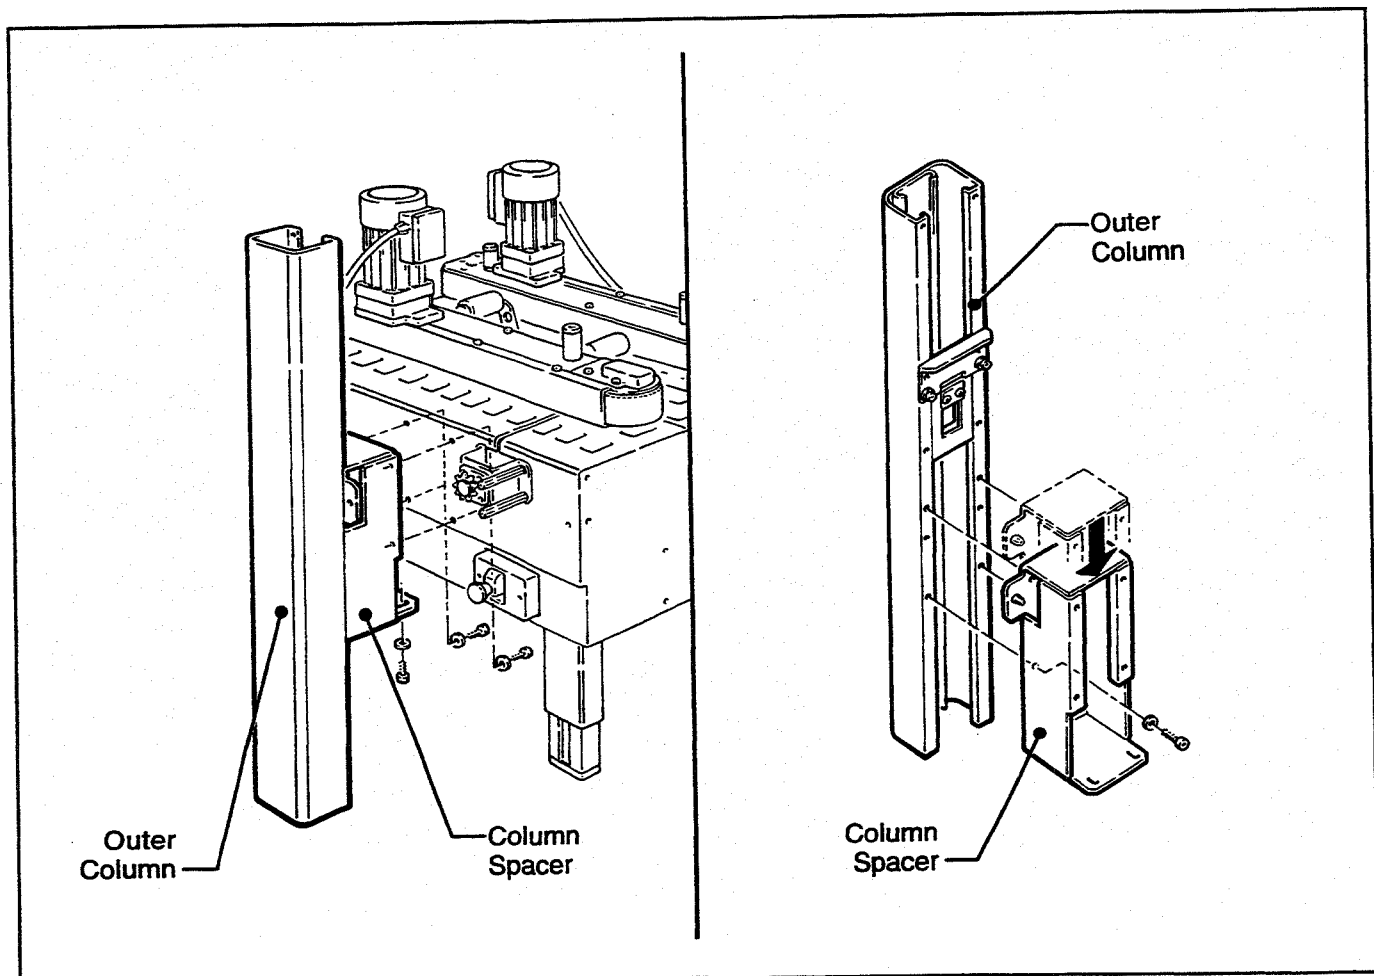


Figure 5-7 – Column Spacers/Columns

# Troubleshooting

The Troubleshooting Guide lists some possible machine problems, causes and corrections. Also see Section II, "Troubleshooting", pages 15 and 16 for taping head problems.


## Troubleshooting Guide

Problem	Cause	Correction
Drive belts do not convey boxes	Narrow boxes	Check machine specifications. Boxes are narrower than recommended, causing slippage and premature belt wear.
	Worn drive belts	Replace drive belts
	Top taping head does not apply enough pressure	Adjust the box height adjustment with the crank
	Top flap compression rollers in too tight	Readjust compression rollers
	Taping head applying spring holder missing	Replace spring holder
	Taping head applying spring set too high	Reduce spring pressure
Drive belts do not turn	Worn or missing friction rings	Replace friction rings
	Drive belt tension too low	Adjust belt tension
	Electrical disconnect	Check power and electrical plug
	Circuit breaker not at correct setting	Set to correct current value
	Motor not turning	Evaluate problem and correct
Upper and lower applying mechanisms interfere with each other	Machine adjusted below minimum	Set taping heads to apply 48 mm [2 inch] leg lengths
Drive belt break	Worn belt	Replace belt
	Excessive belt tension	Tension to 3.5 kg [7 lbs] per adjustment section
Squeaking noise as boxes pass through machine	Dry column bearings	Lubricate column bearings
	Defective column bearings	Replace column bearings
Tape not centered on box seam	Tape drum not centered	Reposition tape drum
	Box flaps not of equal length	Check box specifications

**THIS PAGE IS BLANK**

# Electrical Diagram

**WARNING** – Turn off electrical power supply and disconnect power cord from electrical supply before beginning service. If power cord is not disconnected, personnel could be exposed to dangerous voltages. Severe injury or equipment damage could result.

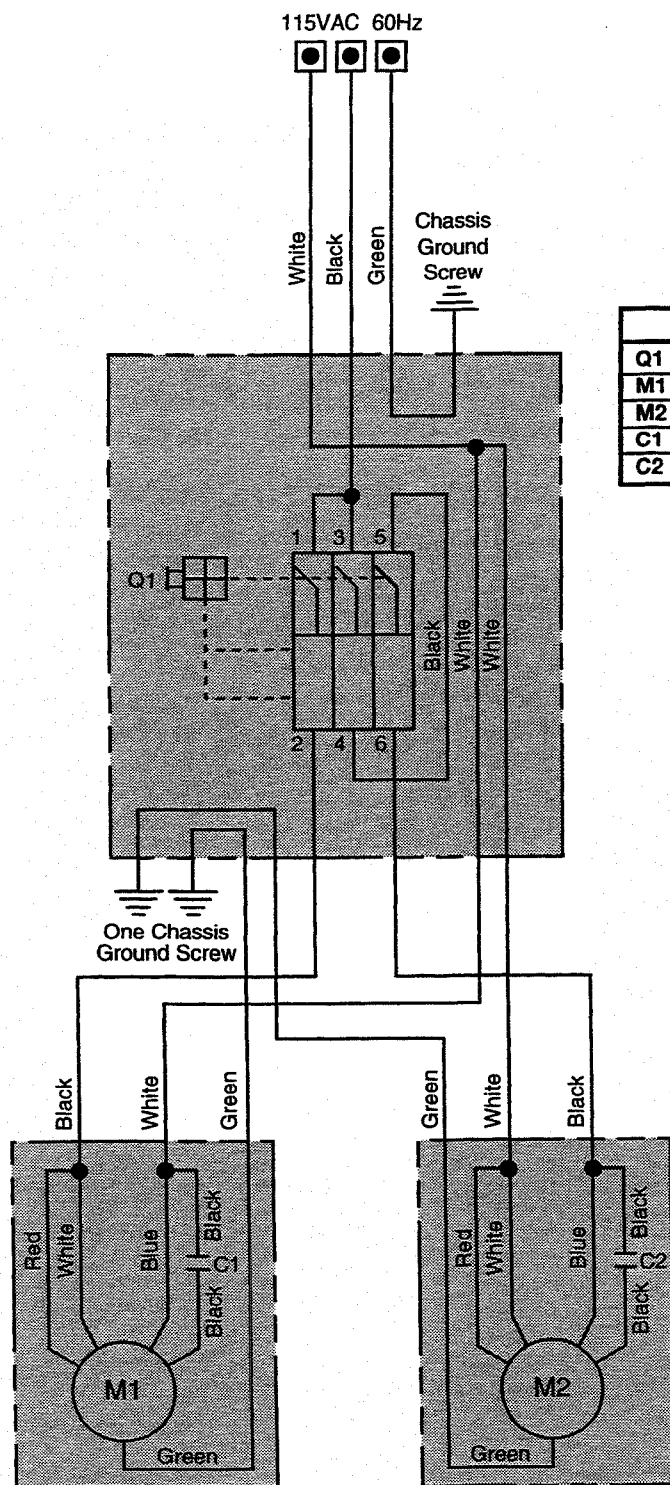

	Component	Ref. No.
Q1	On/Off Switch Circuit Breaker	4760-3
M1	L/S Motor	4759-13
M2	R/S Motor	4759-13
C1	Motor Run Capacitor 15 $\mu$ F 300VAC	4759-14
C2	Motor Run Capacitor 15 $\mu$ F 300VAC	4759-14

Rated Voltage – 600V  
 Rated Thermal Current – 25A  
 Set Point – 2.2A

## Notes:

1. Component & Reference Number Shown.
2. Refer to Parts List for Part Number.
3. Solid Lines Indicate Electrical Connections.
4. Dotted Lines Indicate Mechanical Connections.

To Reverse Direction of Rotation, Reverse Blue & Red Wires

Figure 7 – Electrical Diagram

**THIS PAGE IS BLANK**

## Spare Parts/Tools

### Spare Parts

The following parts periodically require replacement due to normal wear. They should be ordered immediately and kept on hand to keep the case sealer in production.

#### 800a3 Adjustable Case Sealer, Type 29400

Qty	Section/Ref. No.	Part Number	Description
2	II/2949-15	78-8057-6181-0	Roller – Applying
2	II/2950-5, 2955-5	78-8057-6180-2	Roller – Buffing
1	II/2950-10	78-8070-1274-1	* Spring – Upper Extension (Silver)
2	II/2952-2	78-8028-7899-7	* Blade – 3.5 Inch [89 mm]
4	II/2952-12	78-8052-6602-6	* Spring – Cutter
1	II/2955-10	78-8070-1273-3	* Spring – Lower Extension (Black)
2	I/4759-55	78-8076-5452-6	Belt – Drive, W/Hook
2	II/2952-6	78-8070-1390-5	Spring – Torsion

\* Note – These spare parts are supplied with the tool kit that comes with your machine and should also be ordered separately as used, to keep the case sealer in production.

### Tool Kit

A tool kit, packaged separately and included with your machine, contains the necessary wrenches for use with the metric fasteners on the case sealer. The threading tool, part number 78-8076-4726-4, contained in the tool kit is available as a stock replacement item and can be ordered separately.

### Label Kit

A label kit, part number 78-8098-9034-2 is available as a stock item and contains all the safety and information labels used on the case sealer or separate labels can be ordered from the parts list, page 63.



---

## Options/Accessories

---

For additional information on the options/accessories listed below, contact your 3M Representative.

Part Number	Option/Accessory
78-8052-6553-1	Box Hold Down Attachment, Model 18500
78-8069-3983-7	Caster Kit Attachment
78-8069-3924-1	Conveyor Extension Attachment
78-8069-3926-6	Low Tape Sensor Kit
78-8079-5505-5	Three Flap Folder Kit
78-8079-5560-0	Tape Application Sensor Kit
78-8095-4852-8	3 Inch Tape Edge Fold Kit (Upper)
78-8095-4853-6	3 Inch Tape Edge Fold Kit (Lower)

---

## Replacement Parts Illustrations and Parts List

---

### 800a3 Adjustable Case Sealer, Type 29400 With AccuGlide™ II STD (3 Inch) Taping Heads

1. Refer to first illustration, **800a3 Assembly**, for the **Figure Number** that identifies a specific portion of the machine.
2. Refer to the Figure or Figures to determine the individual parts required and the part reference number.
3. The parts list that follows each illustration, includes the part number and part description for the parts in that illustration.


**Note** – The complete description has been included for standard fasteners and some commercially available components. This has been done to allow obtaining these standard parts locally should the customer elect to do so.

4. Refer to the first page of this instruction manual for replacement parts ordering information.

**IMPORTANT** – Not all the parts listed are normally stocked items. Some parts or assemblies shown are available only on a special order basis. Contact 3M/Tape Dispenser Parts to confirm item availability.

**THIS PAGE IS BLANK**

## 800a3 Adjustable Case Sealer W/AccuGlide™ II STD (3 Inch) Taping Heads

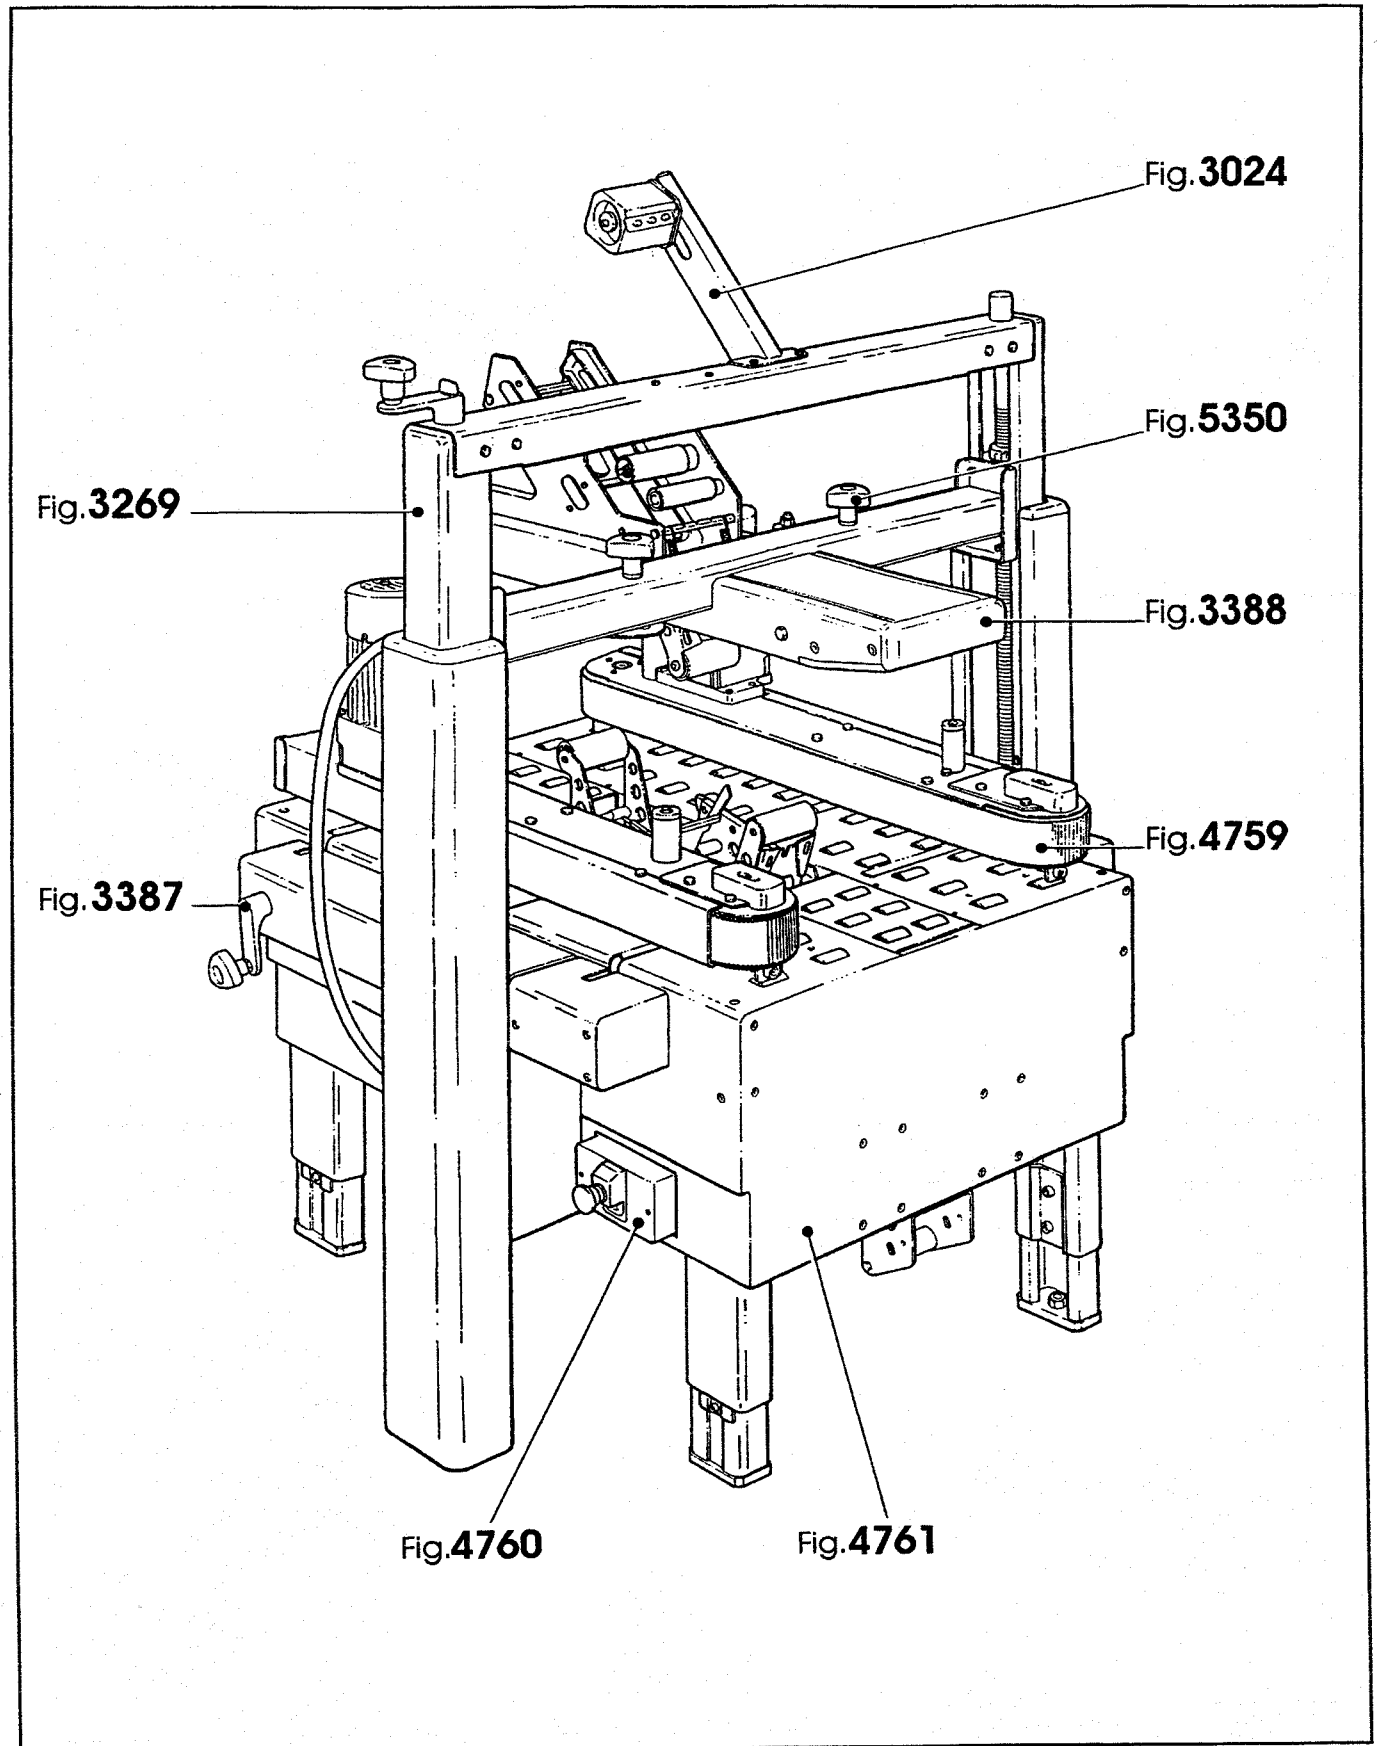

**800a3 Assembly**

800a3 Adjustable Case Sealer

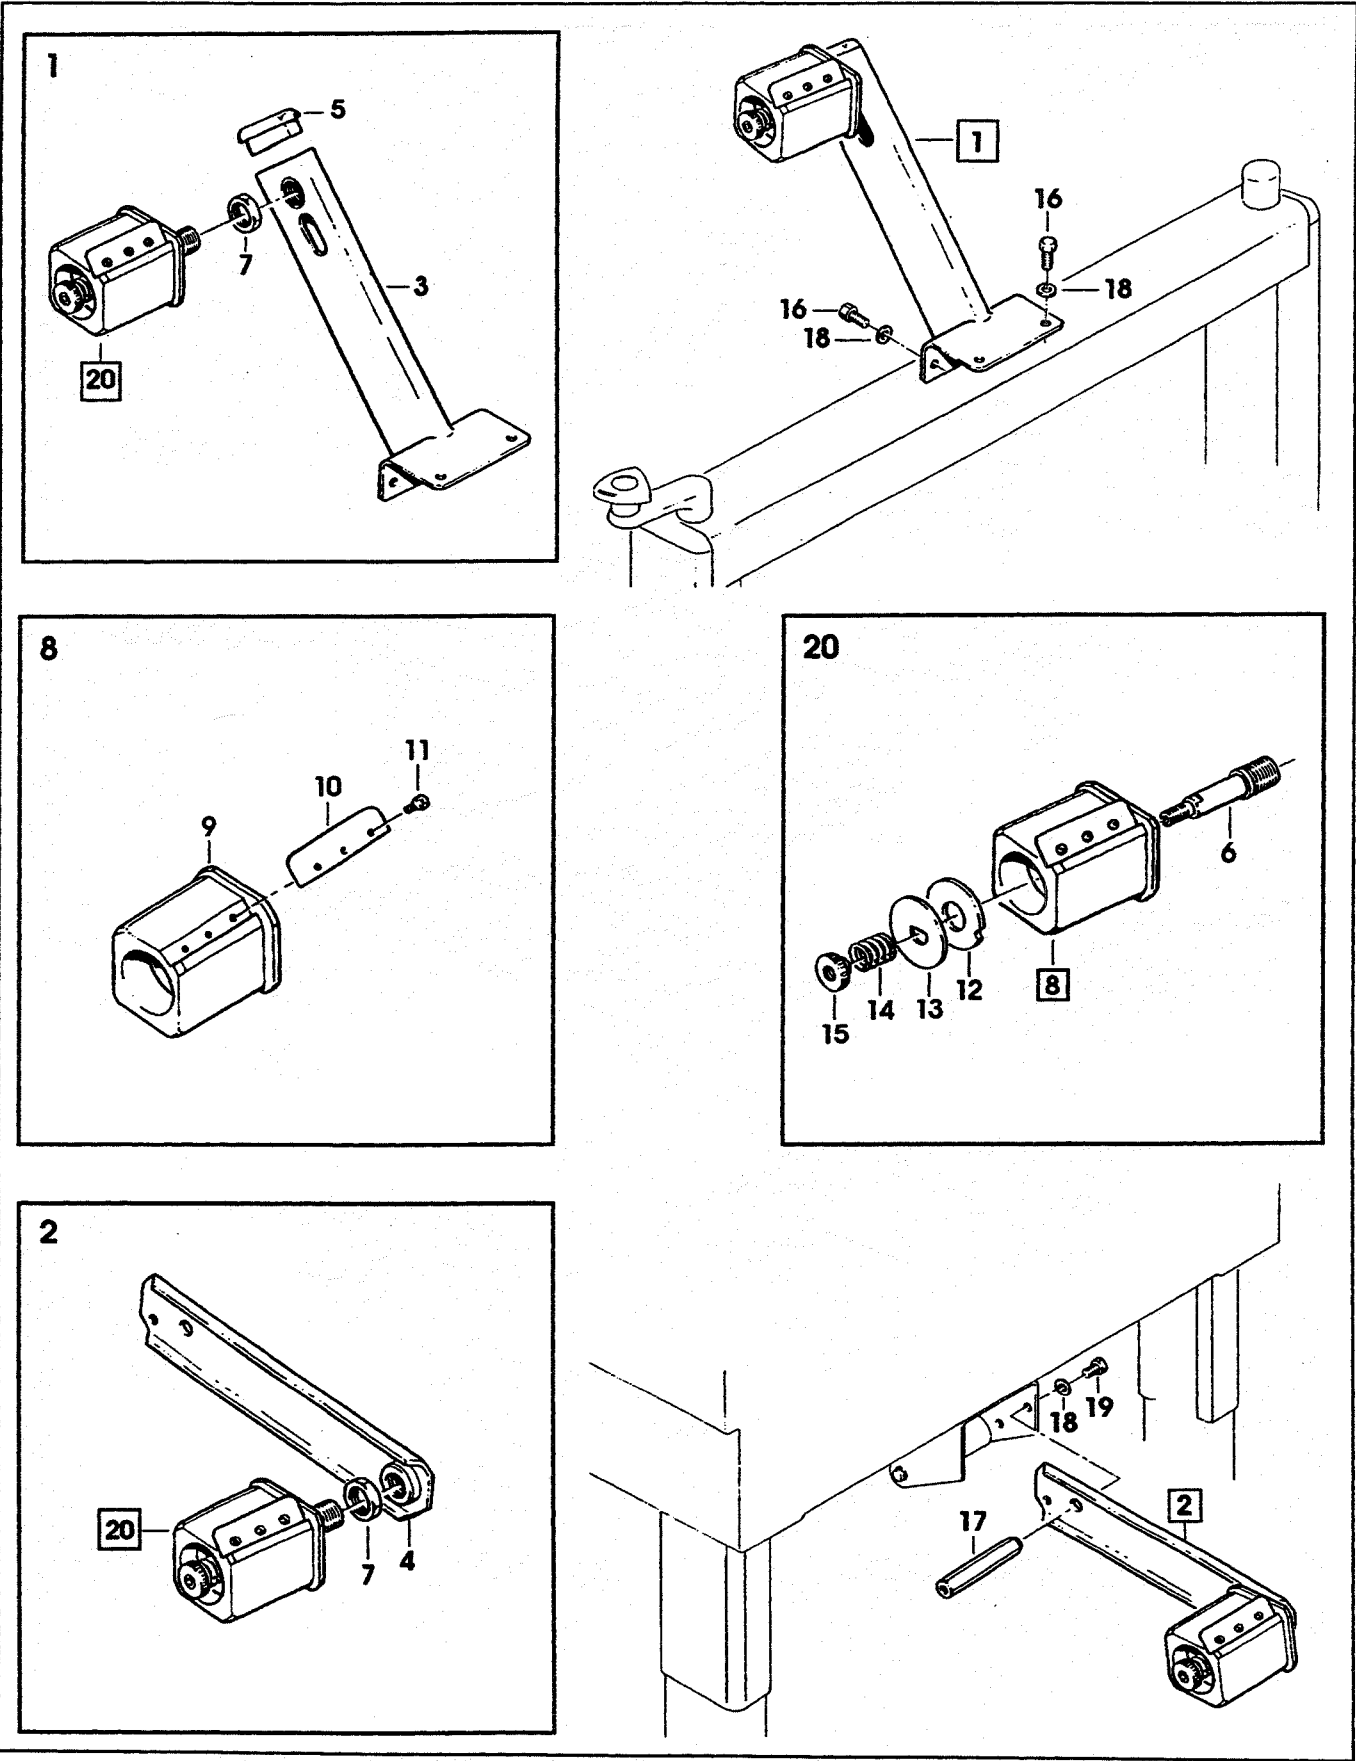


Figure 3024

**Figure 3024**

<b>Ref. No.</b>	<b>3M Part No.</b>	<b>Description</b>
3024-1	78-8076-4934-4	Tape Drum Bracket Assembly
3024-2	78-8076-4935-1	Tape Drum Bracket Assembly
3024-3	78-8070-1566-0	Bracket – Tape Drum
3024-4	78-8070-1395-4	Bracket – Bushing Assembly
3024-5	78-8070-1568-6	Cap – Bracket
3024-6	78-8060-8462-6	Shaft – Tape Drum 3 Inch Head
3024-7	78-8017-9169-6	Nut – M18 x 1
3024-8	78-8076-4731-4	Tape Drum Assembly – 3 Inch Wide
3024-9	78-8054-8815-8	Tape Drum Assembly
3024-10	78-8054-8816-6	Leaf Spring
3024-11	26-1002-5753-9	Screw – Self-Tapping
3024-12	78-8060-8172-1	Washer – Friction
3024-13	78-8052-6271-0	Washer – Tape Drum
3024-14	78-8054-8826-5	Spring
3024-15	78-8060-7851-1	Ring Nut – Adjusting
3024-16	78-8032-0375-7	Screw – Hex Hd, M6 x 16
3024-17	78-8076-4742-1	Spacer – Tape Drum Bracket
3024-18	26-1000-0010-3	Washer – M6, Flat
3024-19	78-8010-7169-3	Screw – Hex Hd, M6 x 12
3024-20	78-8076-4732-2	Tape Drum Assembly – 3 Inch Head, W/O Bracket/Lock/Plate

800a3 Adjustable Case Sealer

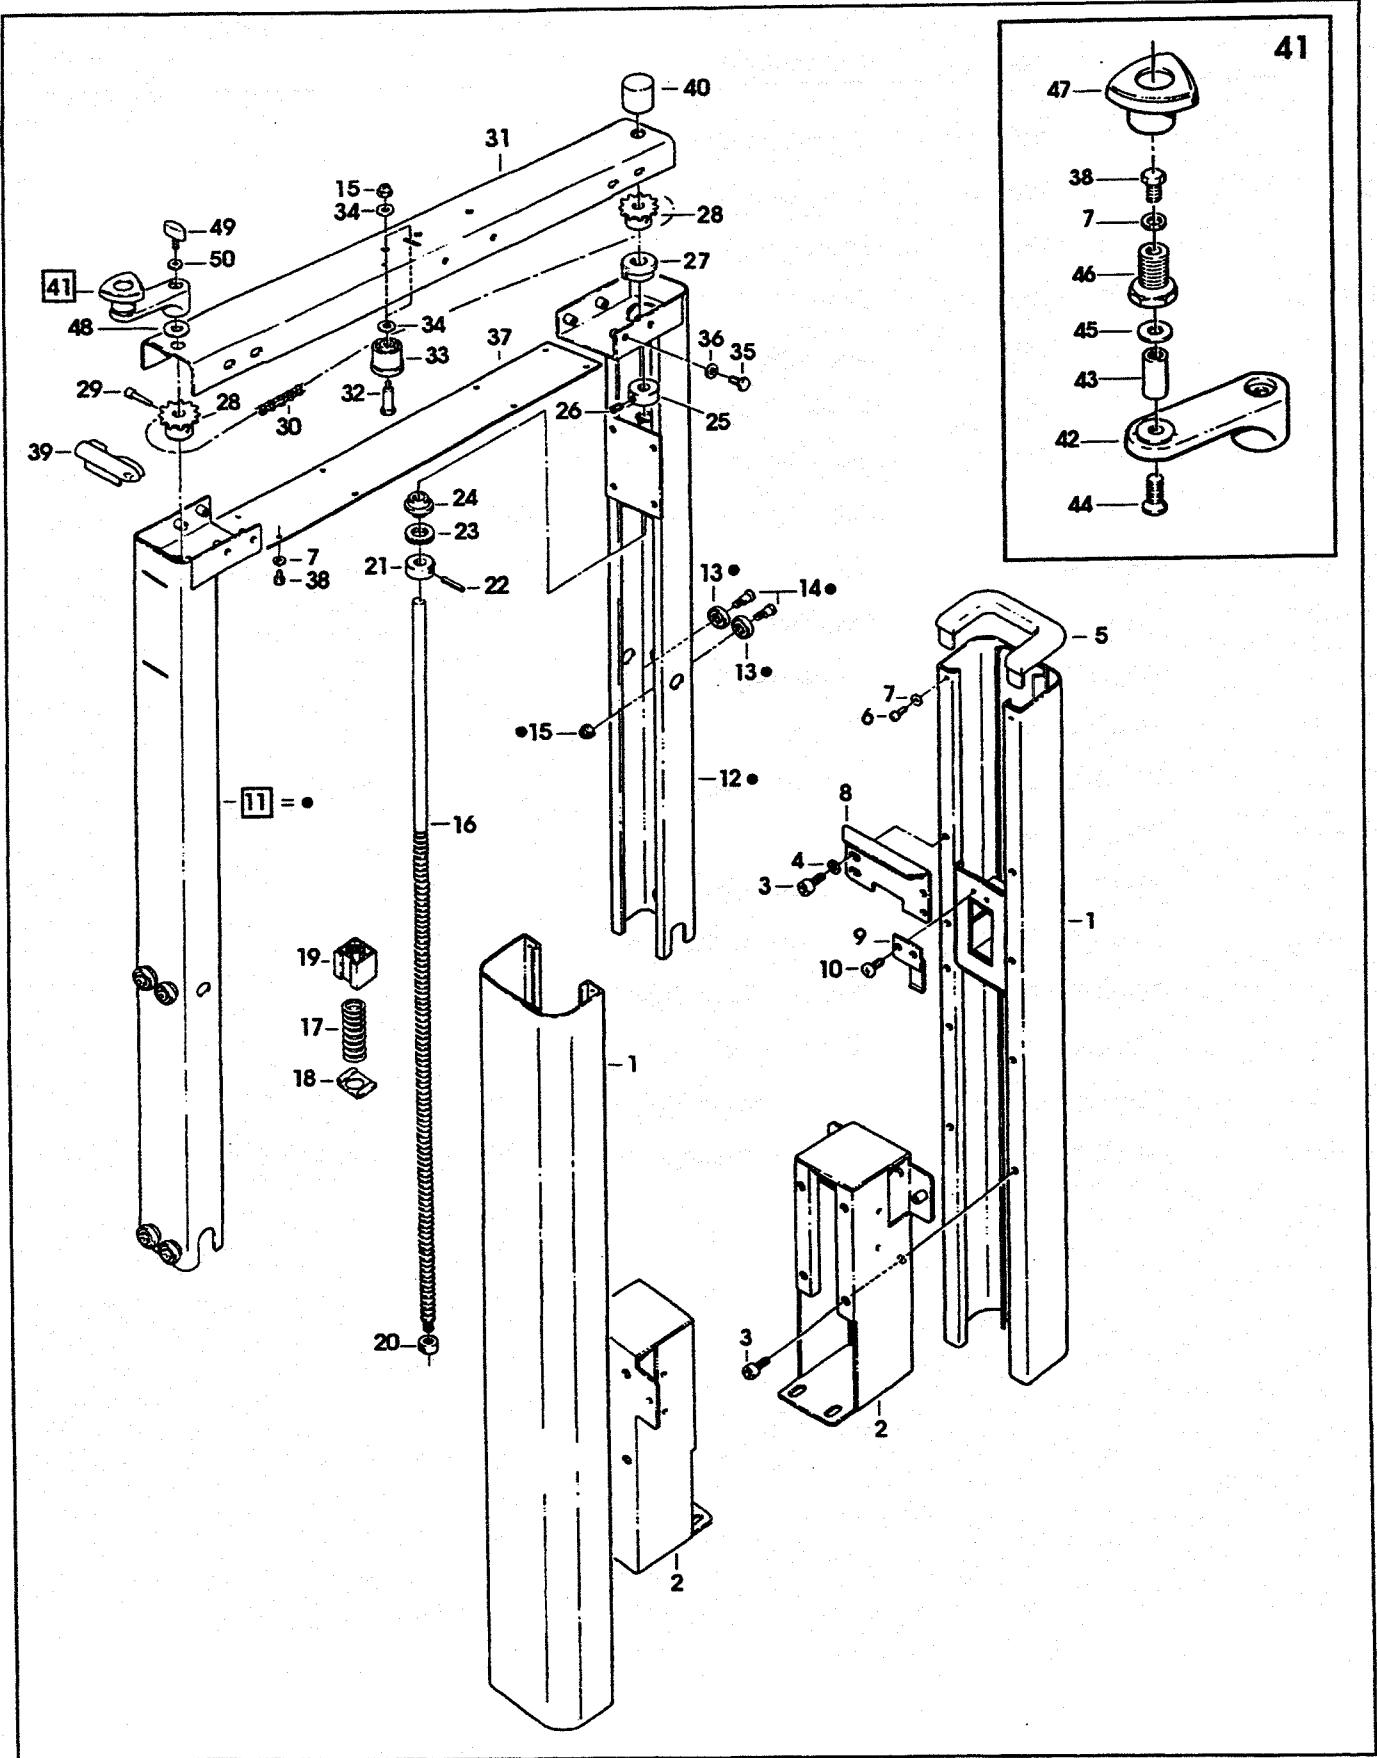


Figure 3269


**Figure 3269**

Ref. No.	3M Part No.	Description
3269-1	78-8060-8489-9	Column – Outer
3269-2	78-8076-5426-0	Plate
3269-3	26-1003-7964-8	Screw – Soc Hd, M8 x 20
3269-4	78-8017-9318-9	Washer – Plain 8 mm
3269-5	78-8060-8491-5	Cap – Column
3269-6	26-1002-4955-1	Screw – Self-Tap, 8P x 13
3269-7	78-8005-5740-3	Washer – Plain 4 mm
3269-8	78-8060-8492-3	Stop – Height
3269-9	78-8076-5482-3	Plate – Nut Stop
3269-10	78-8060-8087-1	Screw – M5 x 10
3269-11	78-8060-8494-9	Column Assembly – Inner
3269-12	78-8060-8495-6	Column – Inner
3269-13	78-8054-8617-8	Bearing – Special
3269-14	78-8054-8589-9	Screw – Special
3269-15	26-1003-6916-9	Nut – Locking M6, Plastic Insert
3269-16	78-8060-8496-4	Lead Screw
3269-17	78-8054-8969-3	Spring
3269-18	78-8054-8970-1	Bed Plate For Spring
3269-19	78-8054-8571-7	Nut – Plastic
3269-20	78-8054-8968-5	Nut – Special
3269-21	78-8054-8585-7	Collar
3269-22	78-8054-8586-5	Pin
3269-23	78-8054-8584-0	Spacer
3269-24	78-8054-8583-2	Bushing
3269-25	78-8060-8497-2	Bushing – Lead Screw
3269-26	78-8059-5617-0	Set Screw – M6 x 8
3269-27	78-8060-8498-0	Bushing – Inner Column
3269-28	78-8060-8499-8	Sprocket – 3/8 Inch Z=13
3269-29	26-1003-7946-5	Screw – Soc Hd, M4 x 25
3269-30	78-8076-4818-9	Chain – 3/8 Inch Pitch, 197 Pitch
3269-31	78-8076-5427-8	Housing – Chain
3269-32	78-8060-7878-4	Idler Screw
3269-33	78-8070-1503-3	Roller – Chain Tensioning
3269-34	78-8042-2919-9	Washer – Triple, M6
3269-35	26-1003-5828-7	Screw – Hex Hd, M6 x 12
3269-36	26-1000-0010-3	Washer – Flat M6
3269-37	78-8076-5428-6	Cover
3269-38	78-8010-7157-8	Screw – Hex Hd, M4 x 10
3269-39	78-8070-1505-8	Cap – Inner Column
3269-40	78-8070-1506-6	Cover – Screw
3269-41	78-8076-4807-2	Crank Assembly
3269-42	78-8076-5422-9	Crank
3269-43	78-8070-1509-0	Shaft – Crank
3269-44	26-1005-5316-8	Screw – Flat Hd Hex Dr, M5 x 16
3269-45	78-8070-1510-8	Washer – Nylon, 7 x 15 x 1
3269-46	78-8070-1511-6	Bushing
3269-47	78-8070-1512-4	Knob – VTR-B-M12
3269-48	78-8076-4800-7	Washer – Crank
3269-49	78-8076-4821-3	Key – Stop
3269-50	78-8076-4809-8	Washer – Crank



# 800a3 Adjustable Case Sealer

FRONT

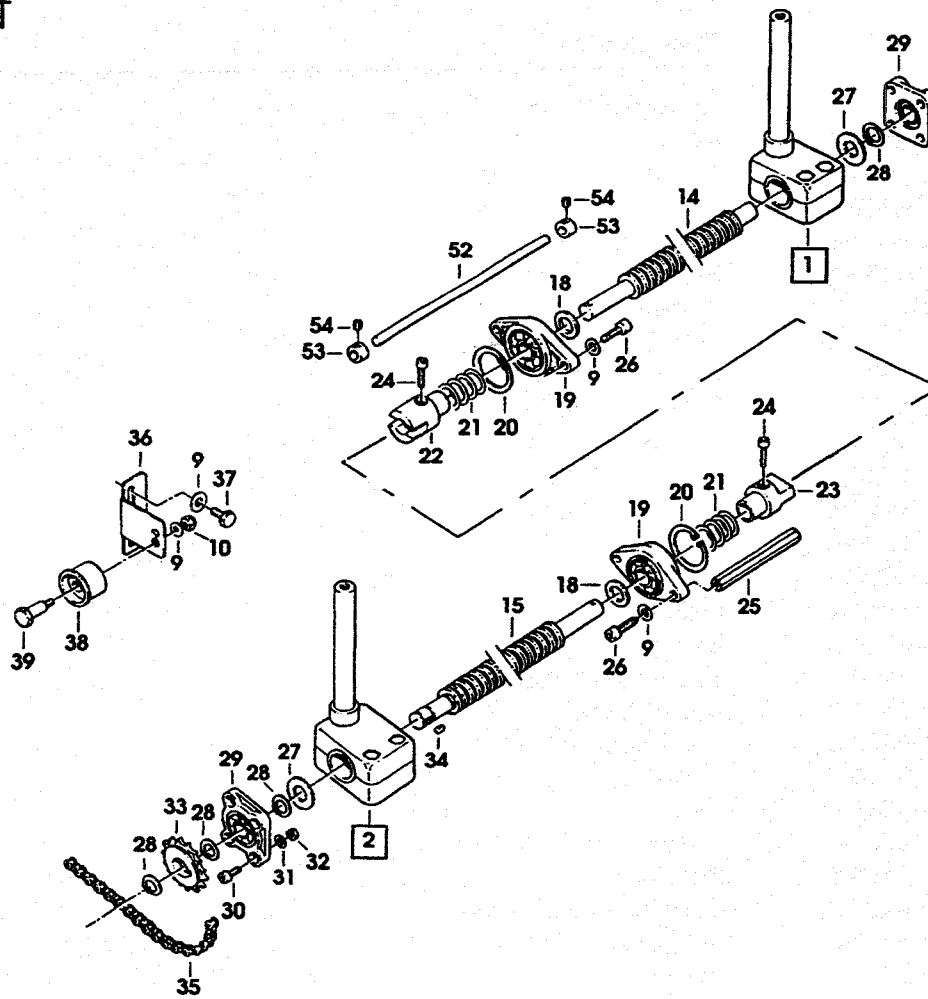

• = Pos.3 and 4  
to be ordered  
always together

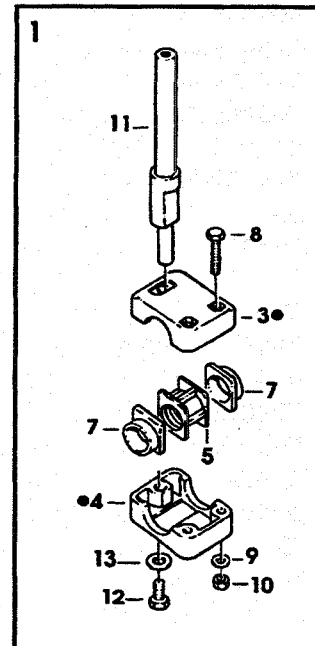
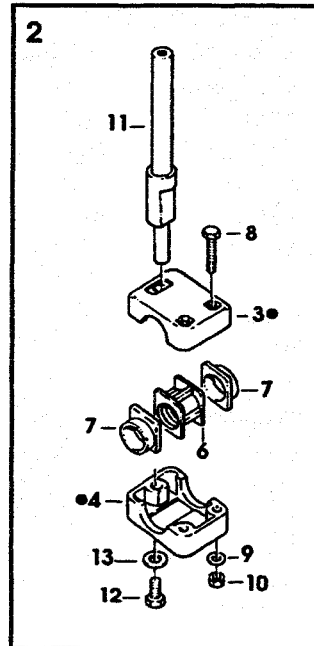


Figure 3387/1 of 2

**Figure 3387** (page 1 of 2)

Ref. No.	3M Part No.	Description
3387-1	78-8076-5399-9	Block Assembly – R/H
3387-2	78-8076-5400-5	Block Assembly – L/H
3387-3	78-8076-5401-3	Block – Upper
3387-4	78-8076-5402-1	Block – Lower
3387-5	78-8076-5403-9	Nut – Block, R/H
3387-6	78-8076-5404-7	Nut – Block, L/H
3387-7	78-8076-5405-4	Bushing – Block
3387-8	78-8076-5239-7	Screw – Hex Hd, M6 x 50
3387-9	26-1000-0010-3	Washer – Flat M6
3387-10	26-1003-6916-9	Nut – Locking M6, Plastic Insert
3387-11	78-8076-5406-2	Shaft – Drive Mount
3387-12	26-1003-5842-8	Screw – Hex Hd, M8 x 20
3387-13	78-8017-9318-9	Washer – Plain 8 mm
3387-14	78-8076-5407-0	Screw – R/H
3387-15	78-8076-5408-8	Screw – L/H
3387-16	78-8076-5409-6	Screw – Handle, R/H
3387-17	78-8076-5410-4	Screw – Handle, L/H
3387-18	78-8076-5411-2	Spacer – Screw
3387-19	78-8076-5412-0	Flange – W/Bearing
3387-20	78-8060-8010-3	Snap Ring – 42 mm Shaft
3387-21	78-8076-5413-8	Spring
3387-22	78-8076-5414-6	Coupling – Screw, Female
3387-23	78-8076-5415-3	Coupling – Screw, Male
3387-24	26-1003-7946-5	Screw – Soc Hd, M4 x 25
3387-25	78-8076-5416-1	Spacer – Hex, 10 x 107
3387-26	78-8010-7211-3	Screw – Soc Hd, M6 x 25
3387-27	78-8076-5417-9	Spacer

# 800a3 Adjustable Case Sealer

REAR

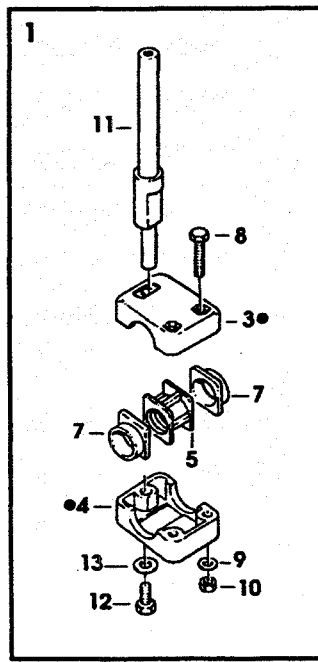
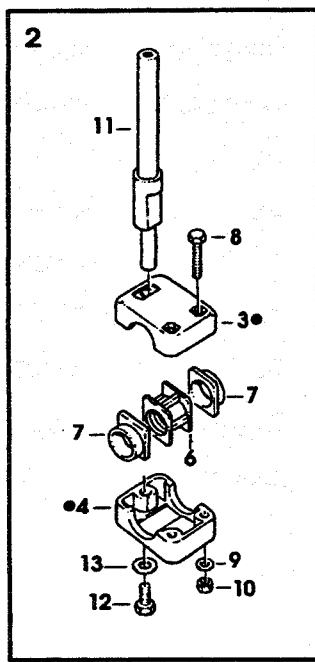
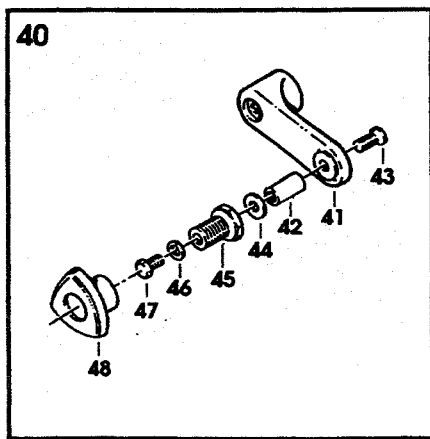
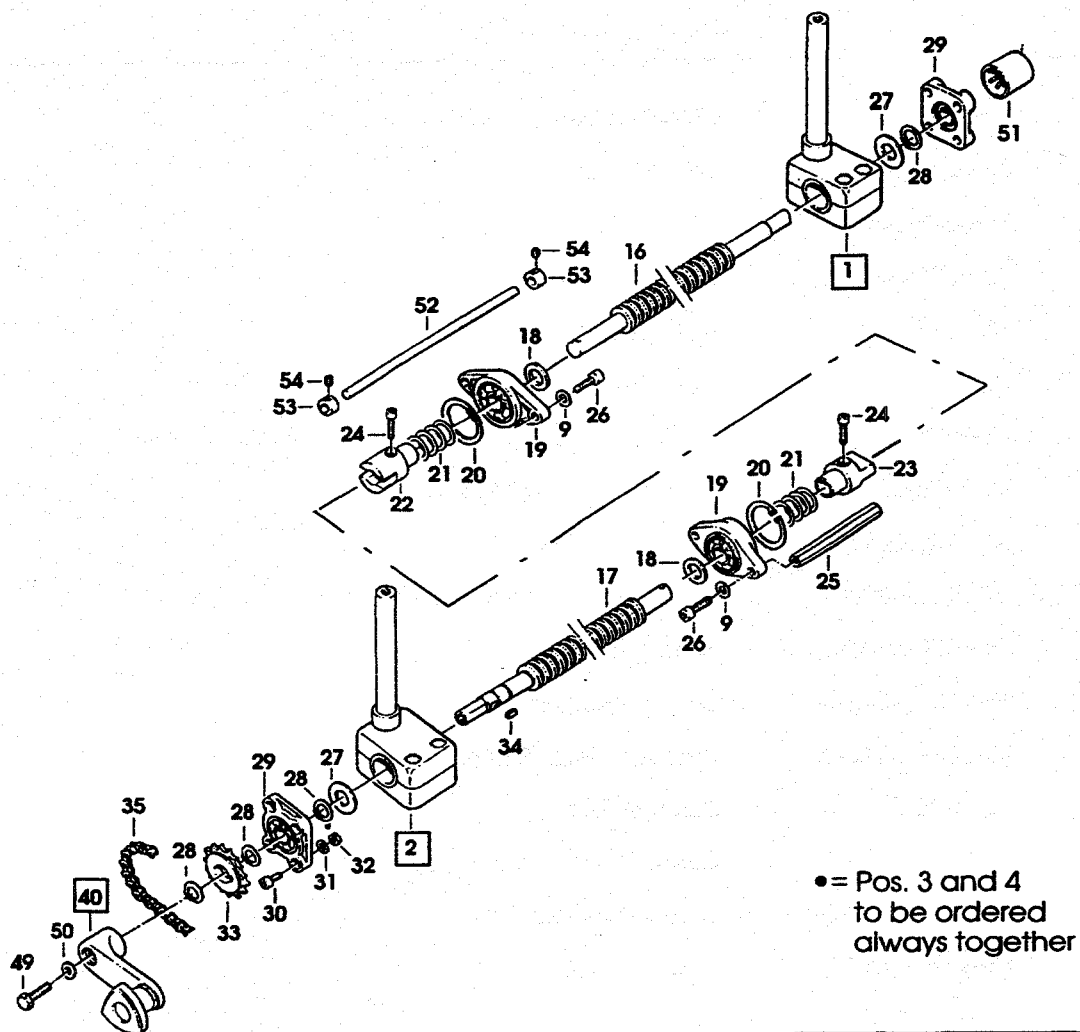


Figure 3387/2 of 2

**Figure 3387** (page 2 of 2)

Ref. No.	3M Part No.	Description
3387-28	78-8017-9079-7	Ring – Snap For 15 mm Shaft
3387-29	78-8076-5418-7	Support – Screw
3387-30	26-1003-7949-9	Screw – Soc Hd Hex Soc, M5 x 12
3387-31	78-8005-5741-1	Washer – Plain M5
3387-32	78-8010-7417-6	Nut – Hex M5
3387-33	78-8076-5419-5	Sprocket – 3/8 Inch Z=16
3387-34	78-8046-8135-7	Key – 5 x 5, 12 mm
3387-35	78-8076-5420-3	Chain – 3/8 Inch, 133 Links
3387-36	78-8076-5421-1	Support – Tension Roller
3387-37	78-8010-7169-3	Screw – Hex Hd, M6 x 12
3387-38	78-8070-1503-3	Roller – Chain Tensioning
3387-39	78-8060-7878-4	Idler Screw
3387-40	78-8076-4807-2	Crank Assembly
3387-41	78-8076-5422-9	Crank
3387-42	78-8070-1509-0	Shaft – Crank
3387-43	26-1005-5316-8	Screw – Flat Hd Hex Dr, M5 x 16
3387-44	78-8070-1510-8	Washer – Nylon, 7 x 15 x 1
3387-45	78-8070-1511-6	Bushing
3387-46	78-8005-5740-3	Washer – Plain 4 mm
3387-47	78-8010-7157-8	Screw – Hex Hd, M4 x 10
3387-48	78-8070-1512-4	Knob – VTR-B-M12
3387-49	78-8032-0375-7	Screw – Hex HD, M6 x 16
3387-50	78-8076-4809-8	Washer – Crank
3387-51	78-8070-1506-6	Cover – Screw
3387-52	78-8076-5463-3	Shaft
3387-53	78-8076-5424-5	Block
3387-54	78-8076-5425-2	Set Screw – M4 x 3

800a3 Adjustable Case Sealer

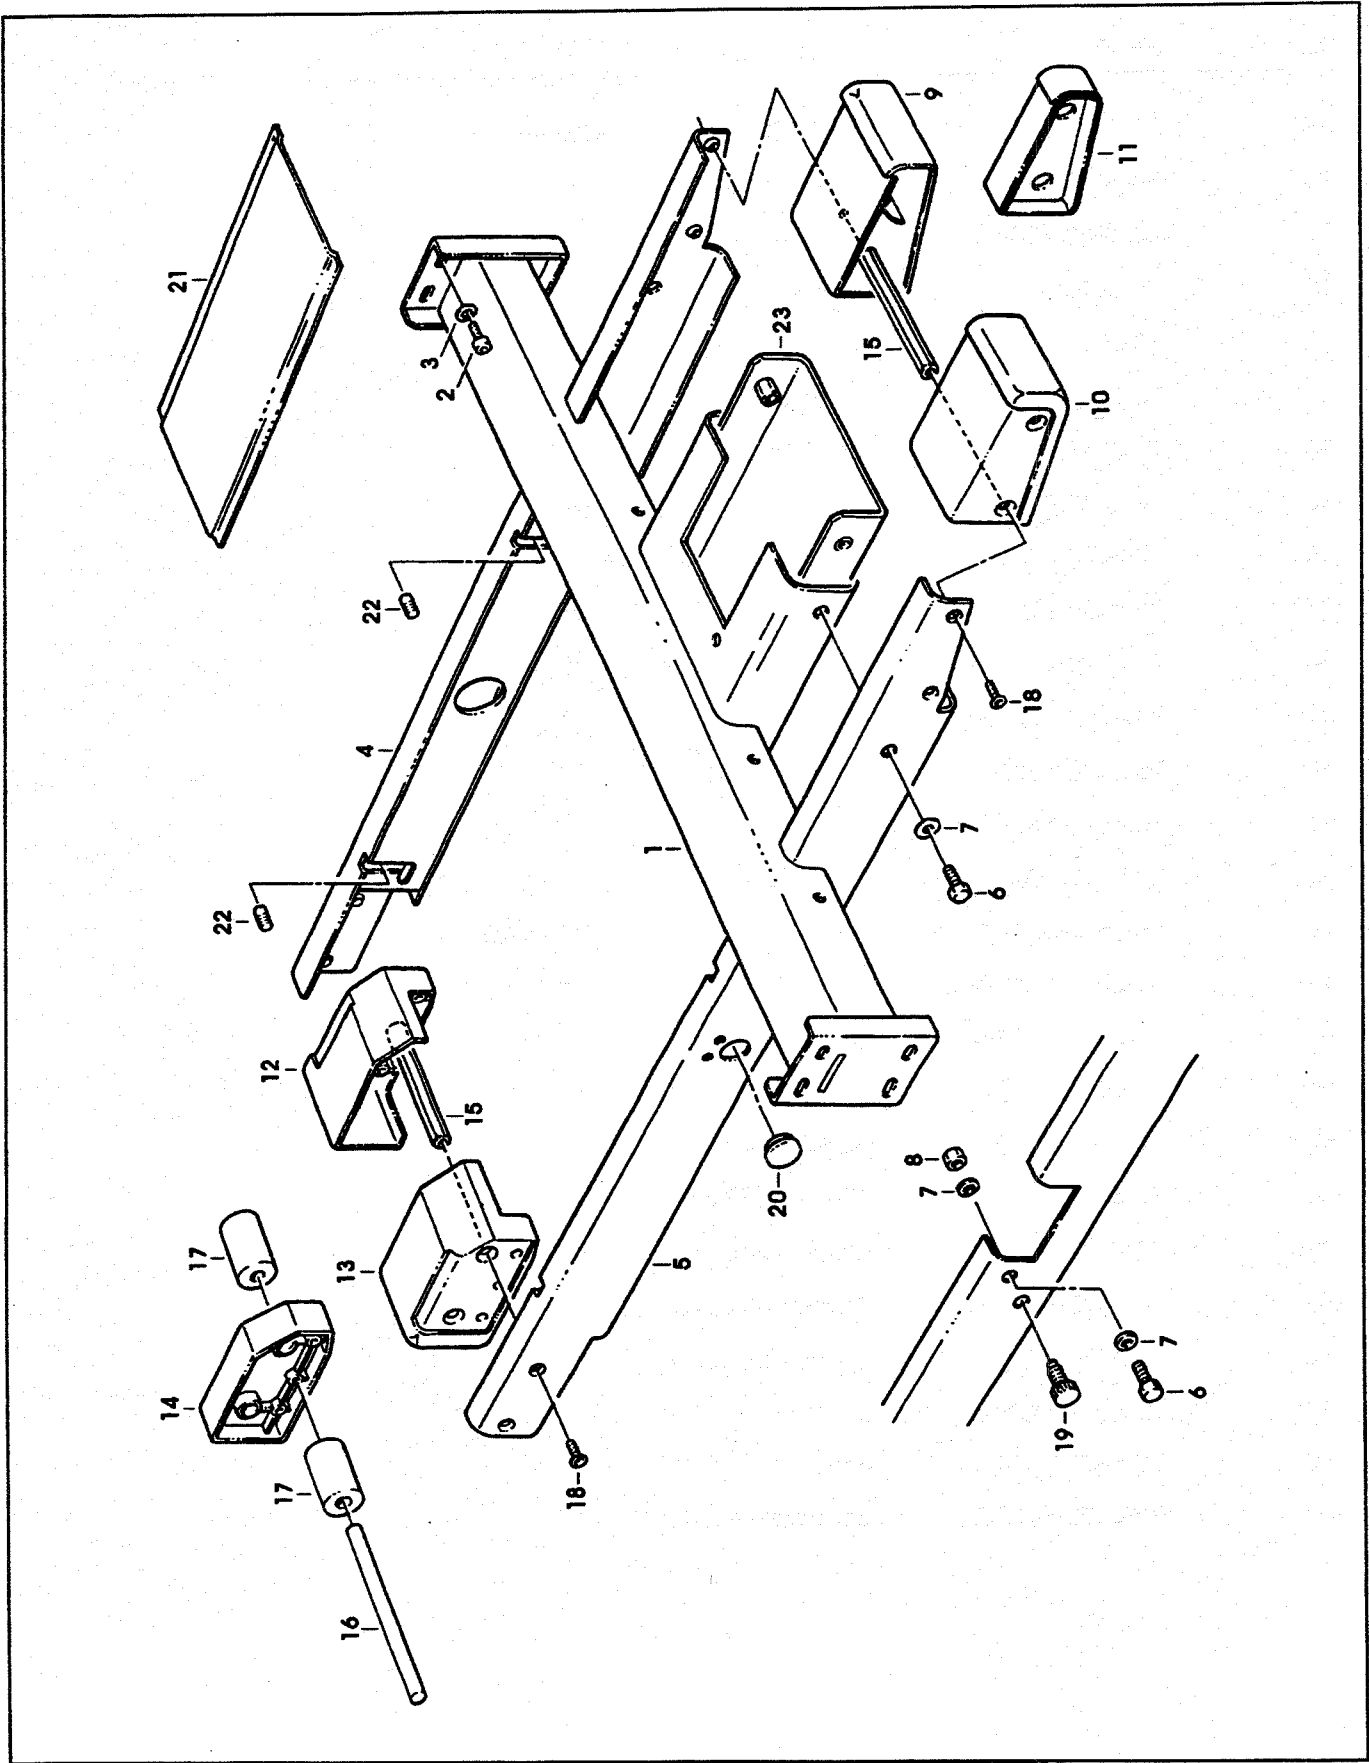


Figure 3388

**Figure 3388**

Ref. No.	3M Part No.	Description
3388-1	78-8091-0507-1	Bar – Supporting
3388-2	26-1003-7957-2	Screw – Soc Hd Hex Hd, M6 x 16
3388-3	26-1000-0010-3	Washer – Flat M6
3388-4	78-8076-5430-2	Frame – R/H
3388-5	78-8076-5431-0	Frame – L/H
3388-6	26-1003-5842-8	Screw – Hex Hd, M8 x 20
3388-7	78-8017-9318-9	Washer – Plain 8 mm
3388-8	26-1000-1347-8	Nut – Hex, M8
3388-9	78-8070-1574-4	Slide – Front, Right
3388-10	78-8070-1575-1	Slide – Front, Left
3388-11	78-8076-5465-8	Spacer – Front Slide
3388-12	78-8070-1576-9	Slide – Rear, Right
3388-13	78-8070-1577-7	Slide – Rear, Left
3388-14	78-8076-5466-6	Spacer
3388-15	78-8076-5467-4	Spacer – Head Straight
3388-16	78-8076-5468-2	Stud – Head Support
3388-17	78-8076-5469-0	Roller – 32 x 55
3388-18	26-1005-5316-8	Screw – Flat Hd Hex Dr, M5 x 16
3388-19	78-8070-1555-3	Block – Upper Head
3388-20	78-8076-4517-7	End Cap – 22 x 1
3388-21	78-8076-5470-8	Cover – Front, Upper
3388-22	78-8076-4500-3	Stud – Mounting
3388-23	78-8076-5471-6	Cover – Lower

# 800a3 Adjustable Case Sealer

1-2

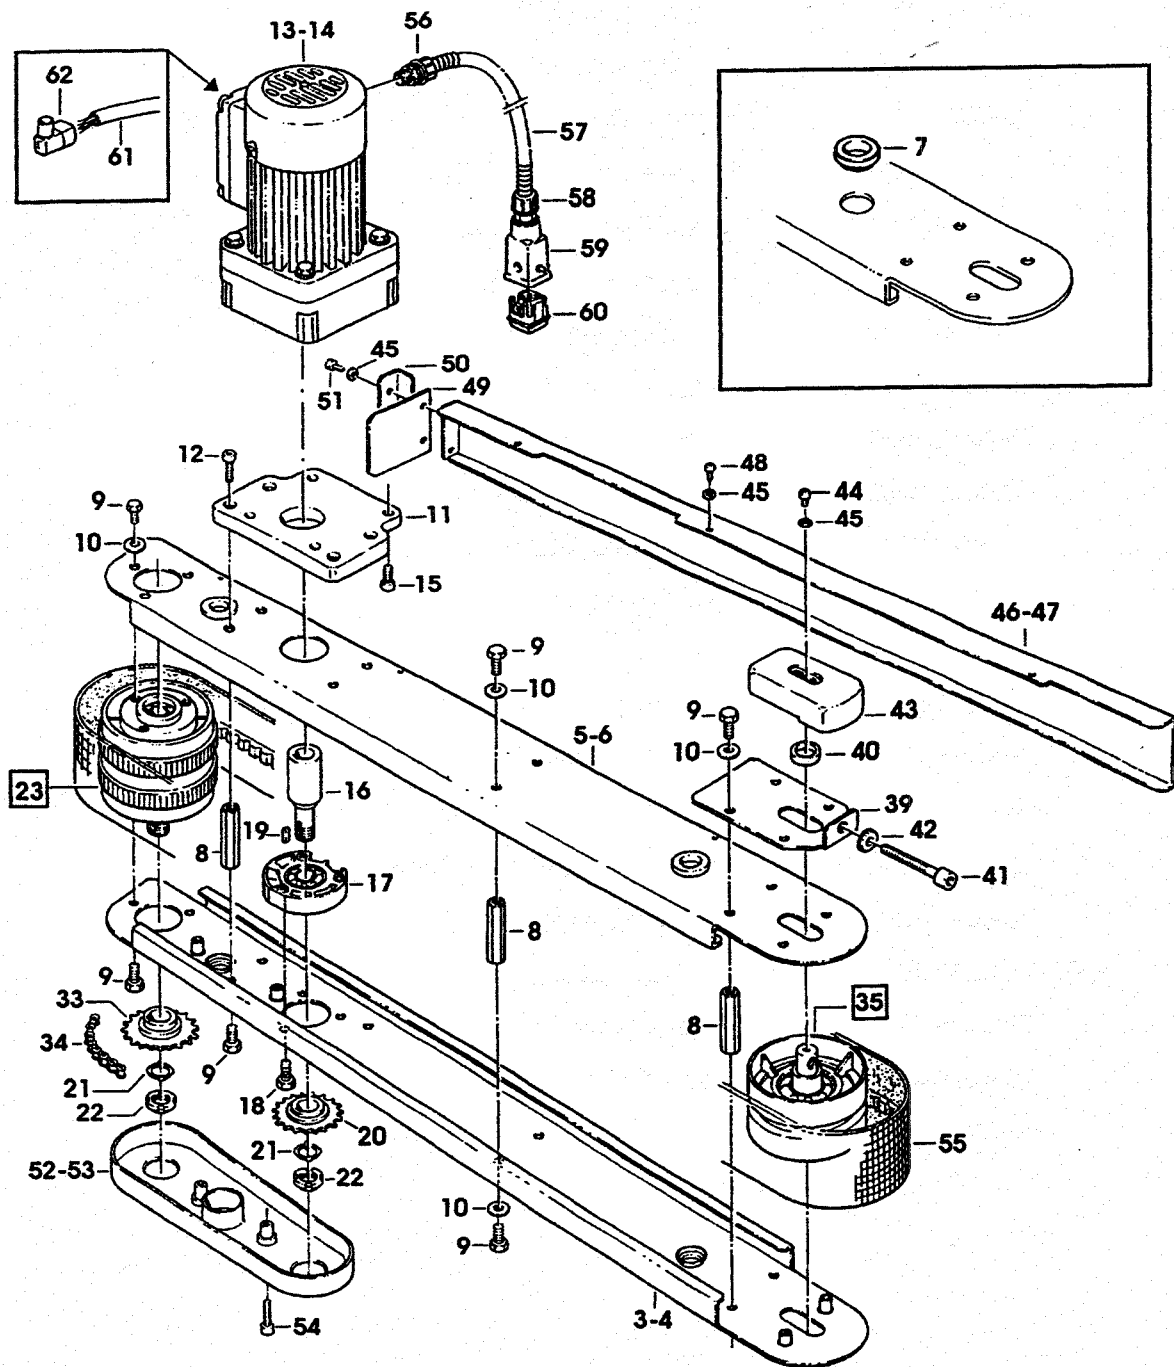


Figure 4759/1 of 2

**Figure 4759** (page 1 of 2)

Ref. No.	3M Part No.	Description
4759-1	78-8094-6103-7	Drive Assembly – R/H W/O Motor
	78-8098-8958-3	Drive Assembly – R/H, With Motor
4759-2	78-8094-6104-5	Drive Assembly – L/H W/O Motor
	78-8098-8959-1	Drive Assembly – L/H, With Motor
4759-3	78-8094-6105-2	Guide – Lower, R/H
4759-4	78-8094-6106-0	Guide – Lower, L/H
4759-5	78-8094-6107-8	Guide – Upper, R/H
4759-6	78-8094-6108-6	Guide – Upper, L/H
4759-7	78-8091-0500-6	Bushing – Side Drive
4759-8	78-8055-0661-1	Spacer
4759-9	26-1003-5828-7	Screw – Hex Hd, M6 x 12
4759-10	26-1000-0010-3	Washer – Flat M6
4759-11	78-8094-6109-4	Support – Gearmotor
4759-12	78-8010-7211-3	Screw – Soc Hd, M6 x 25
4759-13	78-8070-1522-3	Gearmotor – 115V, 60 Hz
4759-14	26-1011-8828-7	Capacitor – 115V Gearmotor
4759-15	78-8070-1523-1	Screw – 1/4 - 28 x 1/2 SHCS
4759-16	78-8094-6174-8	Extension – Gearmotor
4759-17	78-8076-5439-3	Flange Assembly
4759-18	78-8060-7886-7	Screw – Hex Hd, M6 x 16, Special
4759-19	78-8046-8135-7	Key – 5 x 5, 12 mm
4759-20	78-8091-0758-0	Sprocket – 3/8 Inch, Z=14
4759-21	78-8057-5834-5	Tab Washer
4759-22	78-8057-5835-2	Centering Washer
4759-23	78-8076-5440-1	Pulley Assembly – Drive
4759-24	78-8091-0716-8	Roller – Drive
4759-25	78-8052-6713-1	Ring – Polyurethane
4759-26	78-8055-0669-4	Shaft – Pulley Keyed
4759-27	78-8057-5739-6	Key – M5 x 5 x 30 mm
4759-28	78-8055-0668-6	Washer – 15/26 x 1
4759-29	78-8091-0382-9	Belleville Washer – /16
4759-30	78-8076-5442-7	Flange Assembly
4759-31	26-0001-5862-1	Screw – Flat Hd Soc, M5 x 12
4759-32	78-8054-8877-8	Washer – 5,5/20 x 4
4759-33	78-8091-0759-8	Sprocket – 3/8 Inch Z=23
4759-34	78-8076-4933-6	Chain – 3/8 Inch Pitch, 52 Pitch



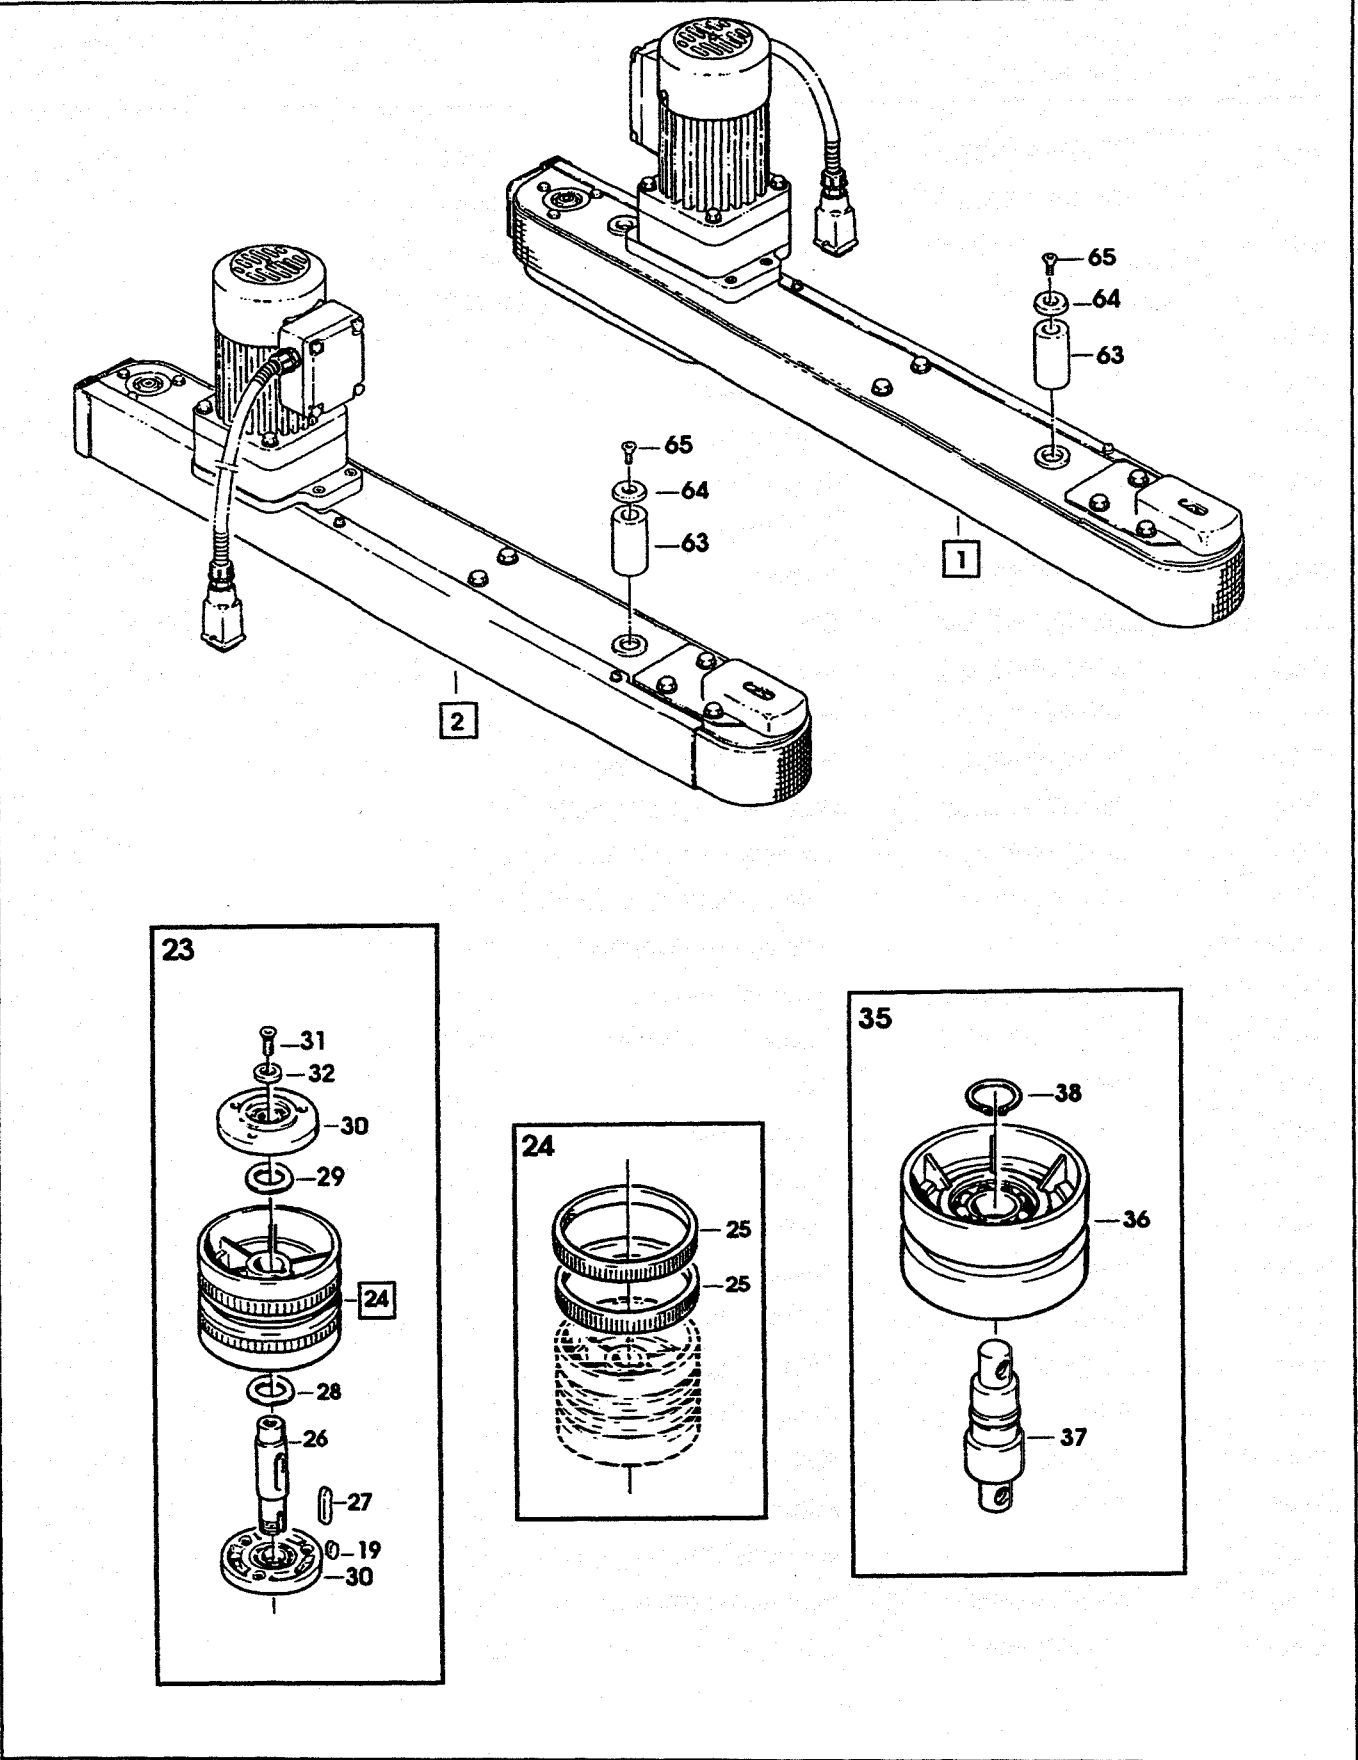


Figure 4759/2 of 2

**Figure 4759** (page 2 of 2)

Ref. No.	3M Part No.	Description
4759-35	78-8076-5443-5	Pulley Assembly – Idler
4759-36	78-8055-0660-3	Roller – Idler
4759-37	78-8076-5444-3	Shaft – Idler Pulley
4759-38	12-7997-0272-0	E-Ring – M-25
4759-39	78-8076-5445-0	Tensioning – Belt
4759-40	78-8076-5446-8	Washer – Shaft
4759-41	78-8076-5447-6	Screw – Special, M8 x 70
4759-42	78-8017-9318-9	Washer – Plain 8 mm
4759-43	78-8076-5448-4	Cover – Belt Tensioner
4759-44	78-8055-0850-0	Screw – Cap, M4 x 6
4759-45	78-8005-5740-3	Washer – Plain 4 mm
4759-46	78-8094-6110-2	Cover – Drive, R/H
4759-47	78-8094-6111-0	Cover – Drive, L/H
4759-48	26-1002-5753-9	Screw – Self-Tapping
4759-49	78-8055-0650-4	Guard – Belt
4759-50	78-8076-5451-8	Guard – Belt
4759-51	26-1002-4955-1	Screw – Self-Tap 8P x 13
4759-52	78-8091-0764-8	Cover – Chain, Right
4759-53	78-8091-0765-5	Cover – Chain, Left
4759-54	78-8010-7165-1	Screw – Flat Hd Soc, M5 x 25
4759-55	78-8076-5452-6	Belt – Box Drive
4759-56	78-8060-7631-7	Connector – 3/8 Inch
4759-57	78-8076-5197-7	Sleeving – /12, 800 mm
4759-58	78-8060-7626-7	Connector – PG 11/12
4759-59	78-8060-7877-6	Plug Housing – Vertical
4759-60	78-8060-7875-0	Plug Male
4759-61	78-8060-8053-3	Wire – 3-Pole, 5 Meters Length
4759-62	78-8076-4602-7	Terminal
4759-63	78-8076-5434-4	Roller
4759-64	78-8054-8577-4	Washer – Special
4759-65	26-1001-9843-6	Screw – Flat Soc Hd, M6 x 16

## 800a3 Adjustable Case Sealer

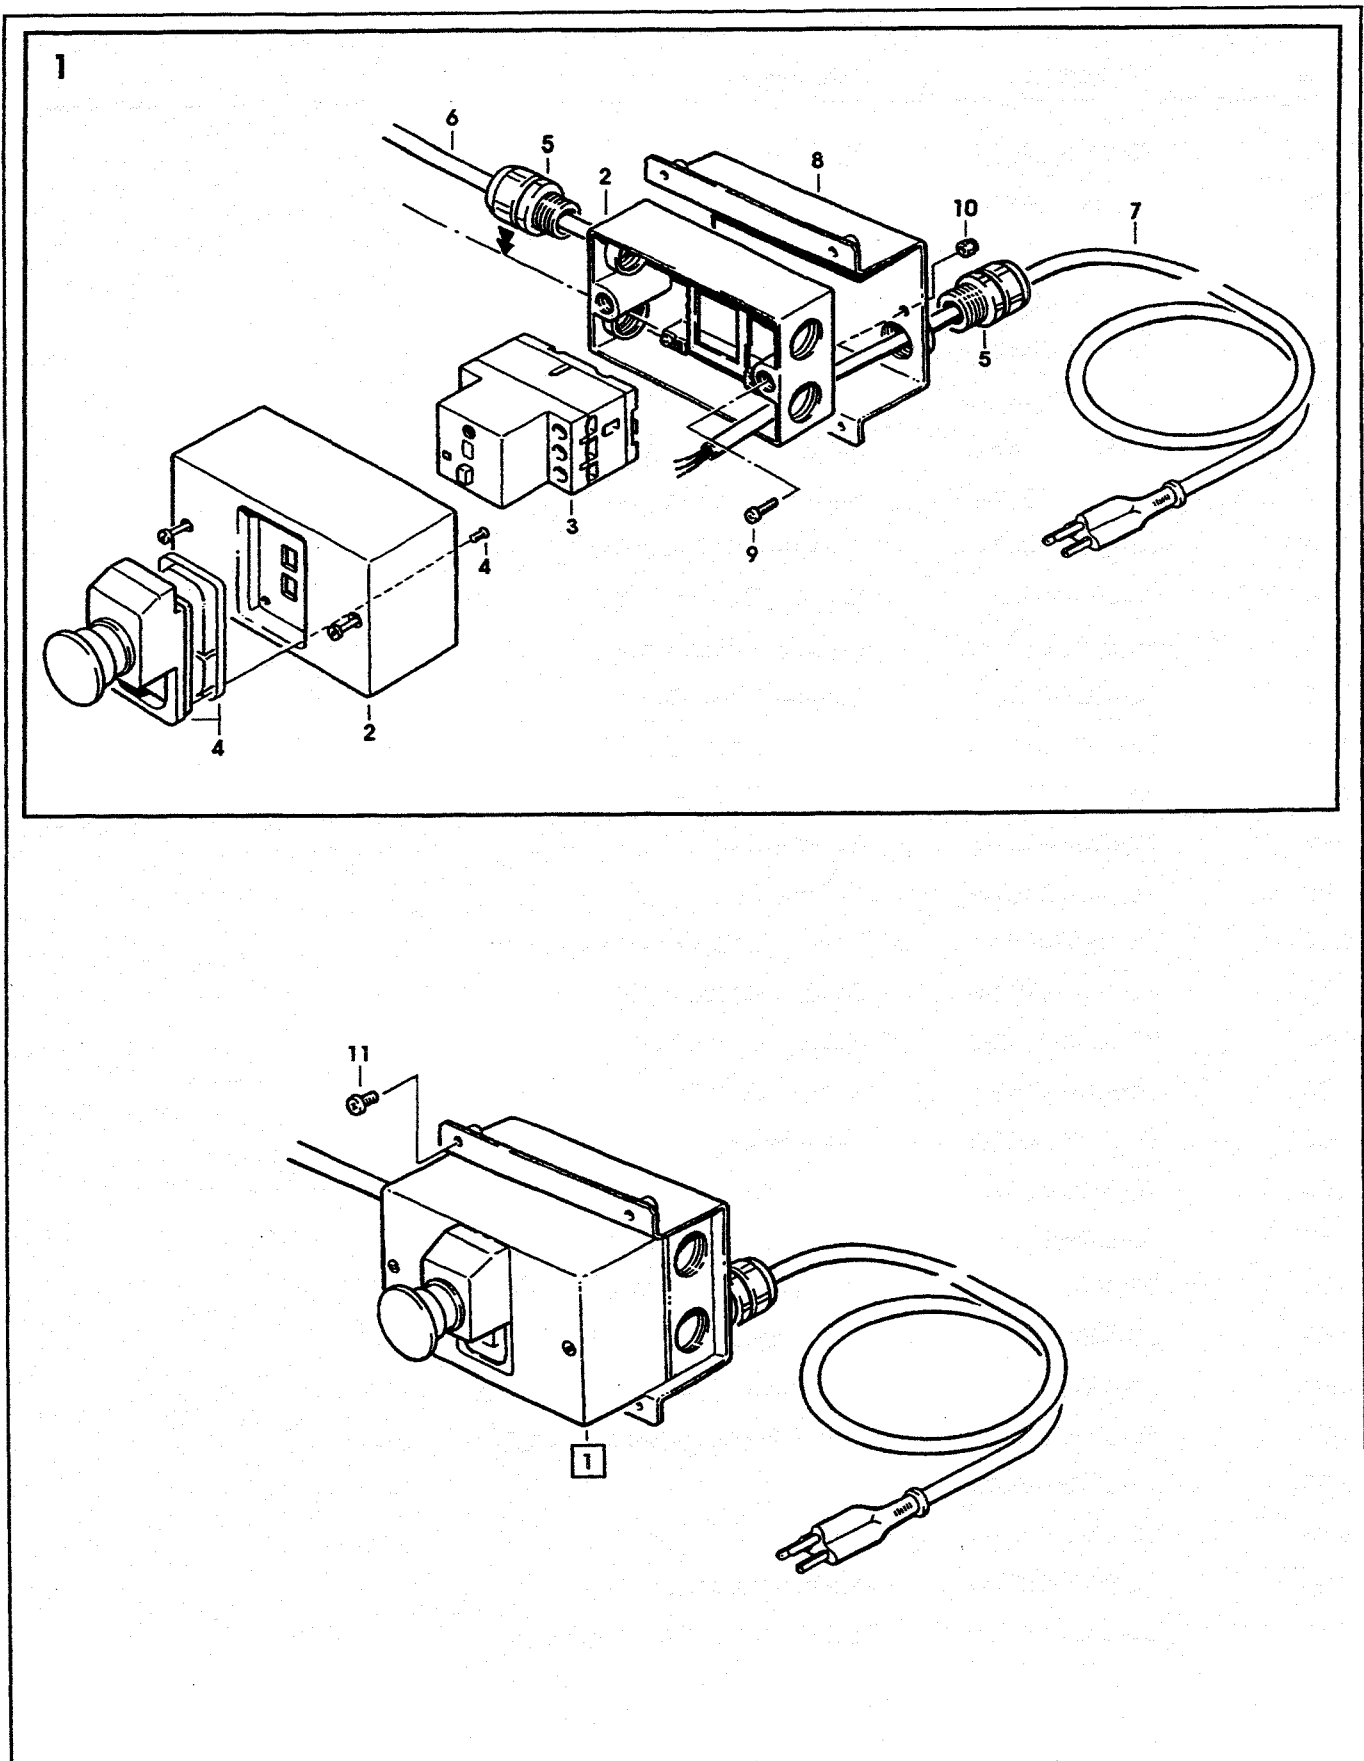


Figure 4760

## Figure 4760

Ref. No.	3M Part No.	Description
4760-1	78-8094-6112-8	On/Off Switch Assembly – 1.6 - 2.5 A.
4760-2	78-8076-4879-1	Box – On/Off Switch
4760-3	78-8076-5267-8	Switch – On/Off, 1.6 - 2.5 A.
4760-4	78-8076-5455-9	E-Stop Button
4760-5	78-8057-5807-1	Cord Grip
4760-6	78-8060-8053-3	Wire – 3-Pole, 5 Meters Length
4760-7	26-1009-8724-2	Power Cord W/Plug – Type SO
4760-8	78-8076-5456-7	Support – Switch
4760-9	26-1003-5707-3	Screw – Phillips Dr, M4 x 16
4760-10	26-1003-6914-4	Nut – Plastic Inset, M4
4760-11	78-8060-8087-1	Screw – M5 x 10

# 800a3 Adjustable Case Sealer

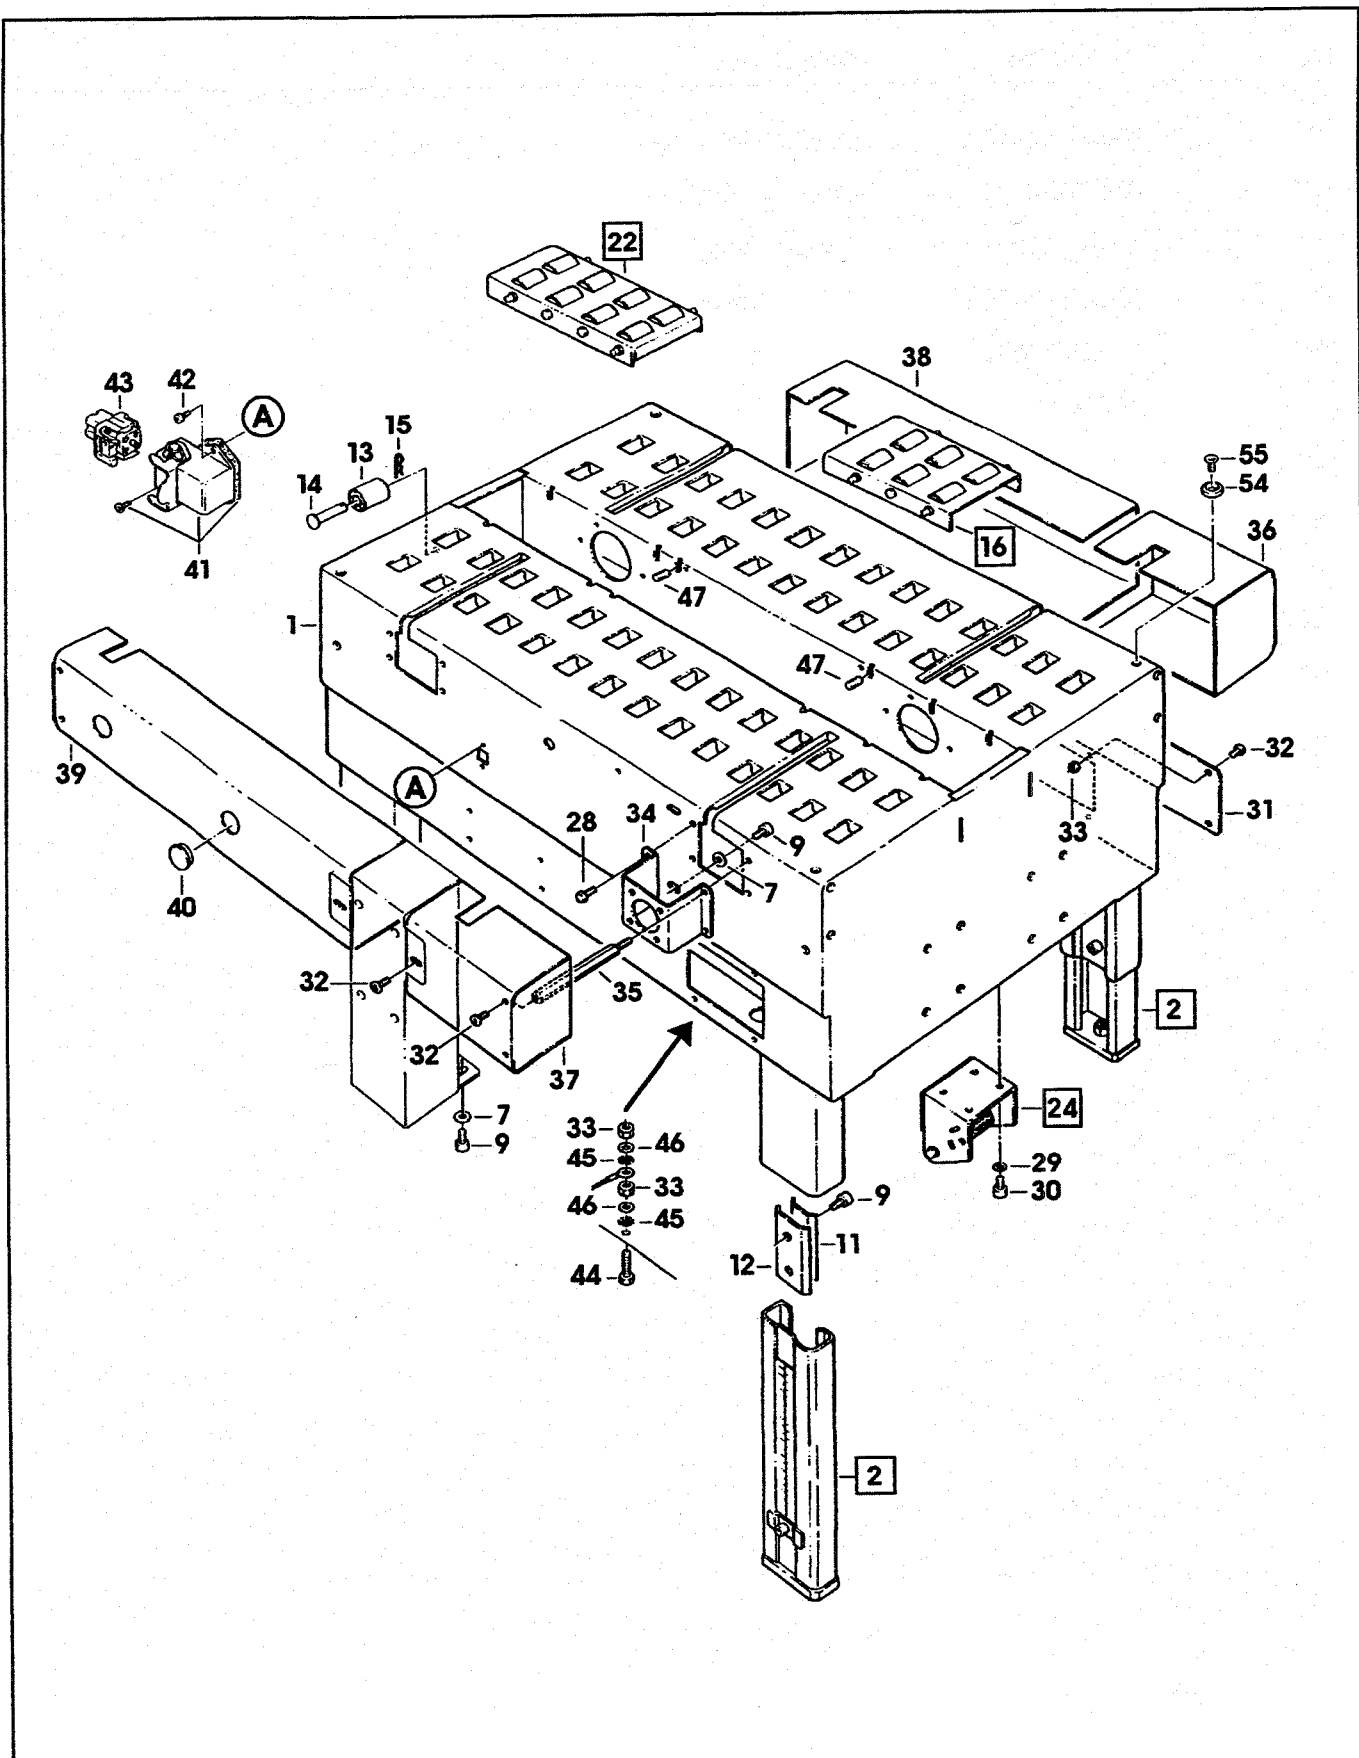


Figure 4761/1 of 2

**Figure 4761** (page 1 of 2)

Ref. No.	3M Part No.	Description
4761-1	78-8076-5380-9	Bed – Conveyor
4761-2	78-8076-5381-7	Leg Assembly – Inner, W/Stop
4761-3	78-8076-5382-5	Leg – Inner
4761-4	78-8060-8480-8	Pad – Foot
4761-5	78-8055-0867-4	Screw – Hex Hd, M8 x 30
4761-6	78-8017-9313-0	Nut – Self-Locking, M8
4761-7	78-8017-9318-9	Washer – Plain 8 mm
4761-8	78-8076-5383-3	Stop – Leg
4761-9	26-1003-7963-0	Screw – Soc Hd, M8 x 16
4761-10	78-8060-8481-6	Label – Height
4761-11	78-8052-6676-0	Clamp – Outer
4761-12	78-8052-6677-8	Clamp – Inner
4761-13	78-8060-7693-7	Roller – 32 x 38
4761-14	78-8076-5384-1	Shaft – Roller
4761-15	78-8076-5385-8	Spring
4761-16	78-8094-6100-3	Conveyor Assembly – Front
4761-17	78-8076-5387-4	Conveyor – Front
4761-18	78-8091-0780-4	Shaft – Central, Roller
4761-19	78-8091-0781-2	Shaft – Side, Roller
4761-20	78-8060-7852-9	Screw – Hex Hd, M6 x 10, Special
4761-21	78-8076-5389-0	Mounting - Conveyor
4761-22	78-8094-6101-1	Conveyor Assembly – Rear
4761-23	78-8076-5391-6	Conveyor – Rear
4761-24	78-8076-5462-5	Support – Tape Drum
4761-25	78-8076-4758-7	Support – Tape Bracket
4761-26	78-8076-4759-5	Shaft – Roller
4761-27	78-8076-5030-0	Roller – Knurled, 114 mm

# 800a3 Adjustable Case Sealer

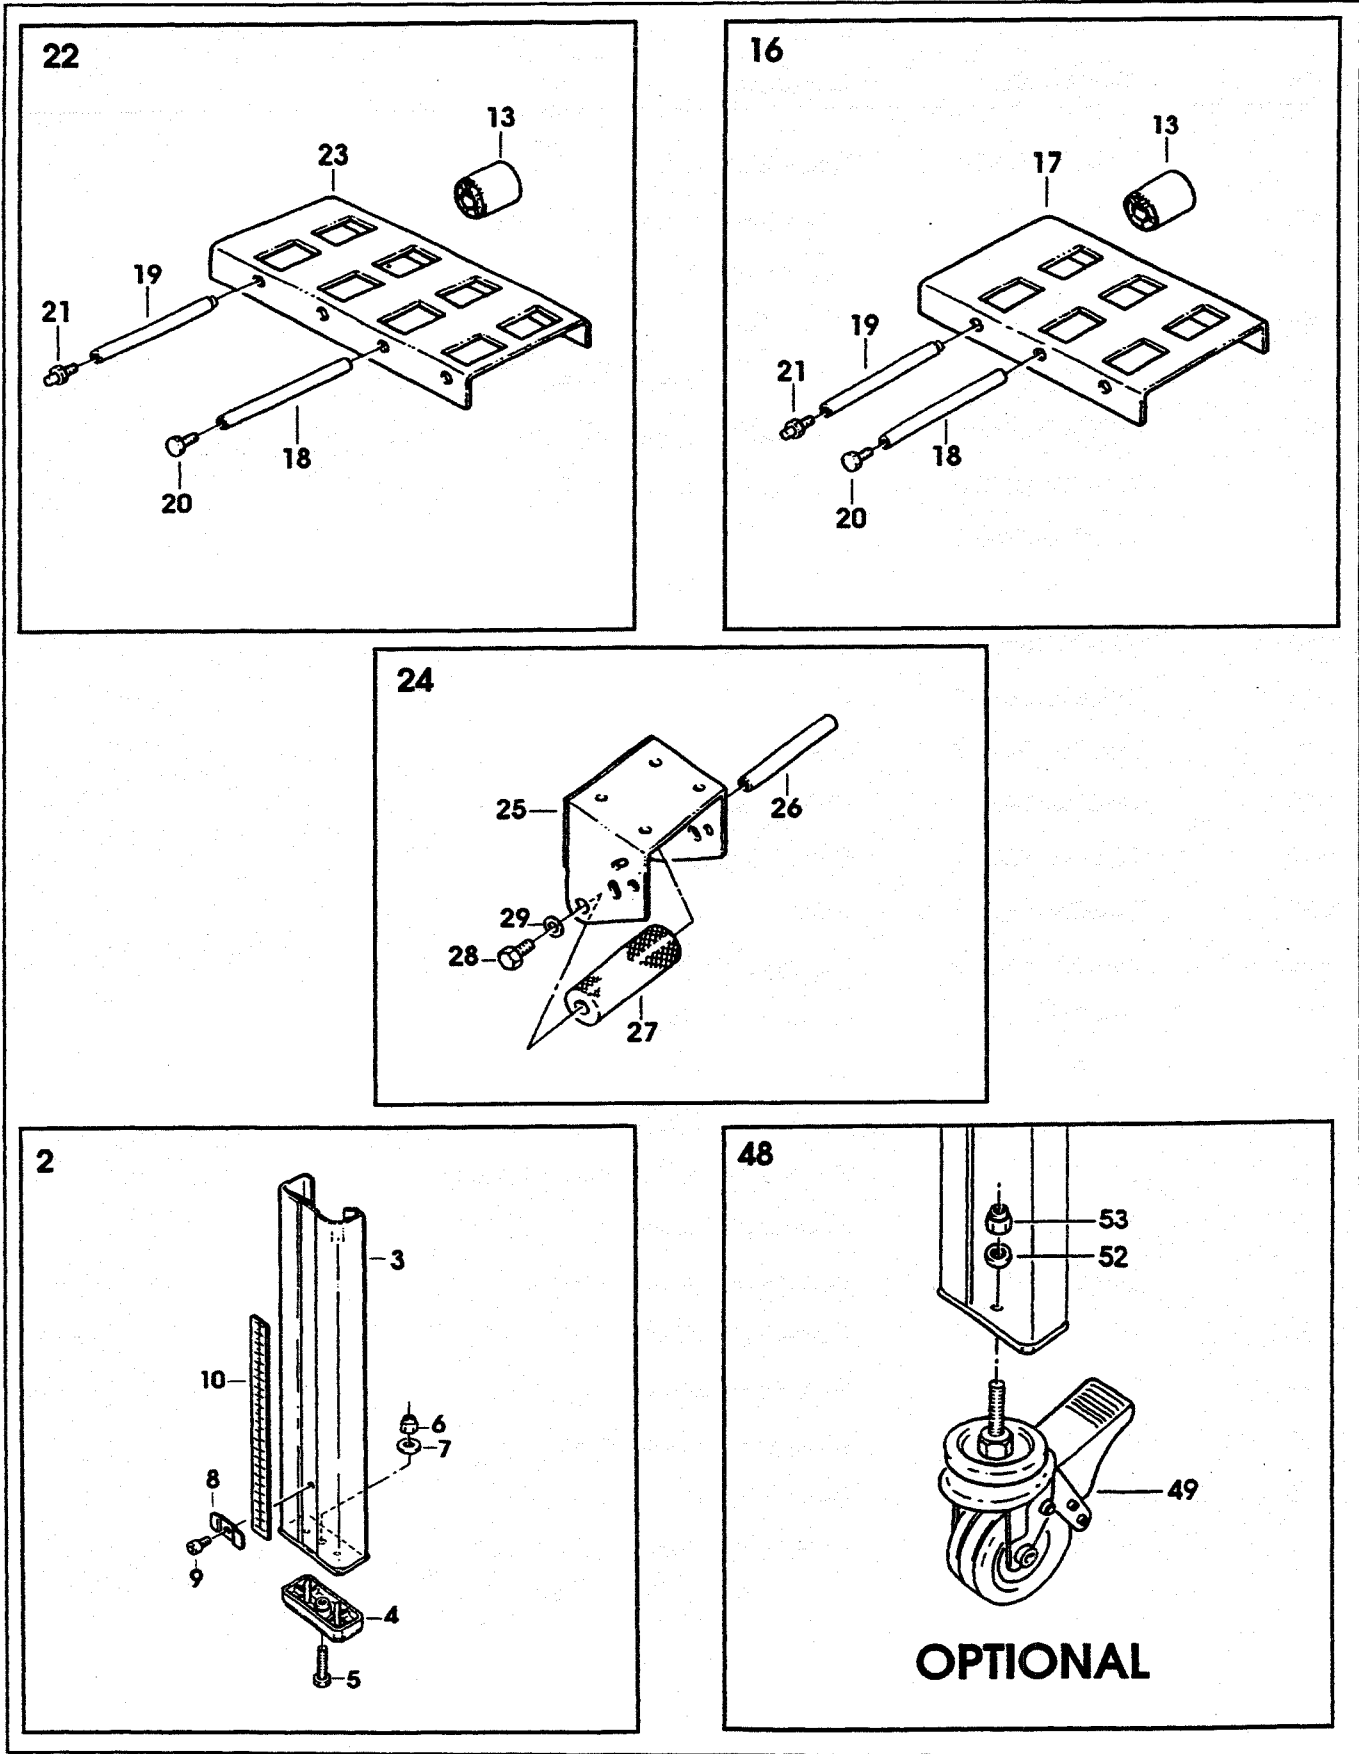


Figure 4761/2 of 2

**Figure 4761** (page 2 of 2)

<b>Ref. No.</b>	<b>3M Part No.</b>	<b>Description</b>
4761-28	78-8032-0375-7	Screw – Hex Hd, M6 x 16
4761-29	26-1000-0010-3	Washer – Flat M6
4761-30	26-1003-7957-2	Screw – Soc Hd Hex Hd, M6 x 16
4761-31	78-8060-8487-3	Cover – Switch
4761-32	78-8060-8087-1	Screw – M5 x 10
4761-33	78-8010-7417-6	Nut – Hex M5
4761-34	78-8076-5393-2	Plate – Tape Bracket Support
4761-35	78-8076-5394-0	Spacer
4761-36	78-8076-5395-7	Cover – Side, Front, R/H
4761-37	78-8076-5396-5	Cover – Side, Front, L/H
4761-38	78-8094-6102-9	Cover – Side, Rear, R/H
4761-39	78-8091-0511-3	Cover - Side, Rear, L/H
4761-40	78-8076-4517-7	End Cap – /22 x 1
4761-41	78-8060-7876-8	Cover Plug – Lateral
4761-42	78-8028-8208-0	Screw – 6P x 9,5
4761-43	78-8060-7873-5	Plug – Female
4761-44	78-8060-8488-1	Screw – Hex Hd, M5 x 20
4761-45	78-8046-8217-3	Washer – Special
4761-46	78-8005-5741-1	Washer – Plain M5
4761-47	78-8076-4500-3	Stud – Mounting
4761-48	78-8098-9076-3	Caster Assembly
4761-49	26-1009-9096-4	Caster – Dual Locking
4761-52	26-1009-9094-9	Washer – Spring, Helical, M12
4761-53	26-1009-9095-6	Nut – M12
4761-54	78-8100-0763-9	Washer – Special, /25
4761-55	78-8057-5716-4	Screw – Flat Hd Soc, M8 x 15



## 800a3 Adjustable Case Sealer


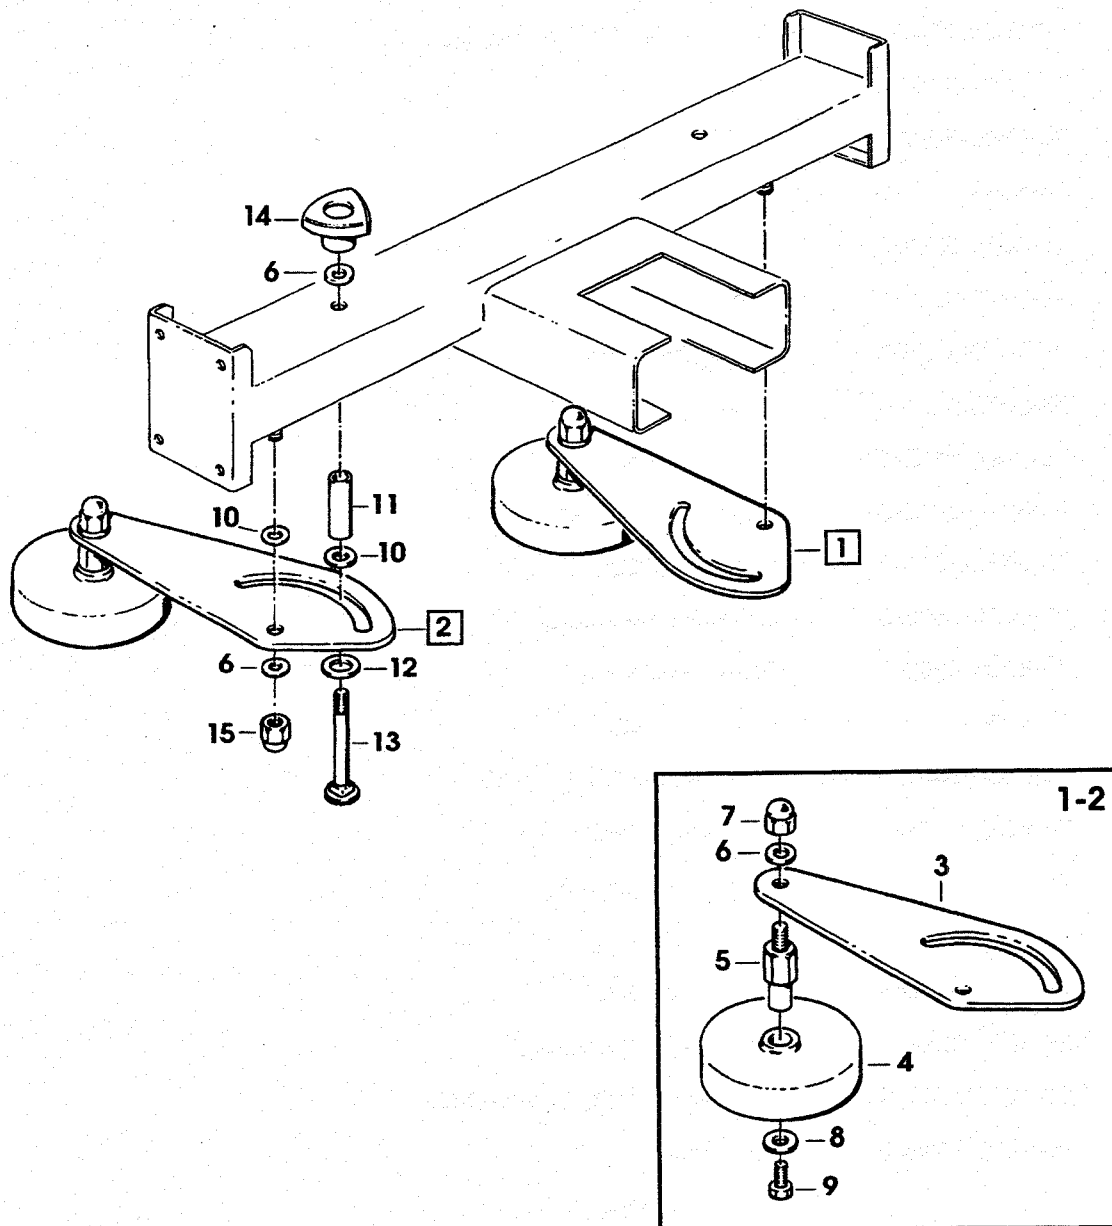


Figure 5350

**Figure 5350**

<b>Ref. No.</b>	<b>3M Part No.</b>	<b>Description</b>
5350-1	78-8100-0876-9	Compression Roller Assembly – R/H
5350-2	78-8100-0877-7	Compression Roller Assembly – L/H
5350-3	78-8070-1559-5	Support – Compression Roller
5350-4	78-8054-8974-3	Pressure Roller
5350-5	78-8070-1560-3	Stud – Roller Mounting
5350-6	78-8052-6566-3	Washer – Friction
5350-7	78-8070-1561-1	Nut – M10
5350-8	26-1004-5507-5	Washer – M8
5350-9	26-1003-5841-0	Screw – M8 x 16
5350-10	78-8017-9074-8	Washer – Nylon 15 mm
5350-11	78-8070-1562-9	Tube – Roller Support
5350-12	12-7991-1752-3	Washer – Plain M14
5350-13	78-8070-1563-7	Screw – M10 x 80
5350-14	78-8070-1549-6	Knob – VTR-B-M10
5350-15	26-1003-6918-5	Nut – Plastic Insert Hex M10

## 800a3 Adjustable Case Sealer

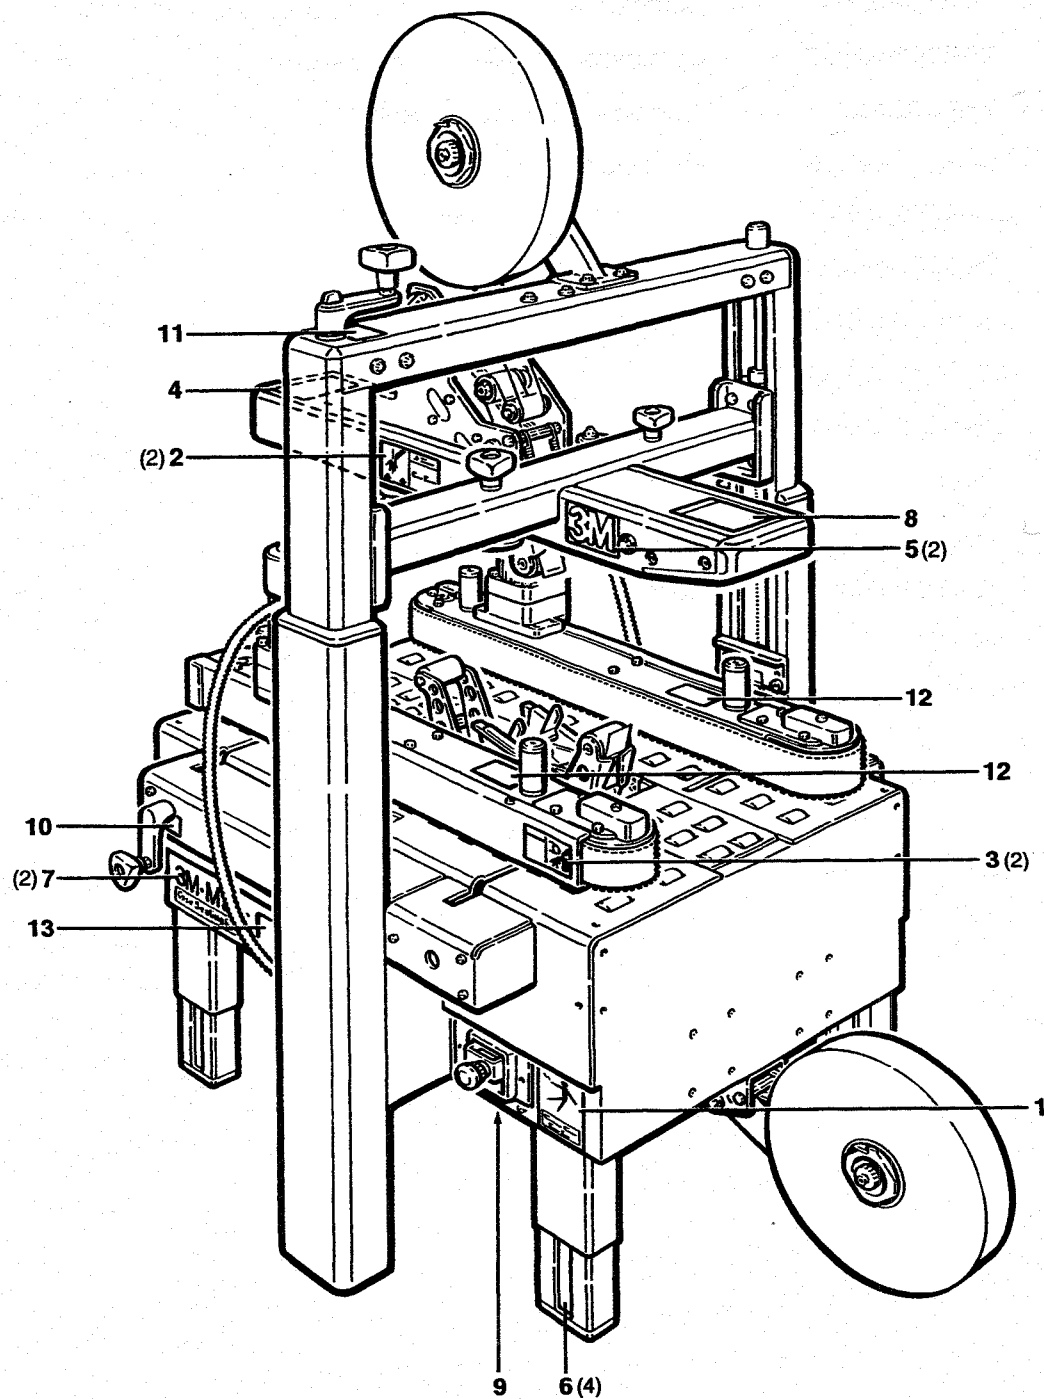

**Safety and Information Labels**

## 800a3 Safety and Information Labels

A label kit, part number 78-8098-9034-2, is available as a stock item. It contains all the safety and information labels used on the case sealer, or labels can be ordered separately from the following list.

Ref. No.	3M Part No.	Description	Qty.
	78-8098-8794-2	Label Kit (Includes items 1 - 13)	
1	78-8070-1329-3	Warning – Hazardous Voltage	1
2	78-8070-1336-8	Warning – Sharp Knife	2
3	78-8070-1331-9	Warning – Keep Hands Away From Moving Belts	2
4	78-8070-1362-4	Caution – Keep Hands Out of This Area	1
5	78-8070-1339-2	Information – 3M Logo	2
6	78-8060-8481-6	Information – Leg Height	4
7	78-8062-4266-1	Information – 3M-Matic	2
8	78-8070-1366-5	Information – Safety Instructions	1
9	78-8068-3852-6	Information – Ground	1
10	78-8098-8955-9	Information – In/Out, Belt Adjustment	1
11	70-8070-1628-8	Information – Up/Down/Lock, Height Adjustment	1
12	78-8070-1629-6	Information – Belt tensioning	2
13	78-8098-8797-5	Nameplate – Type 29400	1

